




# Lenovo IdeaPad 110-15IBR Hard Drive Replacement

This section explains how to replace the hard drive on a Lenovo IdeaPad 110-15IBR laptop.

Written By: Saddam Alsinai

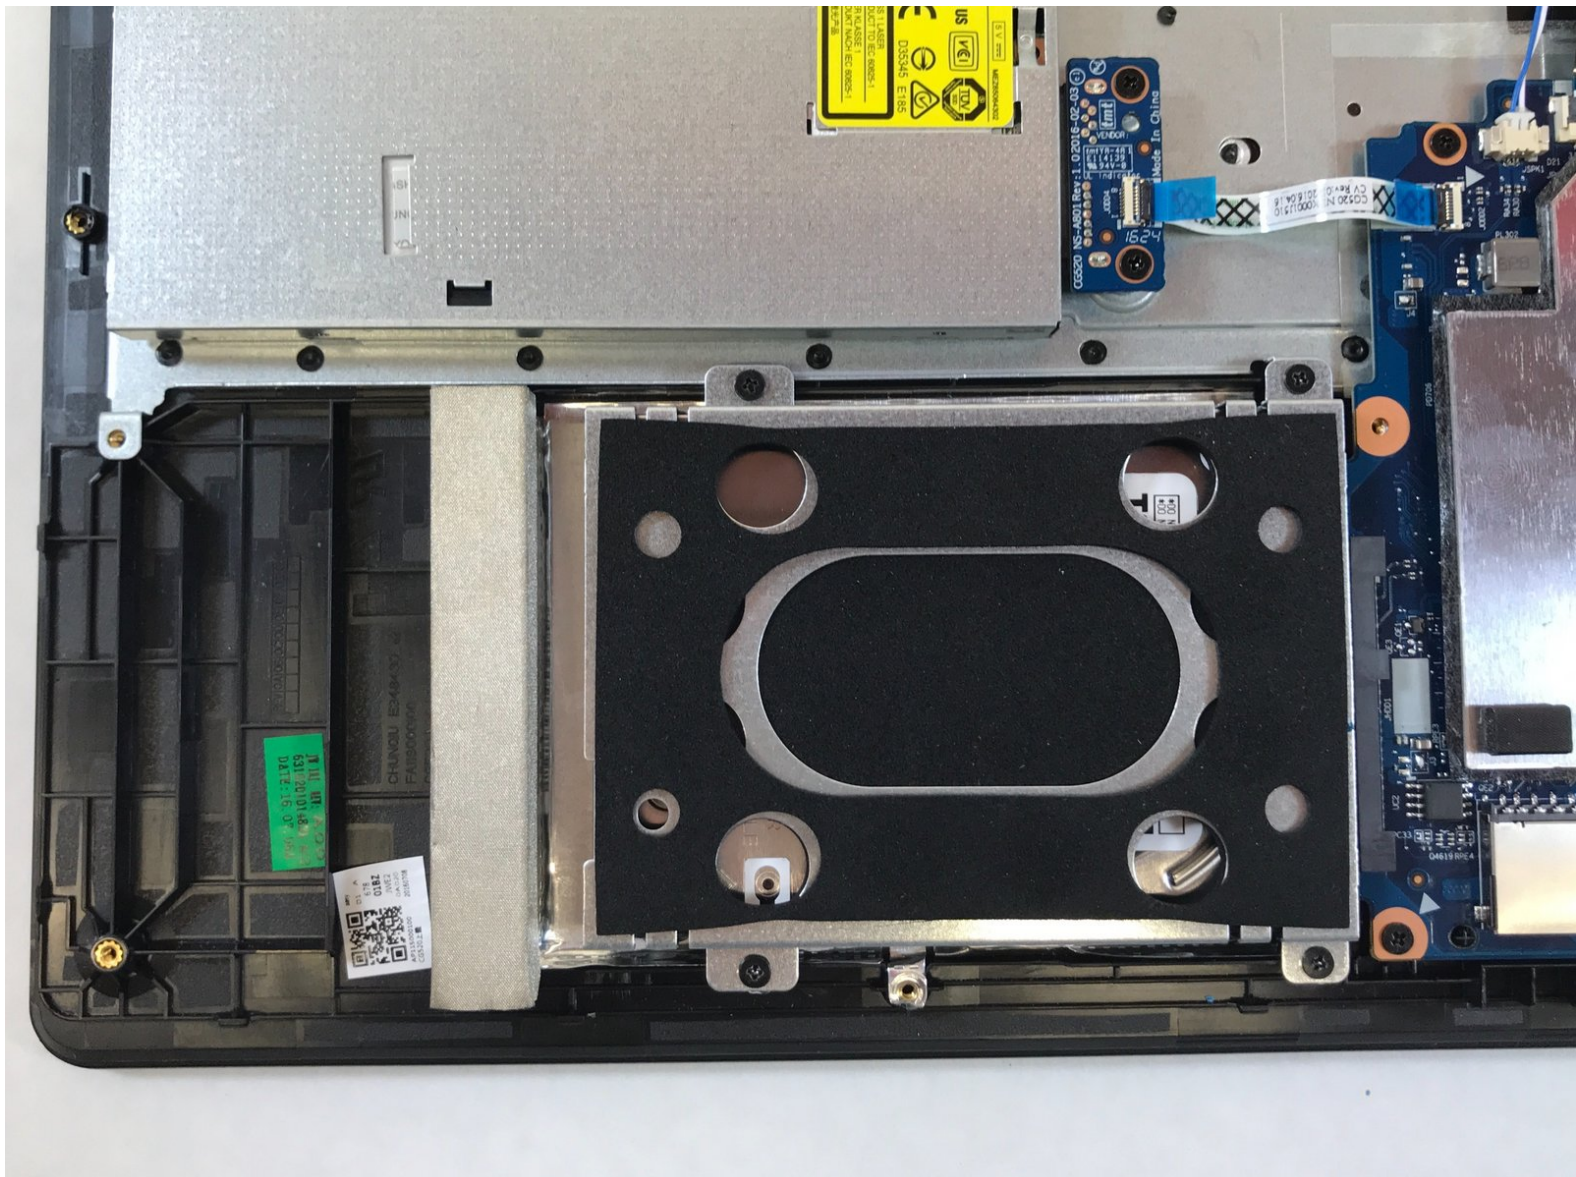

# INTRODUCTION

If your computer won't boot and is having hard disk/hard drive reading errors, follow this guide to replace it. The guide shows how to remove the back from the device, unscrew the battery from the device, remove the drive from the dock, and unscrew the drive housing.



## TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)



## PARTS:

- [250 GB SSD / Upgrade Bundle](#) (1)
- [500 GB SSD / Upgrade Bundle](#) (1)
- [1 TB SSD / Upgrade Bundle](#) (1)
- [2 TB SSD](#) (1)
- [Lenovo IdeaPad 110-15 SSD Bracket](#) (1)

## Step 1 — keyboard

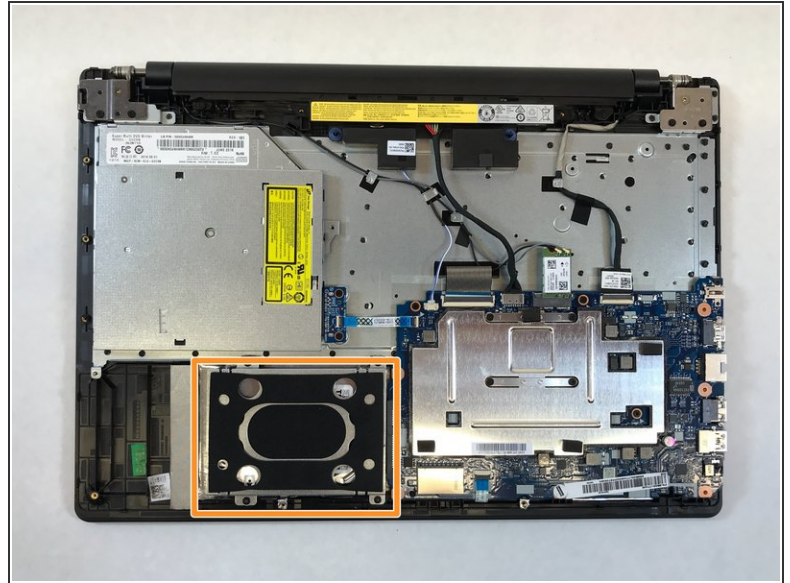


**⚠ Before you proceed, make sure your computer is turned off and it's not connected to any power source. Before removing the drive, make a backup copy of all the information on it if possible. Never remove the drive while the system is operating or in suspend mode.**

- Place laptop with the bottom facing up. Using a Philip #1 screwdriver unscrew all 13 screws. Gently pry the back out using a plastic opening tool, starting from one of the corners.



## Step 2

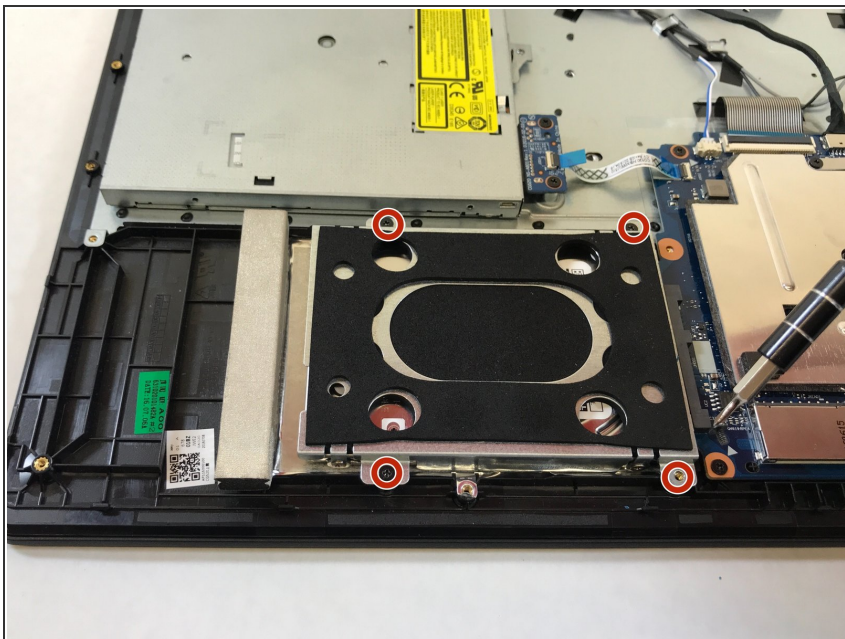

- Using a Phillips #1 screwdriver, remove the four (5mm) screws holding the hard drive in place.



## Step 3



**⚠ Do not lift hard drive straight up otherwise you might risk breaking the connection port.**

- Gently slide the hard drive away and out of the connection port.

## Step 4

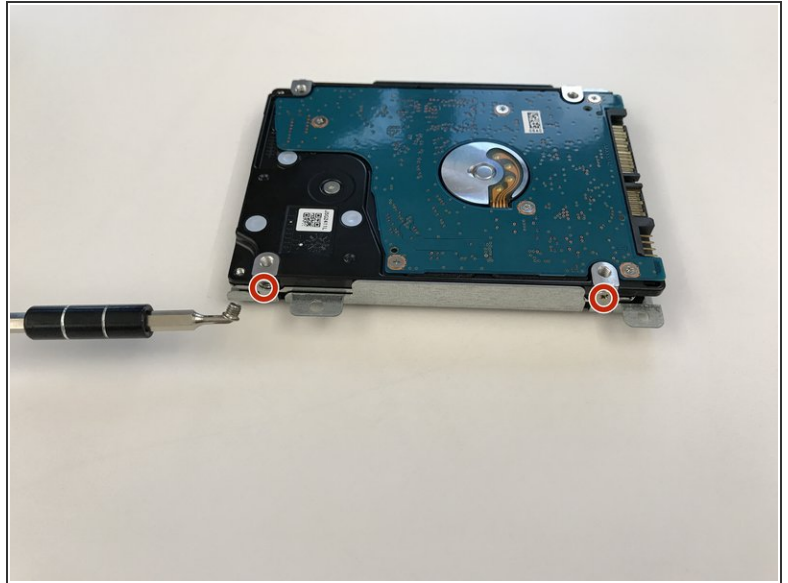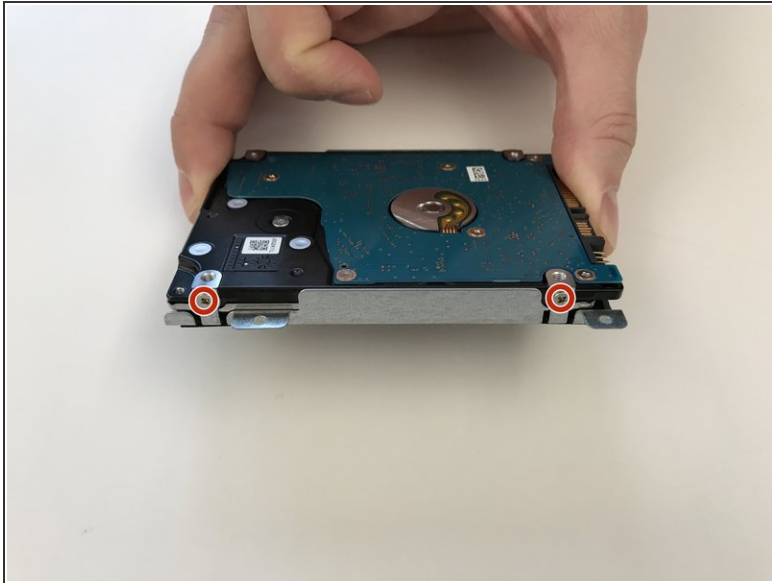

- Using a Philip #1 screwdriver remove 2 screws from each side, (removing 4 screws in total) holding the hard drive into the housing.

## Step 5



- Remove hard drive from housing.

To reassemble your device, follow these instructions in reverse order with your new replacement hard drive.