

# **Dell Inspiron N4010 Screen Replacement**

A guide to replacing the screen and screen assembly on your laptop

Written By: Jonathan Sellier



#### **INTRODUCTION**

Replacing the screen is a lengthy process that can take a while. It is important you are gentle with the screen as it can be damaged quite easily. Additionally, the screen should be disposed of according to local laws.



## **TOOLS:**

- iFixit Opening Tools (1)
- Phillips #0 Screwdriver (1)



#### **PARTS:**

• High Definition LCD Screen - 14" (1)

## Step 1 — Screen







Use a plastic opening tool to remove the screen bezel.

## Step 2








• Using the #0 Philips head, unscrew the screen bracket from the base of the laptop.

## Step 3






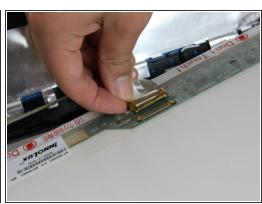

- Remove the plastic seal located on the back of the screen to expose the ribbon connector.
- Unplug the ribbon cable from the screen.
- Be careful when unplugging the cable. Make sure you peel the tape all the way back before disconnecting.

## Step 4

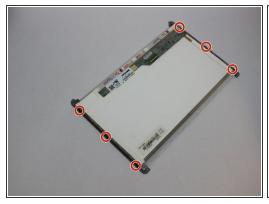





- Use the #0 Philips head to remove the six screws on either sides of the screen frame.
- Remove the metal frame from the screen.

To reassemble your device, follow these instructions in reverse order.