


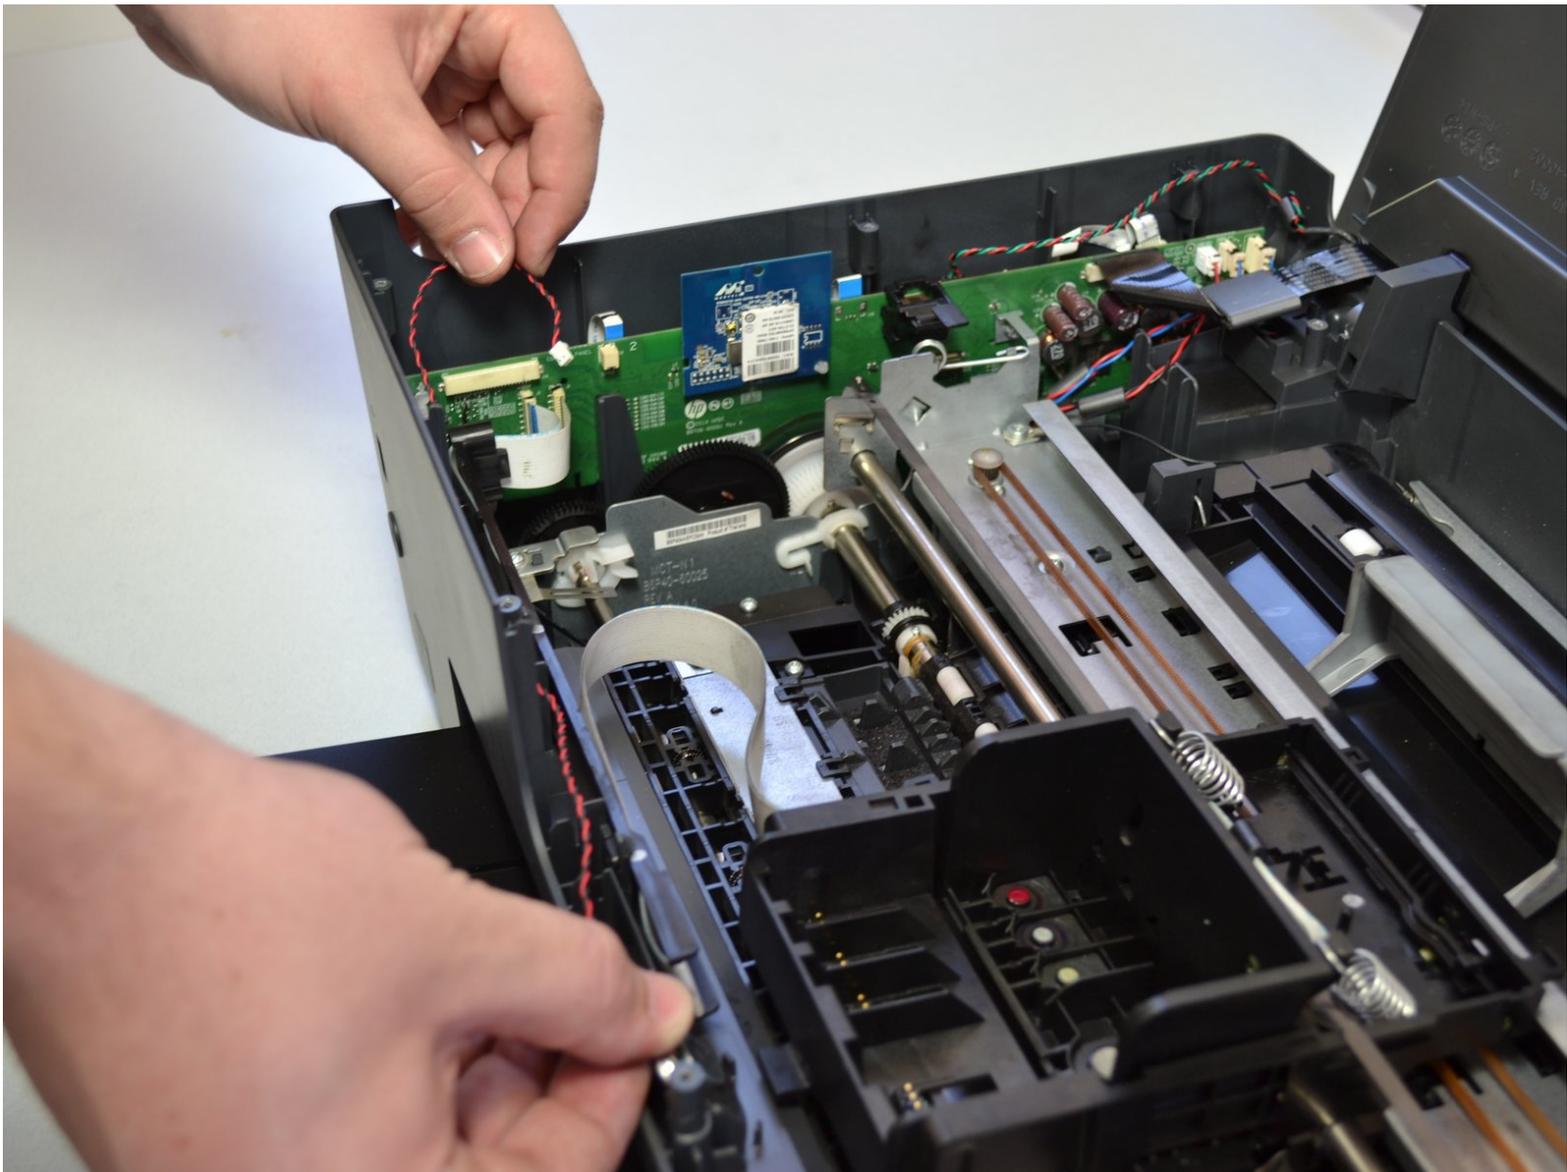

HP Officejet Pro 6835 Speaker Replacement

This guide will show how to remove the speaker located at the front of the printer

Written By: David J



INTRODUCTION

After consistent use the printer speaker can stop working. This guide will go over how to change out the speaker at the front of the printer.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T9 Torx Screwdriver](#) (1)
-

Step 1 — HP Officejet Pro 6835 Cover Disassembly



- Open the main lid as far as it will go.
- Use a plastic opening tool to gently pry off the hinge on the right side by pushing it to the left and off the hook.
- Open the lid further.


Step 2



- Use a T9 torx screwdriver to remove a total of ten (10) 12mm screws from the main cover by turning the screwdriver counterclockwise.

i The two screws above the screen assembly are deep so you may need a long screwdriver.



Step 3

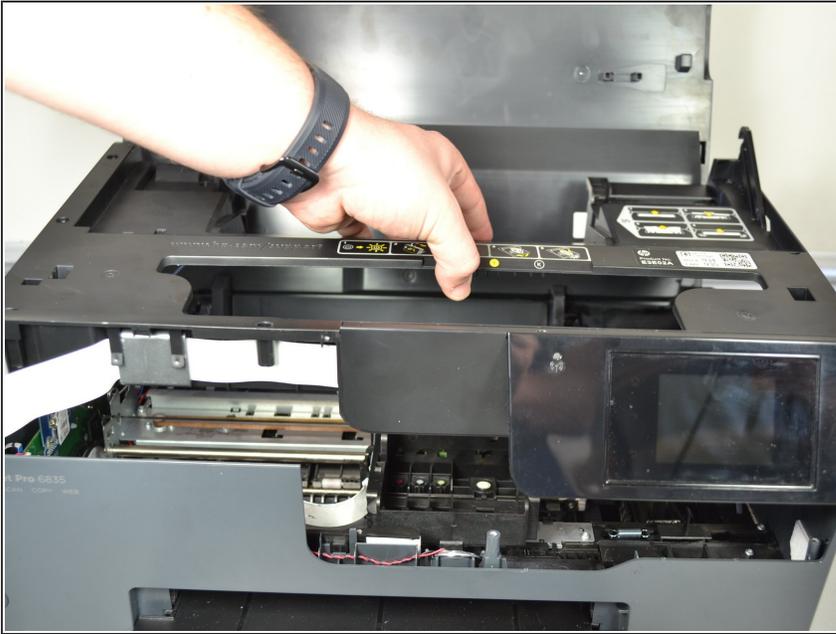

- Grab the main cover and lift it up slightly.


 Do not pull too hard—there is a cable connecting the cover to the printer.

Step 4

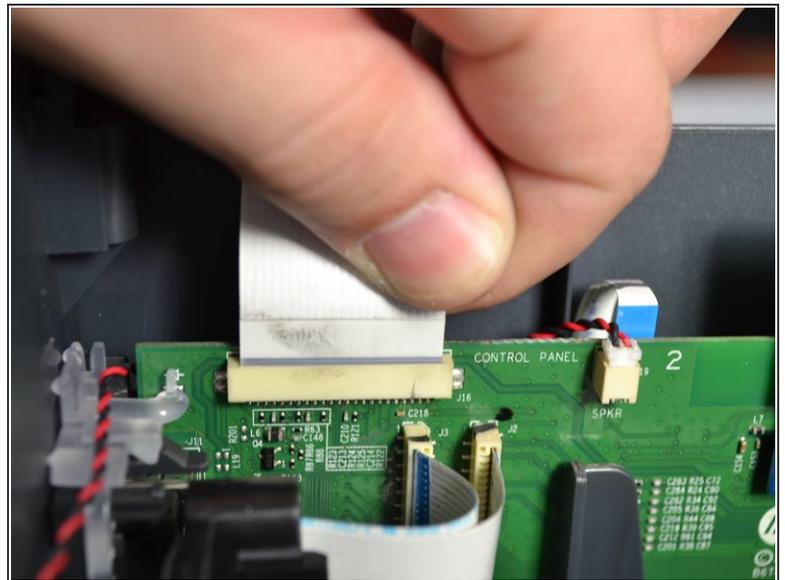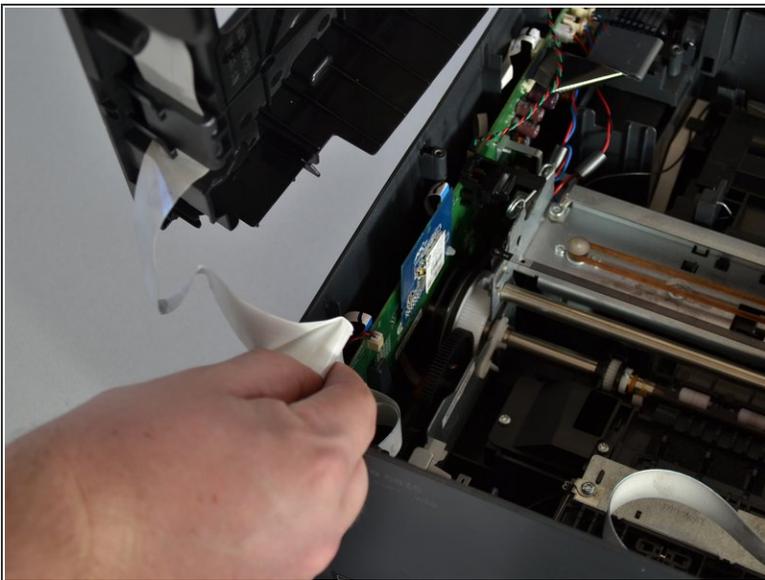

- Grab the base of the white ribbon cable connecting the cover to the base of the printer and pull it out.


Step 5 — Speaker

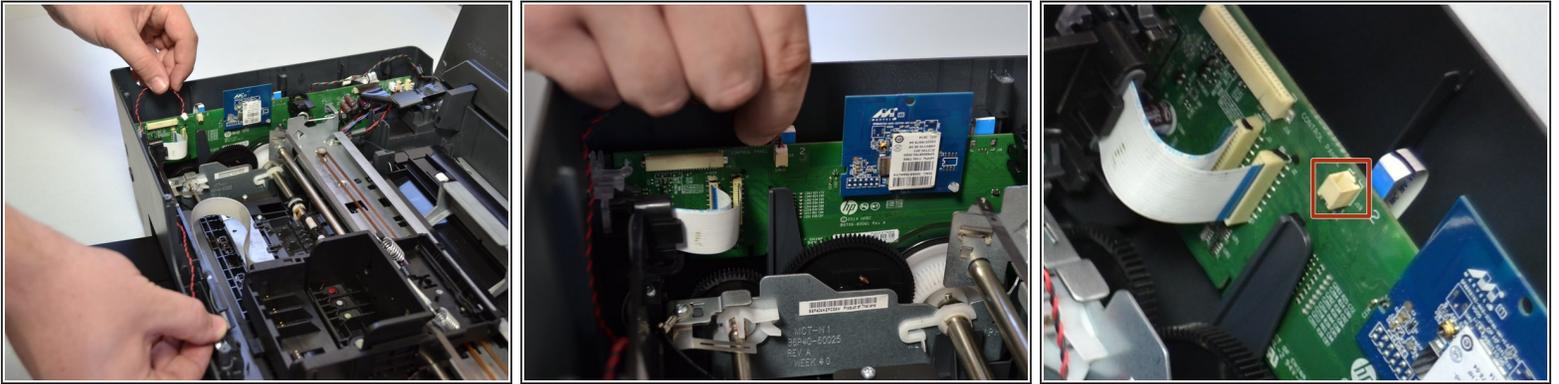

- Grab the intertwined red and black wires. Gently pull up and disconnect the wires from the motherboard.

⚠ Be careful to remove the wires from the socket, NOT the socket from the board.

Step 6

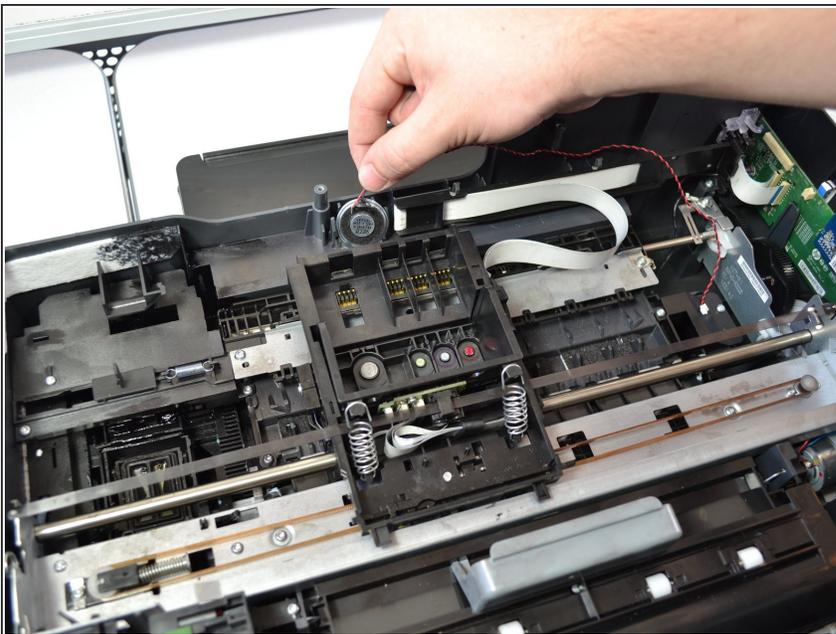

- Carefully slide the speaker out of the printer.

To reassemble your device, follow these instructions in reverse order.