


# Insignia 6-Quart Pressure Cooker Circuit Board Replacement

How to remove the circuit board and power cord.

Written By: Savannah Webb

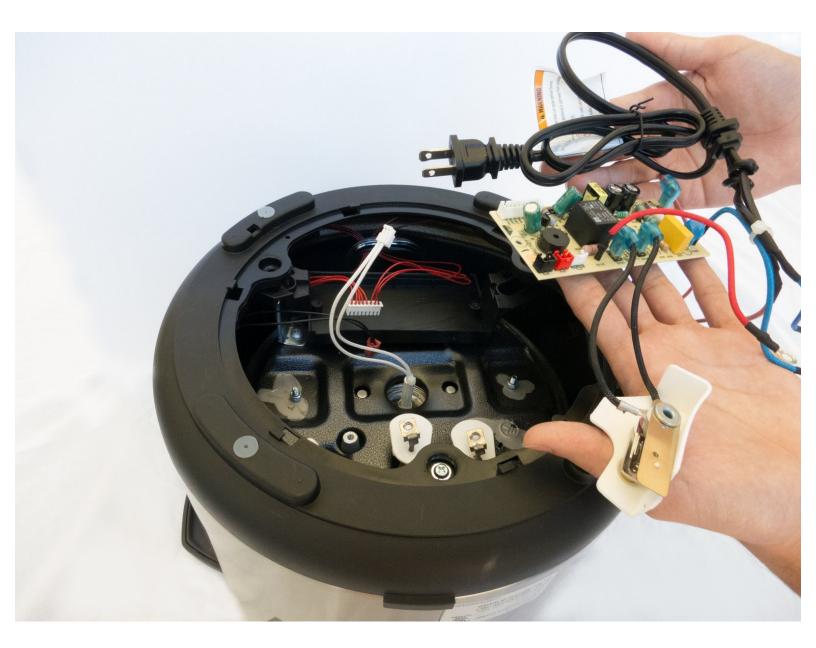

# INTRODUCTION

Circuit boards may require replacement after consistent use. This guide will show how to remove the circuit board.

## **TOOLS:**

- Phillips #2 Screwdriver (1)
- JIS #1 (1)

۶

#### Step 1 — Circuit Board and Power Cord




• Use a Phillips head #2 screwdriver to remove the 6mm screw.

## Step 2



- Twist the light grey plastic until the holes align with the blockers.
- Remove the light grey plastic cover.

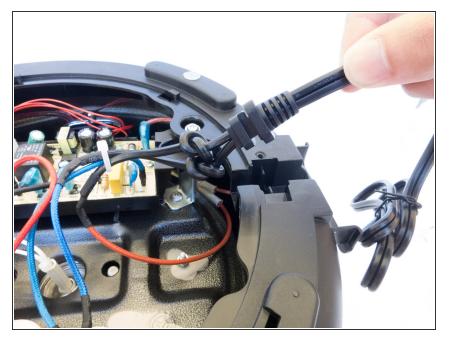

• Remove the power cord from the slot it is inserted in.

# Step 4




 Use a Phillips head #2 screwdriver to remove the 22mm screw connected to the black wire.




 Use a Phillips head #2 screwdriver to remove the 8mm screw and it's washer from the red wire.

## Step 6

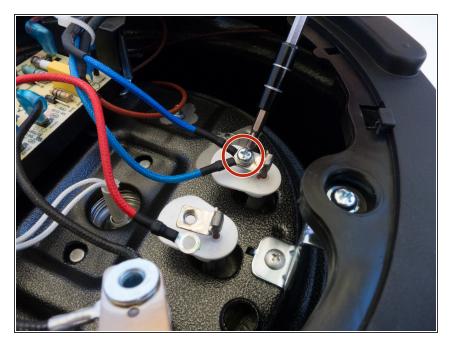


 Use a Phillips head #2 screwdriver to remove the 8mm screw and it's washer from the blue wire.

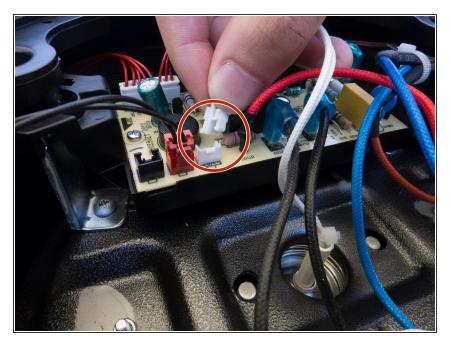

- Pinch the small white component connected to the circuit board.
- Once pinched, wiggle this component until it is disconnected.

#### Step 8

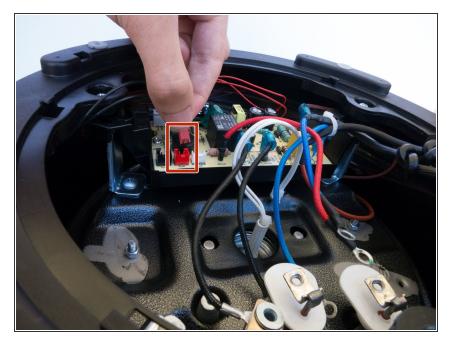


- Pinch the red component connected to the circuit board.
- Once pinched, wiggle this component until it is disconnected.




 Wiggle the wide white component until it is removed from the circuit board.

## Step 10

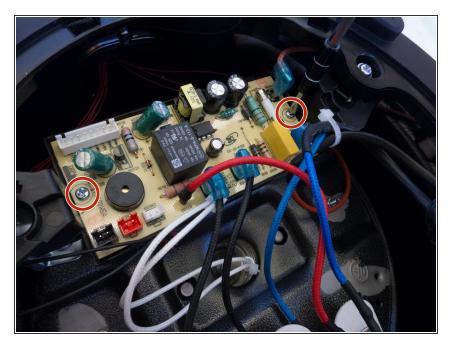

 Use a J1 head screwdriver to remove the 8mm screws from both sides of the circuit board.

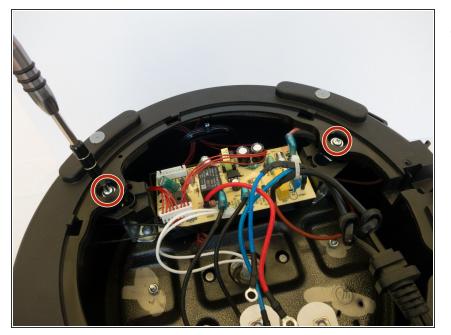


 Use a Phillips head #2 screwdriver to remove both 15mm screws from either side of the circuit board, indicated in the picture.

#### Step 12




- Position the pressure cooker so that the circuit board is farther from you then the black, red, and blue wire connections.
- To the right of the board, use a Phillips head #2 screwdriver to remove the 6mm screw.

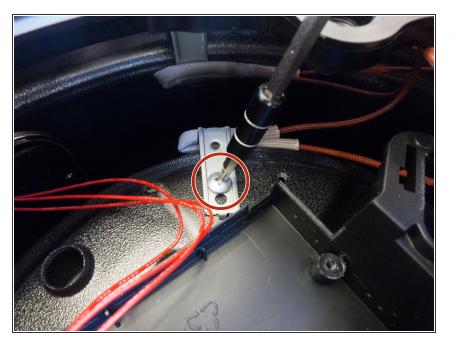

 Use a Phillips head #2 screwdriver to remove the 6mm screw behind and to the right of the circuit board tray.

## Step 14

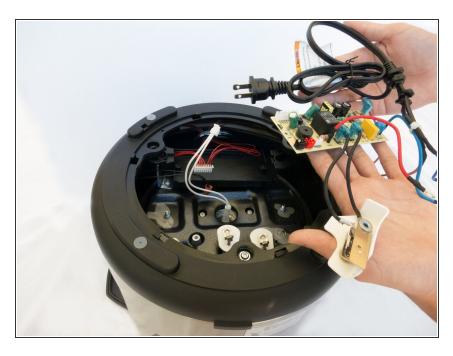

• Remove and replace the circuit board.

To reassemble your device, follow these instructions in reverse order.