



HP 15-f009wm RAM Replacement

Upgrade the RAM in your HP 15-f009wm notebook computer.

Written By: Alex Birchler



INTRODUCTION

This guide explains how to remove the RAM chip from the HP 15-f009wm notebook computer. This could be done to either replace a malfunctioning chip or to upgrade to a larger chip.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Turn laptop upside down.
- Flip the lock switch to the unlocked setting.

Step 2

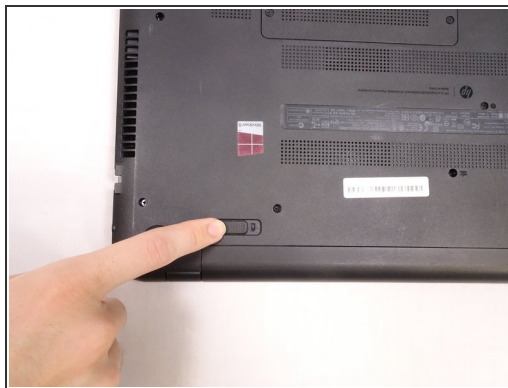



- Flip the release switch.
- Once the flip is switched, the battery should pop out.

Step 3



- Slide the battery out.

Step 4 — RAM

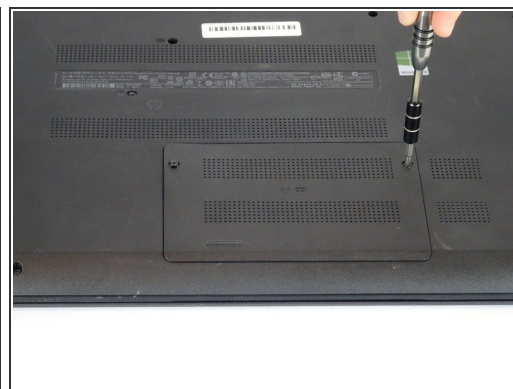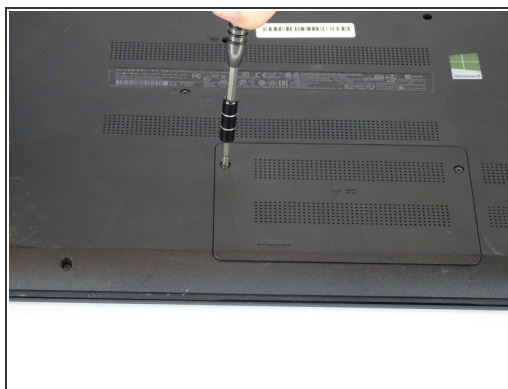

- Remove the two Phillips #1 screws from the RAM panel.

Step 5



- Use the plastic opening tool to pop the panel off.


Step 6



- Release the tabs on each side of the chip by simultaneously pushing each tab away from the RAM.

 These tabs lock the chip in place and releasing them will cause the chip to "pop" up.

Step 7

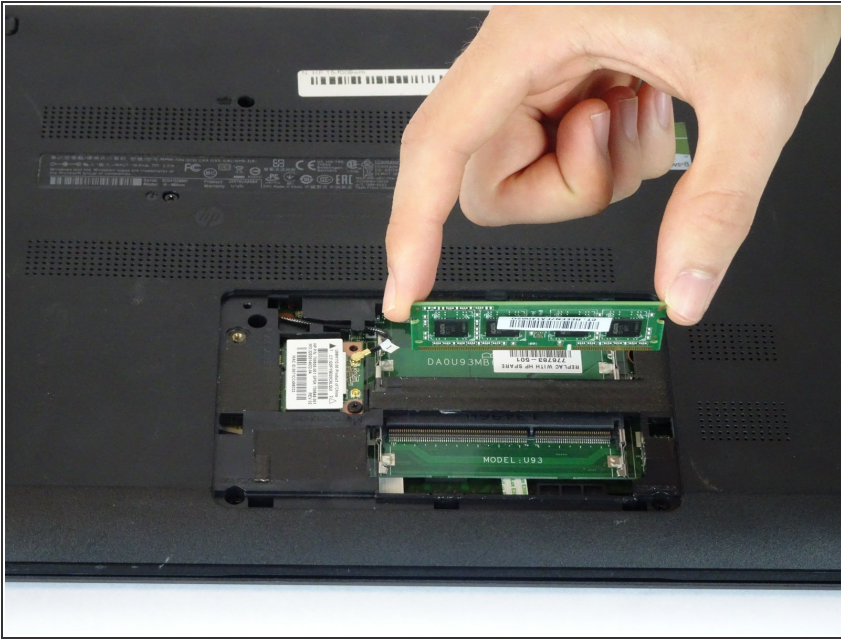

- Remove the RAM chip from the laptop.

To reassemble your device, follow these instructions in reverse order.