


# **Dell Vostro 15 3568 Base Cover Replacement**


Written By: Johnathan Hammond



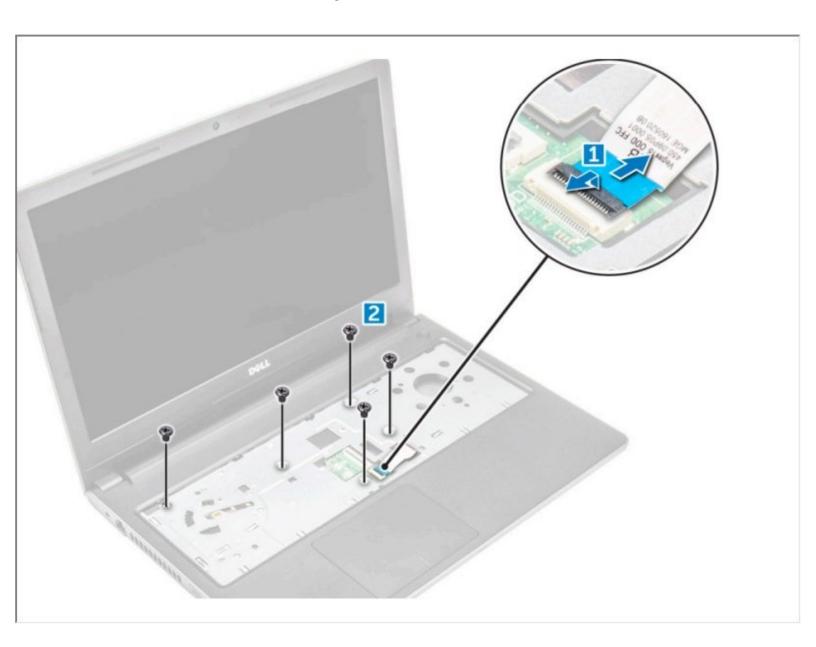


- Spudger (1)
- Phillips #0 Screwdriver (1)

#### Step 1 — Battery

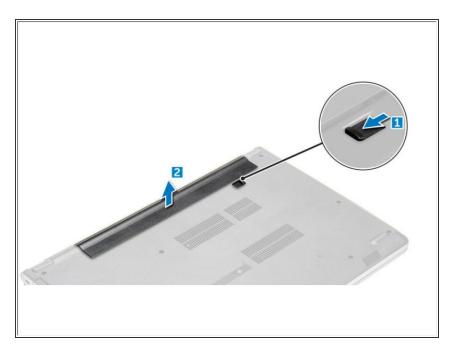

- Slide the release latch to release the battery [1].
  - Remove the battery from the computer [2].

#### Step 2 — KeyBoard

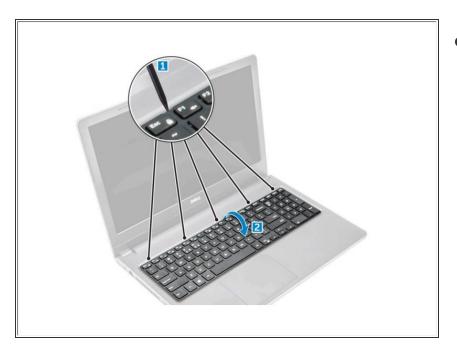


- Release the keyboard by prying on the keyboard release tabs using a plastic scribe [1].
  - Slide and lift the keyboard to access the keyboard connector cable under the keyboard [2].

## Step 3




- Disconnect the keyboard cable from the system board.
  - Lift the keyboard cable to remove it from the computer.

#### Step 4 — Base Cover

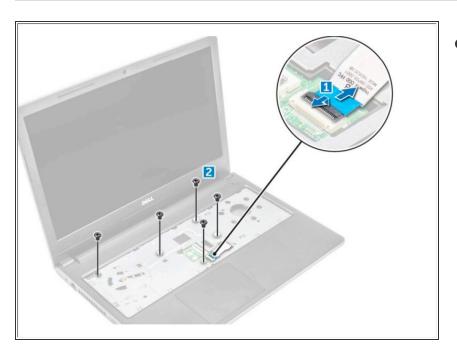

- Disconnect the optical drive connector and lift it to remove it from the system board [1].
  - Remove the screws inside the palmrest [2].

## Step 5

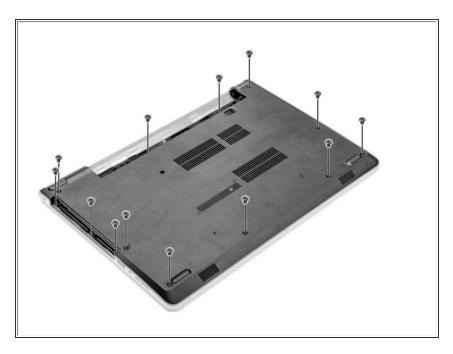

 Remove the screws that secure the base cover to the computer

## Step 6



- Pry the edges of the base cover [1].
  - Lift the base cover and remove it from the computer [2].

To reassemble your device, follow these instructions in reverse order.