


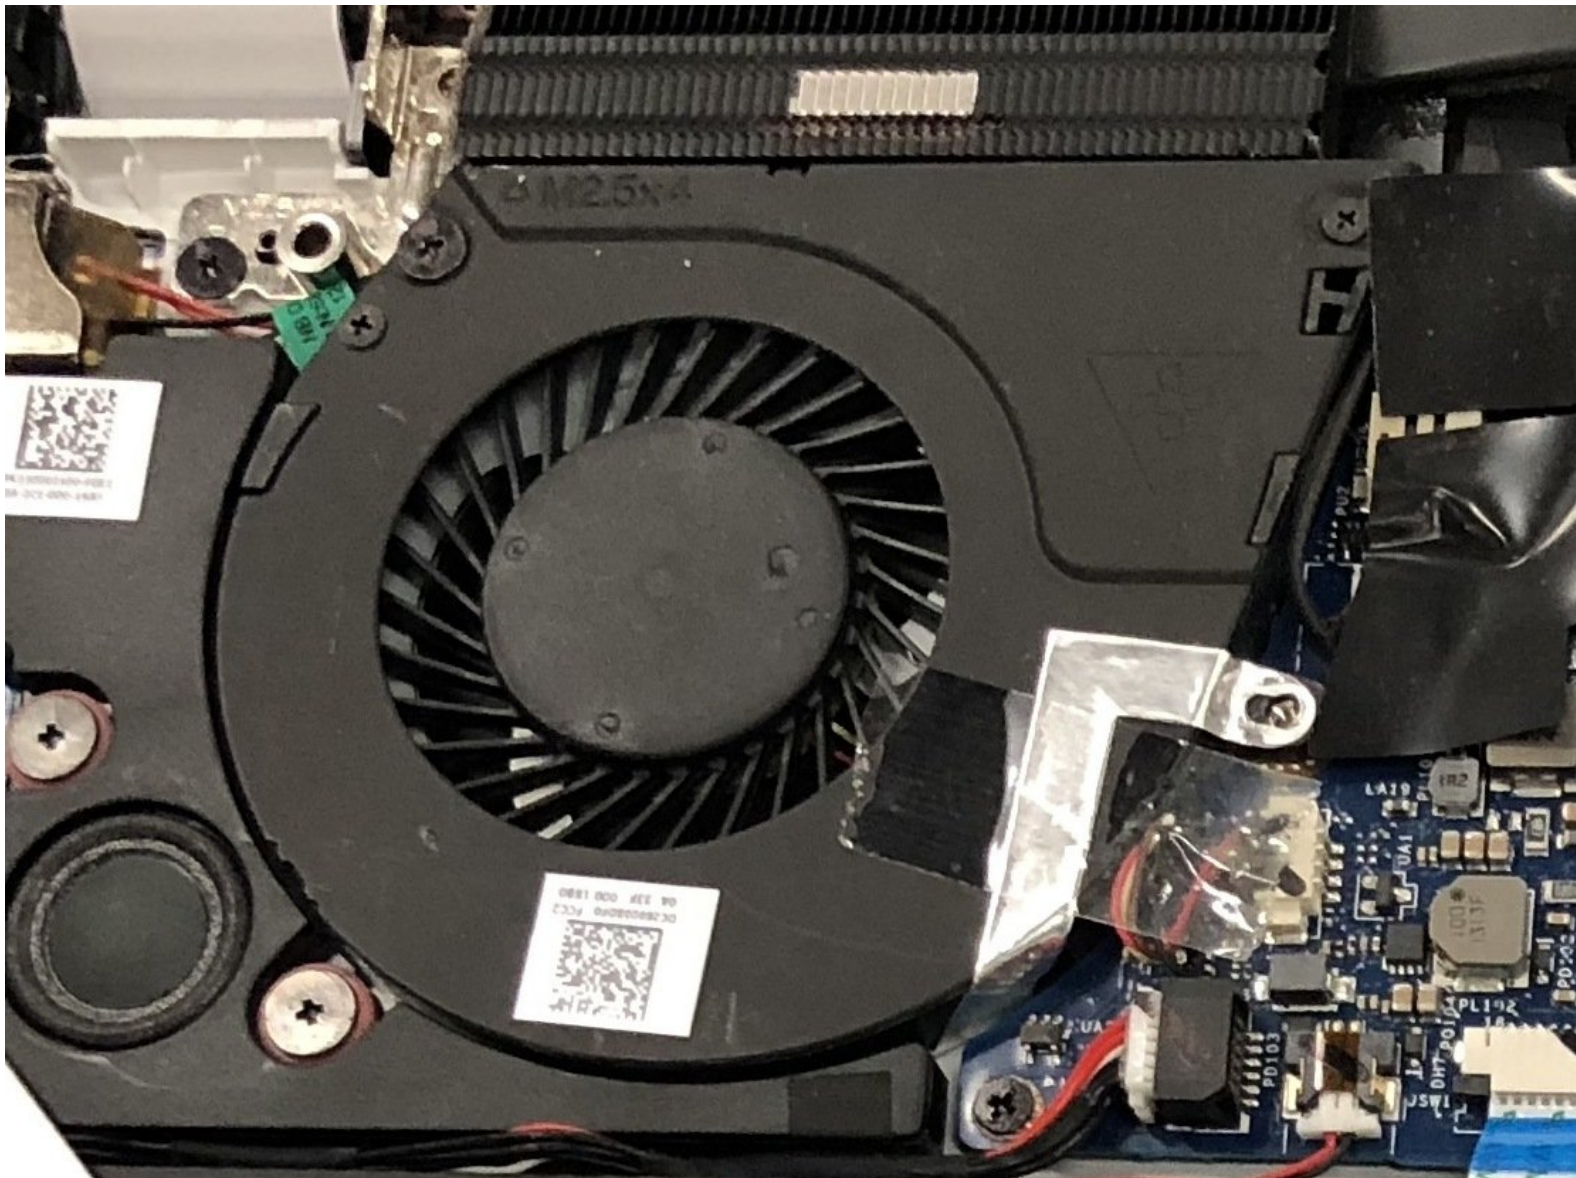

HP Envy TouchSmart 4-1215dx Fan Replacement

A guide on how to properly remove and replace the fan in the HP Envy TouchSmart 4-1215dx.

Written By: Torrance Walker



INTRODUCTION



A guide on how to properly remove and replace the fan in the HP Envy TouchSmart 4-1215dx.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Panel Assembly

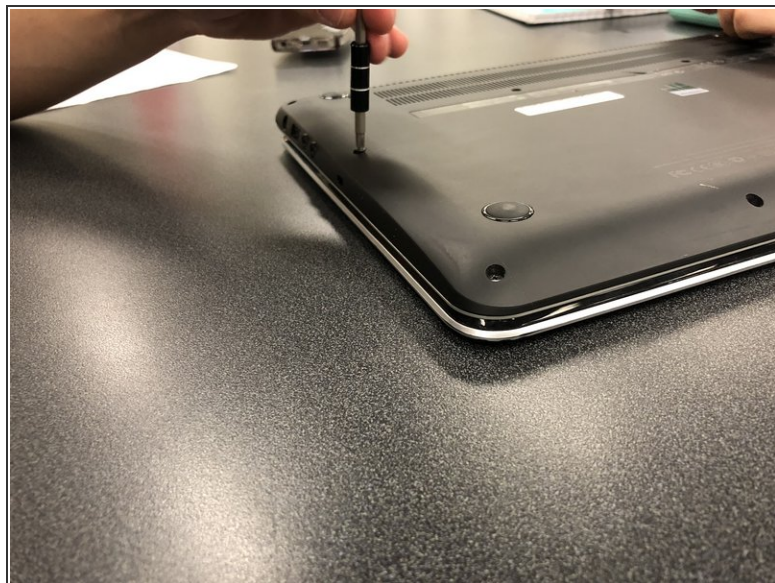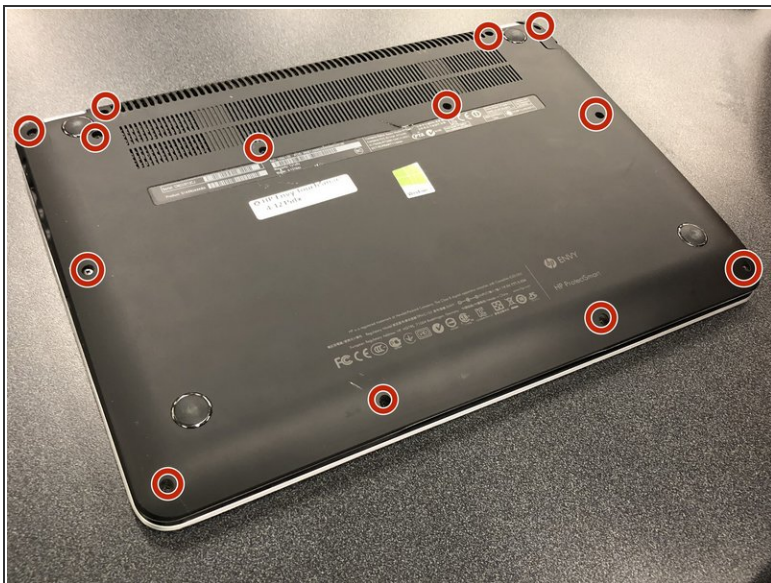


- Remove the thirteen Phillips #0 screws.

Step 2

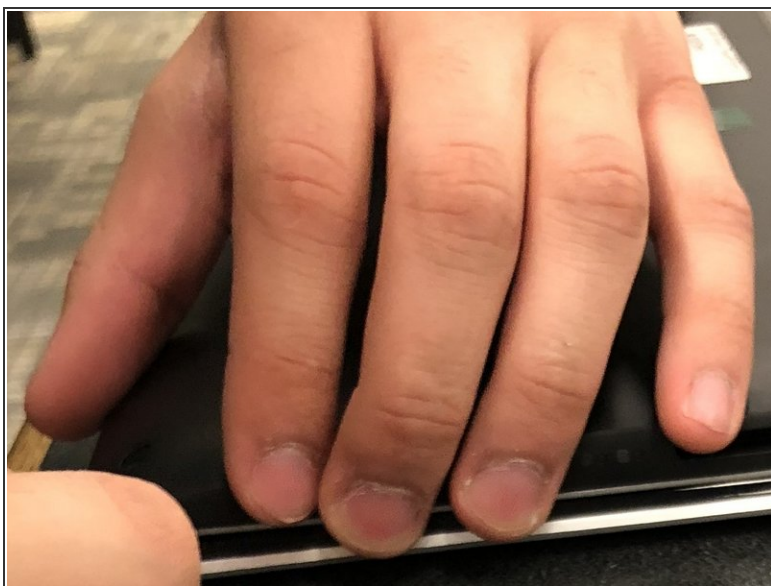



- Pull the panel up and off to remove from the laptop.

Step 3 — Fan

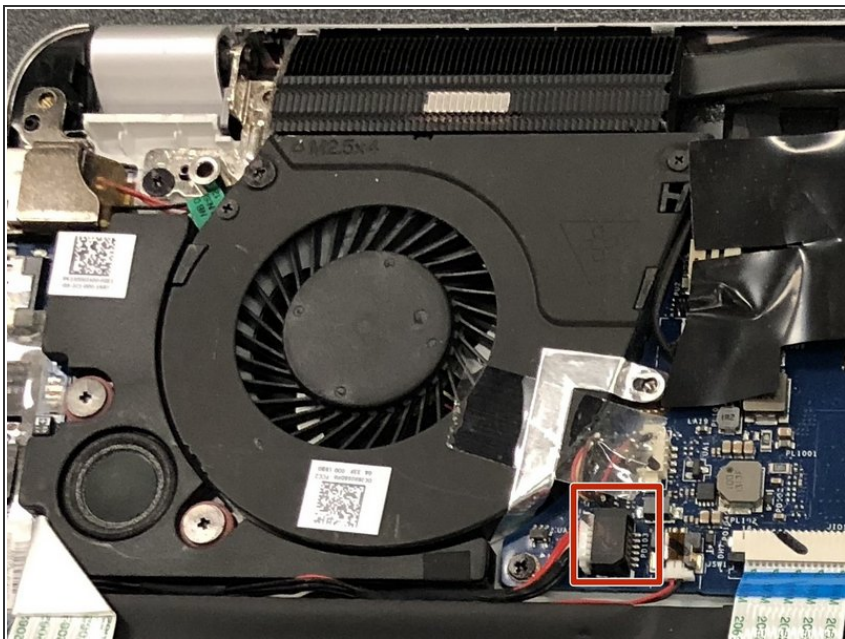

- Unplug the fan from the motherboard.

Step 4

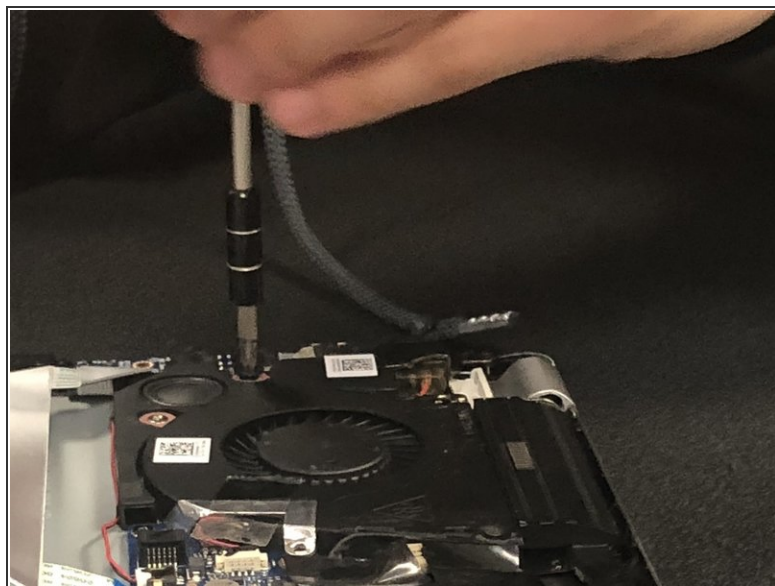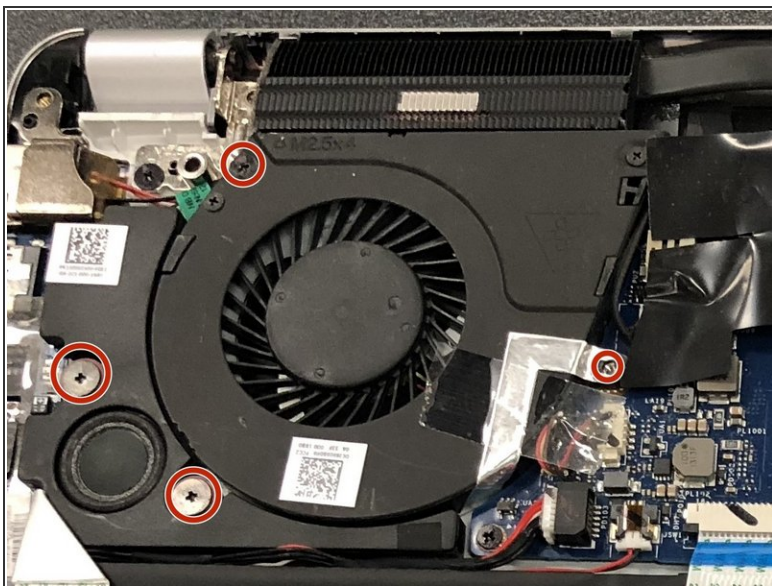

- Remove the four Phillips #0 screws holding in the fan.
- Pull out the fan.

To reassemble your device, follow these instructions in reverse order.