


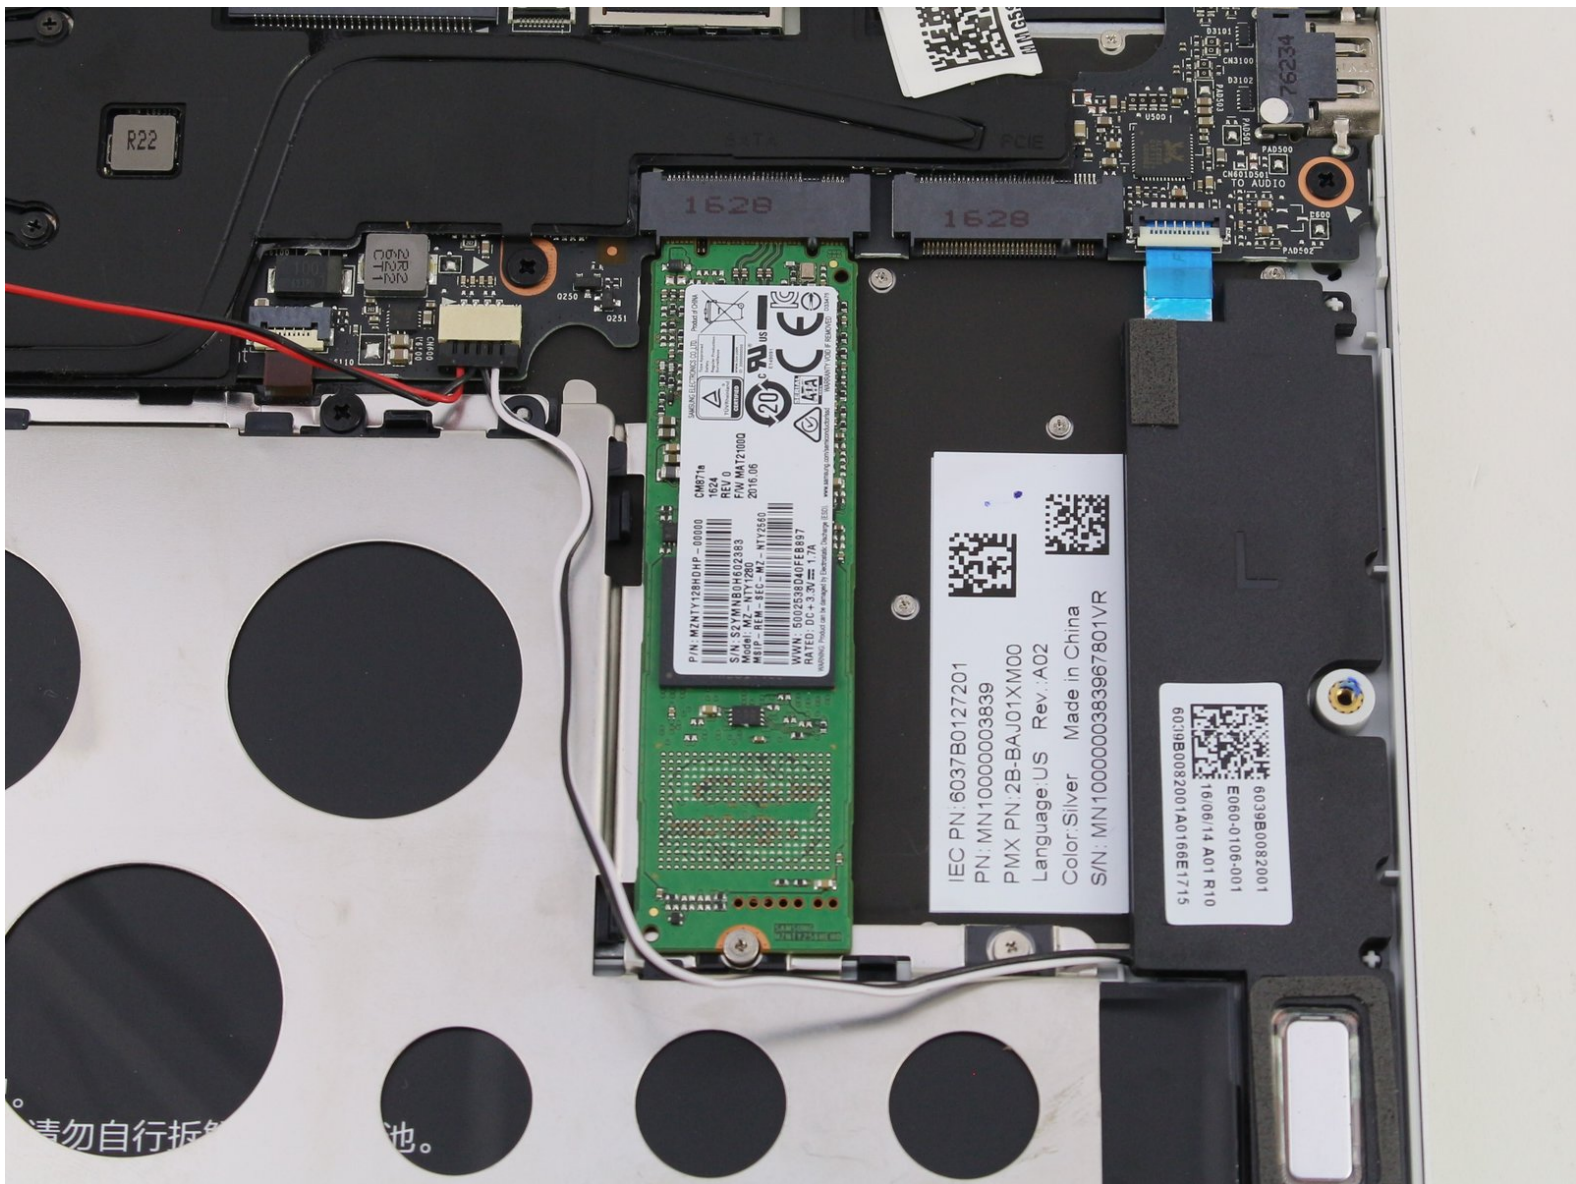

更换小米Air12寸笔记本电脑的SSD

利用以下指南，以更换你的小米Air12寸笔记本的SSD。

撰写者: Hannah Kwan



介绍

利用以下指南，以更换你的小米Air12寸笔记本的SSD。



工具:

- [iFixit Opening Tool](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [JIS #00 Screwdriver](#) (1)




章节:

- [Crucial P3 NVMe PCIe M.2 2280SS SSD - solid performance, switching from HDD or SATA to NVMe™](#) (1)
- [Crucial P3 Plus NVMe PCIe M.2 2280SS SSD - fast Gen4 NVMe™ storage for data-intensive applications](#) (1)
- [Crucial P5 Plus NVMe PCIe M.2 2280SS SSD - professionals, creatives, and hardcore gamers](#) (1)

- 如图所示，以底部的“MI”标志作为参照物确定底盖的方向。

- 用塑料撬棍，将靠近排风口一侧底部中间的橡胶脚垫撬出，这时你可以看见下面隐藏着一个螺丝。

步骤 3

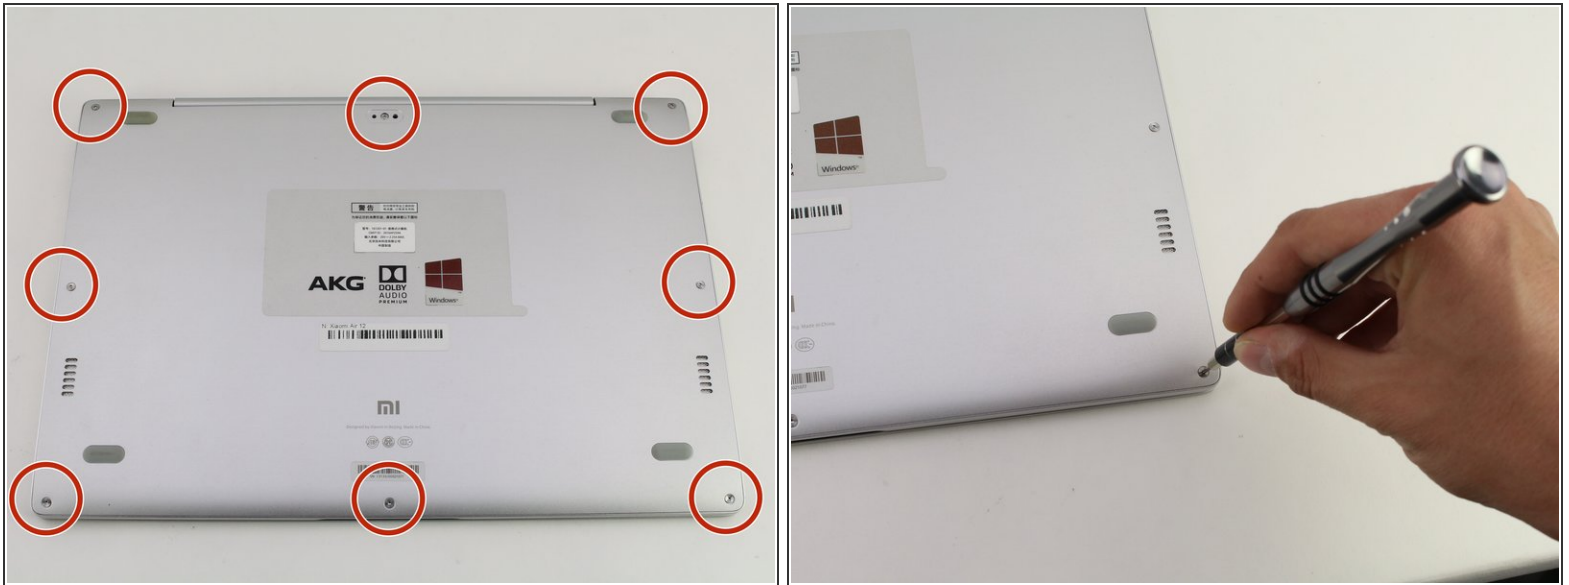

- 如图所示，用T5号星型螺丝刀，逆时针拧下全部8颗3mm螺丝。


步骤 4



- 用塑料撬棍，从机器两侧及排风口两侧，轻轻撬起底壳。


i 在撬起时，会有轻微的咔嗒声。

- ## 步骤 6 — SSD

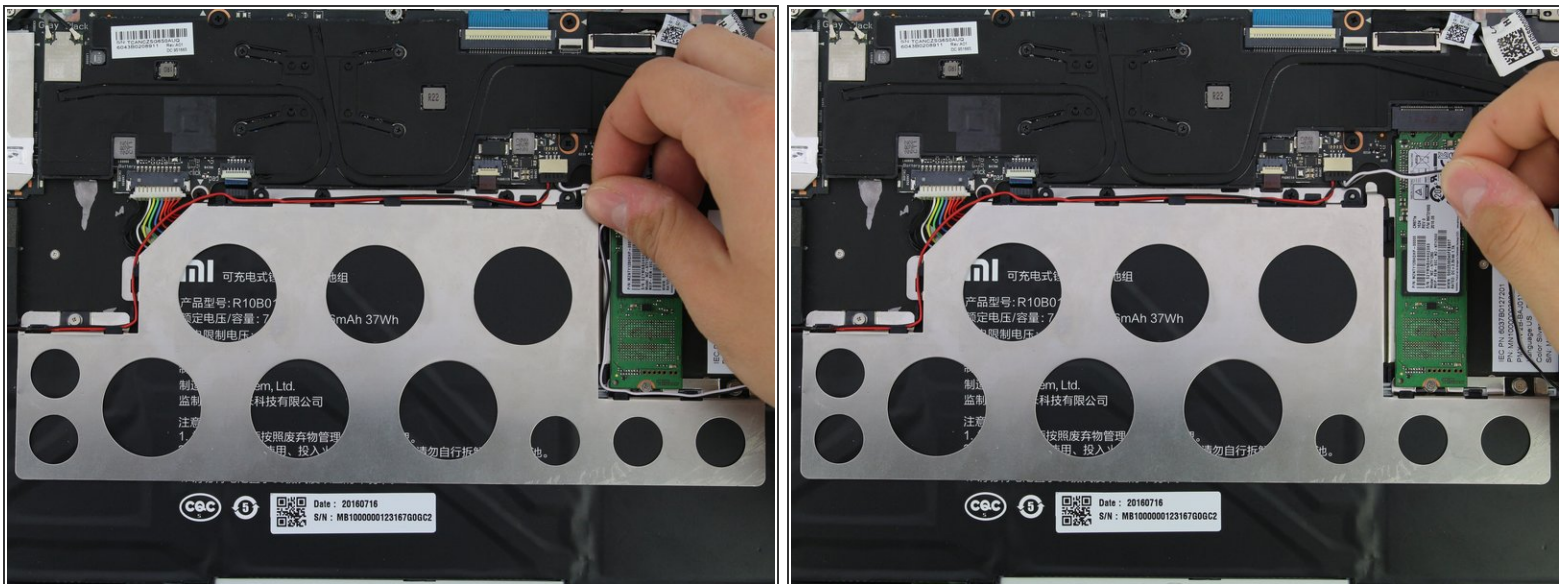

- 分开扬声器的黑、白线缆，并将他们从黑色小卡槽只能够拉出，绕在机器底部金属荫罩板边缘。

步骤 7

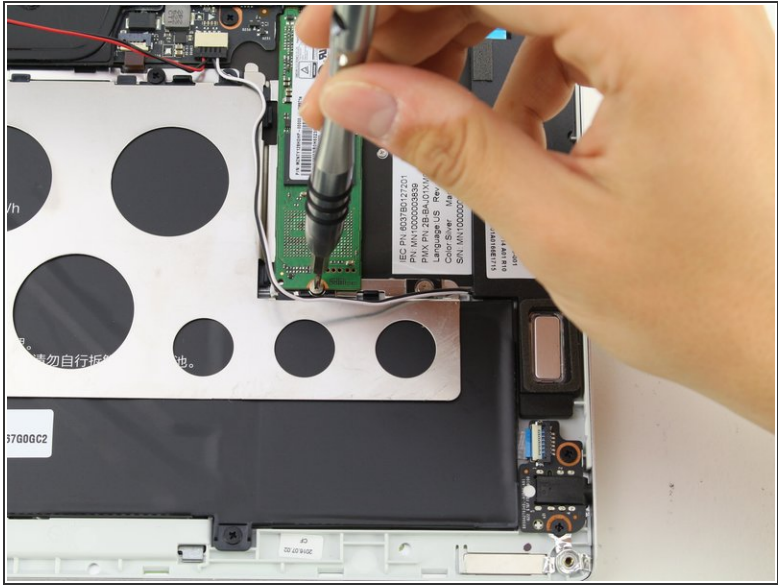

-
- A close-up photograph showing a person's hand holding a green Wi-Fi card (Intel 802.11a/b/g/n) over the back of a laptop. The laptop's internal components, including the battery, motherboard, and various connectors, are visible. The Wi-Fi card has a label with technical specifications and a QR code. The laptop's back cover is open, revealing the internal hardware.

- $$\zeta^{-1} \pm 6 \epsilon_{\mu}^{1/4} \text{Å} \dots \pm 6 \epsilon_{\mu}$$