



BOSE SoundTouch 30 Base Plate Replacement

How to replace the BOSE SoundTouch 30 base plate.

Written By: Brennen Irey



INTRODUCTION

This guide shows how to remove the base plate.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Base Plate



- Remove the four 15.5 mm PH2 screws securing the base plate to the device.

To reassemble your device, follow these instructions in reverse order.