



Cleaning Debris from Flywheel Screen

This guide details how to clean lawnmower debris from the flywheel screen on the engine.

Written By: Ethan Narad



INTRODUCTION


Due to the nature of lawn mowers, over time large amounts of debris and grass cuttings accumulate and can harm the engine's performance.

TOOLS:

- [5/16" Socket](#) (1)
 - [3/8" Drive Ratchet](#) (1)
 - [Compressed Air](#) (1)
 - [Shop Towels or Rags or Paper Towels](#) (1)
-

Step 1 — Cleaning Debris from Flywheel Screen



 Ensure the engine is off and cooled down before starting this guide.

- Using a 5/16" socket or wrench, remove the three bolts holding the plastic cover on to the engine.
- Lift away the plastic cover. Note that the starter is attached to the cover and will come off with it.

Step 2



- Using compressed air or a rag, clean debris from the flywheel.

To reassemble your device, follow these instructions in reverse order.