



Dell Inspiron N5010 Memory Modules Replacement

In this guide, we will be showing you how to...

Written By: Terrence15

INTRODUCTION


In this guide, we will be showing you how to remove and replace the Memory Modules.

Step 1 — CAUTION




- ⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in [Before You Begin](#).
- ⚠ CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer)
- ⚠ CAUTION:** To prevent damage to the memory-module connector, do not use tools to spread the memory module securing clips.

Step 2 — Popping up the Memory Module

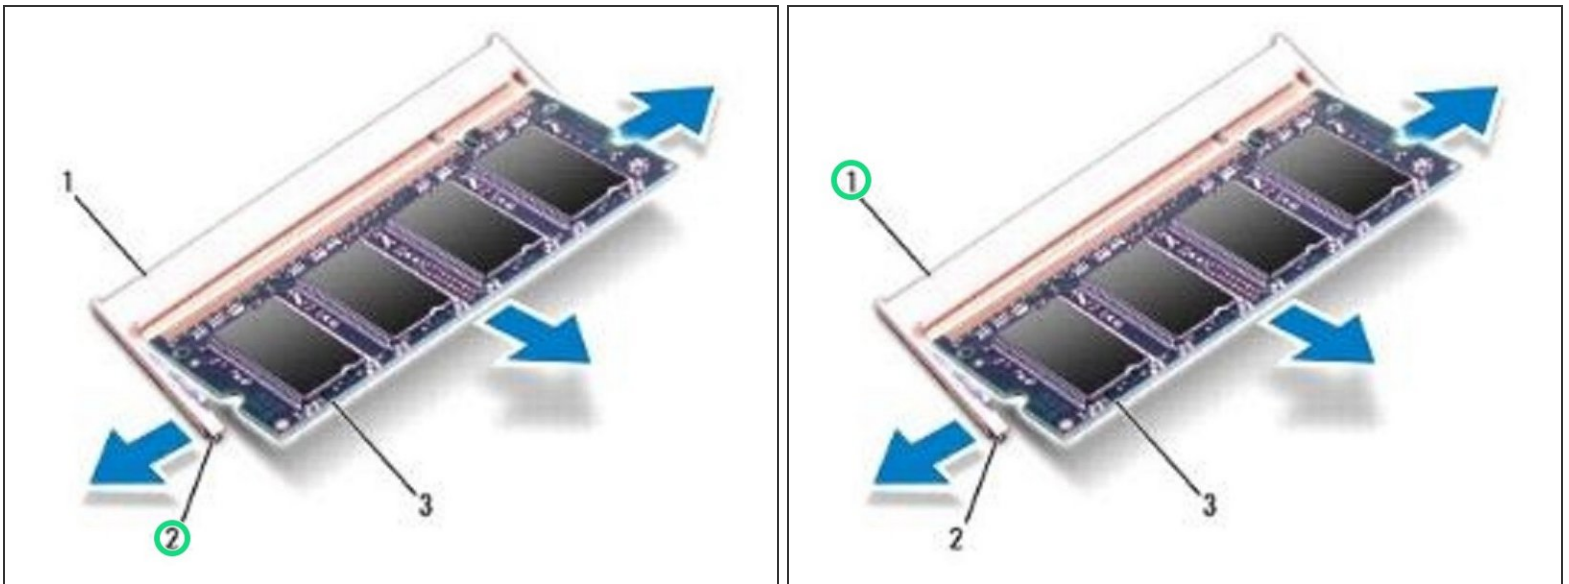



- Use your fingertips to carefully spread apart the securing clips on each end of the memory-module connector until the module pops up.

Step 3 — Remove the Memory Module

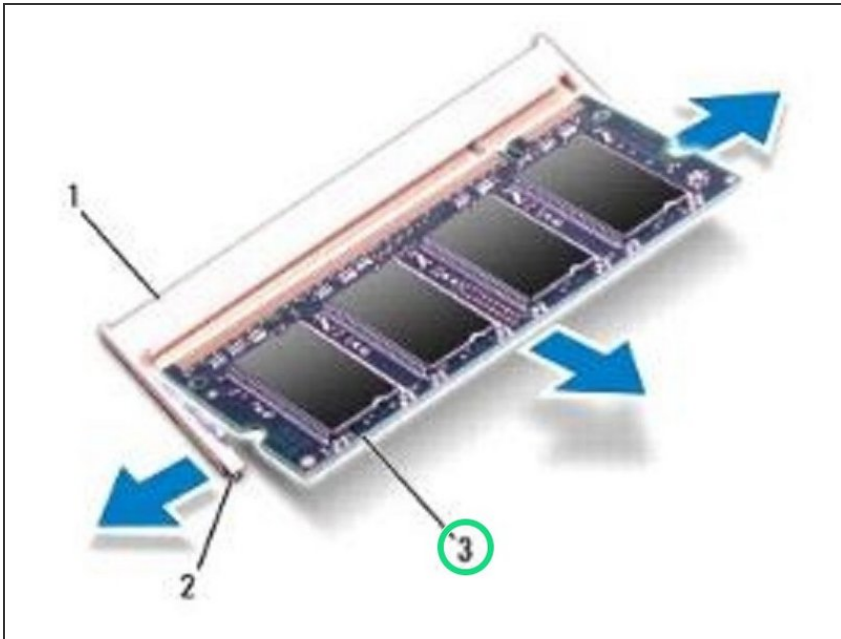


- Remove the memory module from the memory-module connector.

Step 4 — Align the Notch

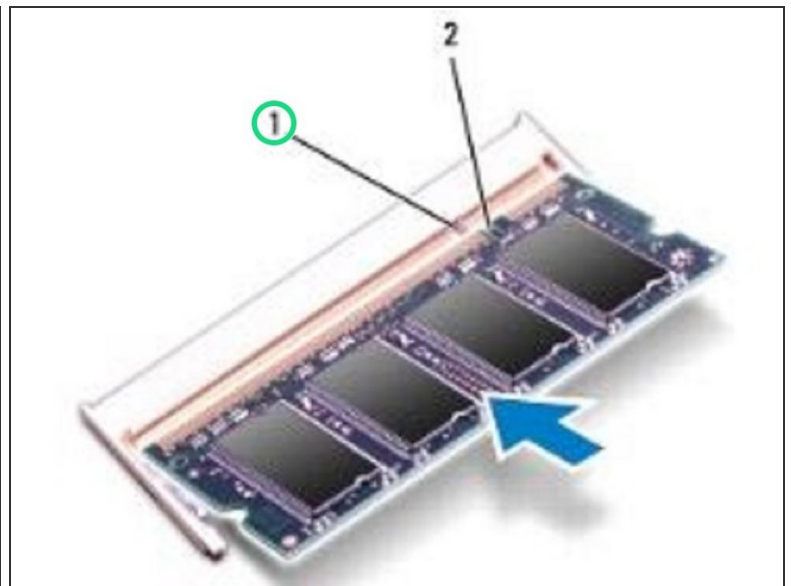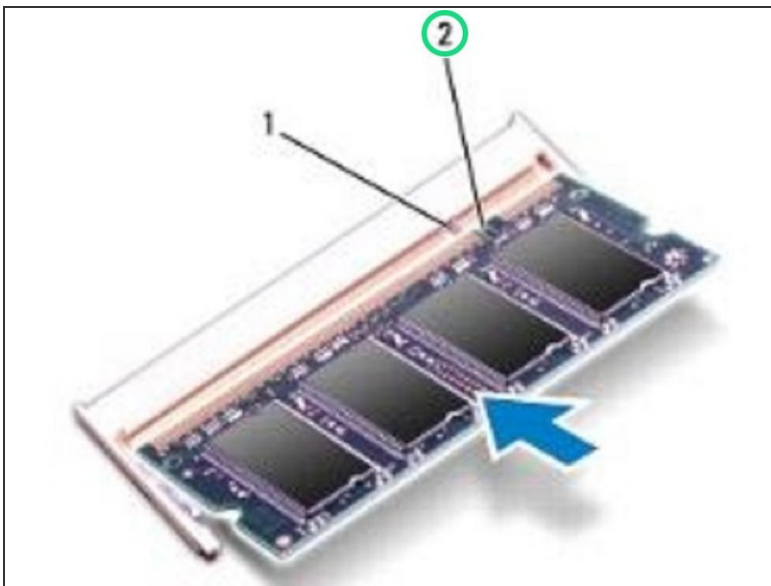

- Align the notch in the **NEW** memory module with the tab in the memory-module connector.

Step 5 — Install the Memory Module

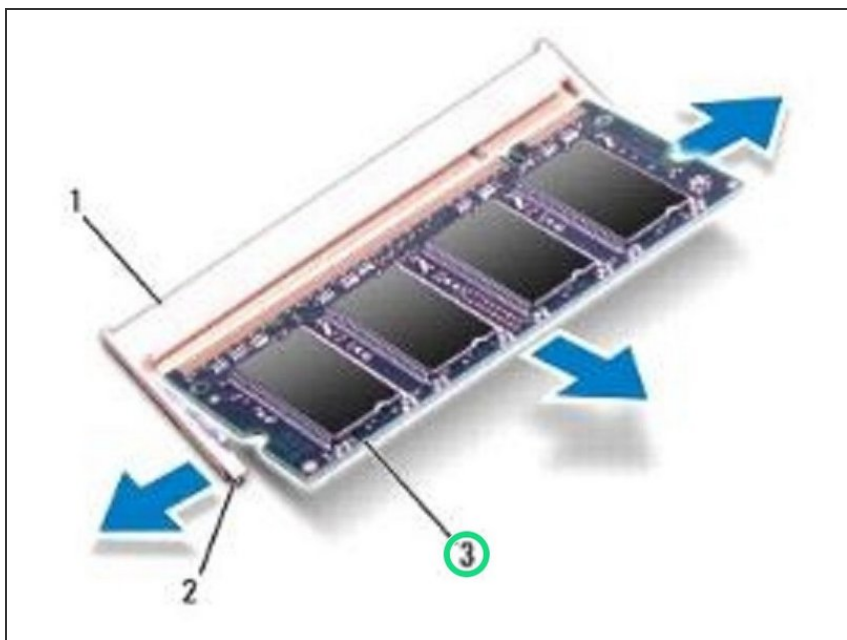

- Slide the memory module firmly into the connector at a 45-degree angle, and press the memory module down until it clicks into place. If you do not hear the click, remove the memory module and reinstall it.

ⓘ NOTE: If the memory module is not installed properly, the computer may not boot.