




Dell Inspiron 15R 5520 Memory Module Replacement

Written By: Terrence15

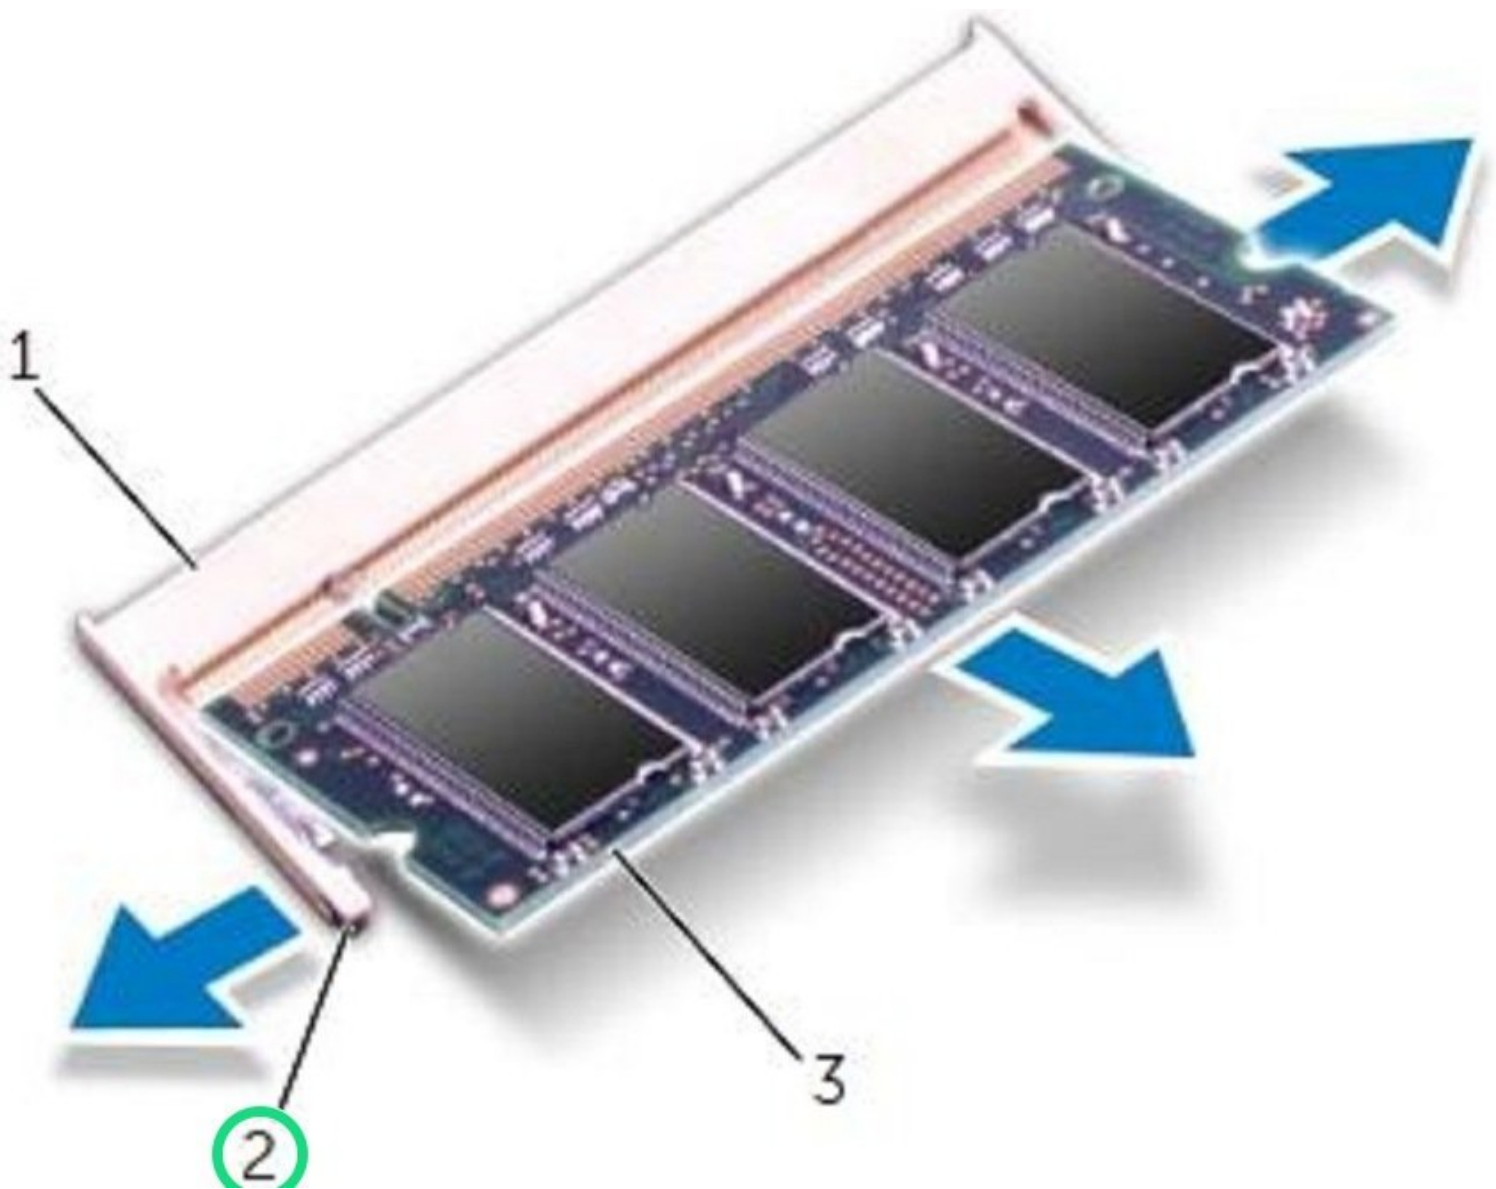

INTRODUCTION


In this guide, we will be showing you how to remove and replace the Memory Module.



TOOLS:

- [Anti-Static Wrist Strap](#) (1)
-

Step 1 — Popping up the Memory Module

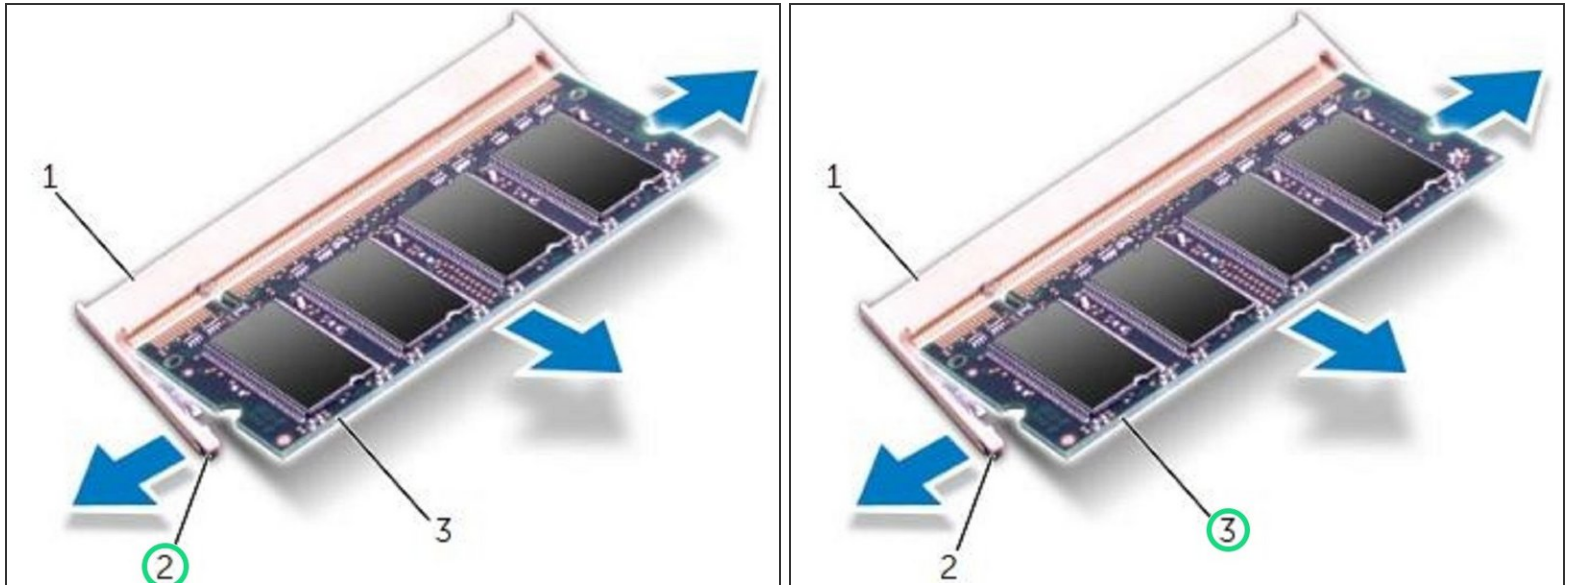


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).

⚠ CAUTION: To prevent damage to the memory-module connector, do not use tools to spread the memory-module securing clips.



- Use your fingertips to carefully spread apart the securing clips on each end of the memory-module connector until the memory module pops up.

Step 2 — Remove the Memory Module

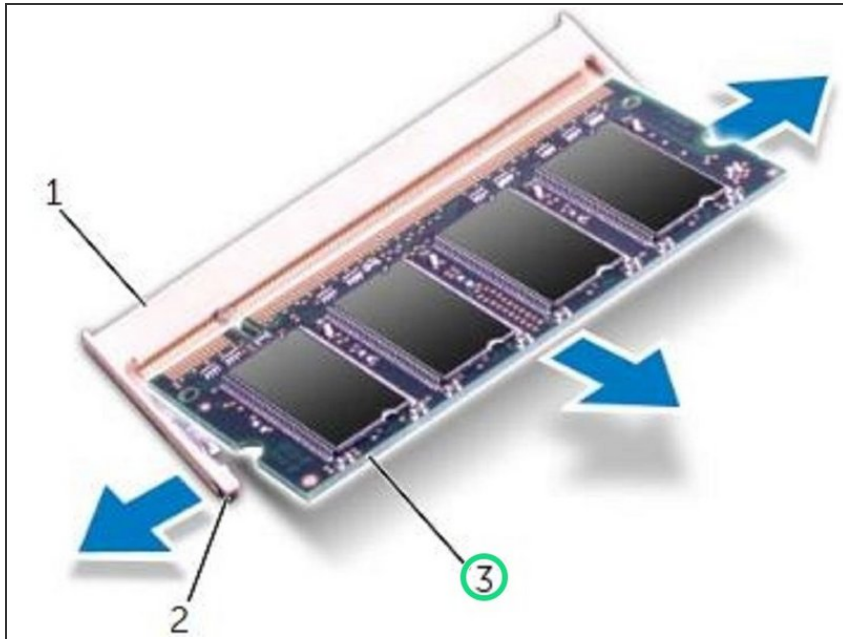


- Remove the memory module from the memory-module connector.

Step 3 — Align the Notch

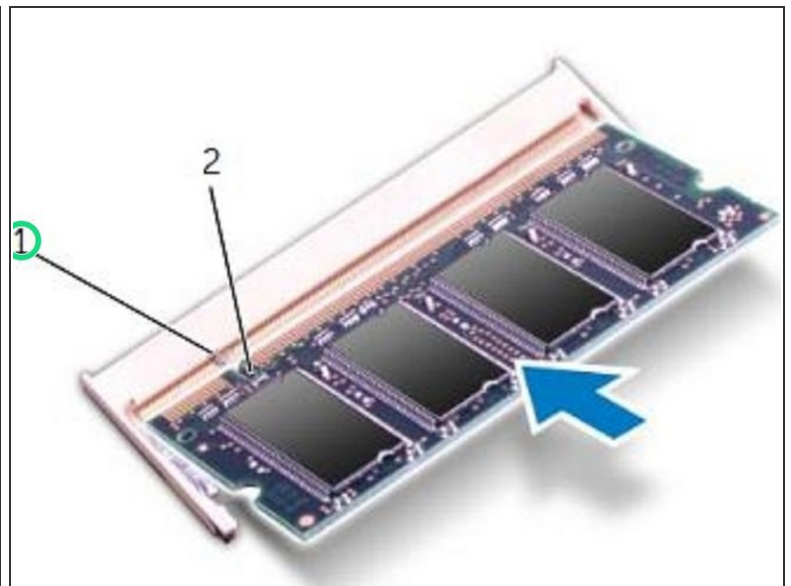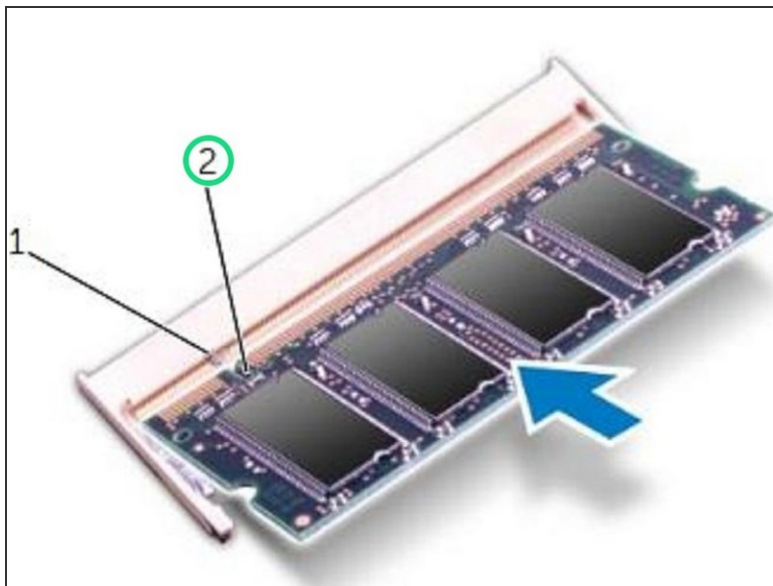

- Align the notch on the memory module with the tab on the memory-module connector.

Step 4 — Sliding the Memory Module

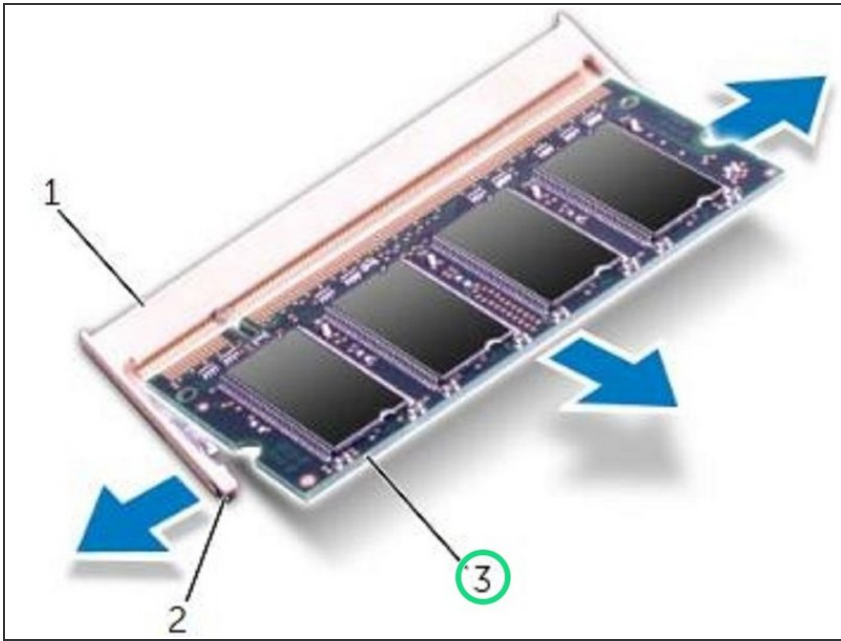

- Slide the memory module firmly into the slot at a 45-degree angle, and press the memory module down until it clicks into place. If you do not hear the click, remove the memory module and reinstall it.

ⓘ NOTE: If the memory module is not installed properly, the computer may not boot.