



# Dell Inspiron 15R 5521 Hard-Drive Assembly Replacement

Written By: Terrence15



---

## INTRODUCTION

In this guide, we will be showing you how to remove and replace the Hard-Drive Assembly.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Remove the Screws



**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).

**⚠ CAUTION:** Hard drives are extremely fragile. Exercise care when handling the hard drive.

- Remove the screws that secure the hard-drive assembly to the computer base.

## Step 2 — Sliding the Hard-Drive Assembly



- Slide the hard-drive assembly forward to disconnect the hard-drive assembly from the system board.

### Step 3 — Lifting the Hard Drive Assembly



- Using the pull-tab, lift the hard-drive assembly out of the computer base.

### Step 4 — Remove the Screws



- Remove the screws that secure the hard-drive bracket to the hard drive.

## Step 5 — Lifting the Hard Drive Bracket



- Lift the hard-drive bracket off the hard drive.

## Step 6 — Align the Screw Holes



- Align the screw holes on the hard-drive bracket with the screw holes on the **NEW** hard drive.

## Step 7 — Replace the Screws



- Replace the screws that secure the hard-drive bracket to the hard drive.

## Step 8 — Sliding the Assembly



- Slide and place the hard-drive assembly in the hard-drive bay.

## Step 9 — Sliding the Assembly



- Slide the hard-drive assembly backward to connect the hard-drive assembly to the system board.

## Step 10 — Replace the Screws



- Replace the screws that secure the hard-drive assembly to the computer base.