



Written By: [noria901](#)



INTRODUCTION

Le joystick GPD WIN est facile à salir.

S'il devient difficile à utiliser, remplacez le cache-culbuteurs.



PARTS:

- [New Item](#) (1)
-

Step 1 — Joystick Locker Cap



- Use force to remove the end of the locker cap on the joystick.
- Install the new locker cap where the old one used to be.

To reassemble your device, please follow these steps in reverse order.