

# **WowWee Miposaur Battery Replacement**

This guide will show you how to remove and replace the batteries in the WowWee MiPosaur.

Written By: Melissa Bender



## INTRODUCTION

This guide will lead you through the process of opening the battery panel of the WowWee MiPosaur for the purpose of replacing batteries.

| TOOLS:  | PARTS:             |
|---|--------------------|
| <ul> <li>Phillips #1 Screwdriver (1)</li> </ul> | • AA Batteries (4) |

### Step 1 — Battery



- Use a Phillips head #1 screwdriver to remove 3 2mm screws from MiPosaur's underside panel.
- You may need to use an extension on your screwdriver to work around small space between the panel and the dinosaur's leg.
- You can remove the bottom screw completely, but the top two screws are captive and do not need to be removed entirely.

#### Step 2



• Firmly grasp the panel and pull apart from the base of the toy.

## Step 3



• Remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.