



LG G Pad 7.0 Speaker Replacement

How to replace the LG G Pad 7.0 Speaker.

Written By: Jon Bowers



INTRODUCTION

This guide shows the procedure for replacing the speaker on an LG G Pad 7.0 as well as all materials needed. Be sure to clean your work space to avoid any unnecessary scratches on the screen as you work.



TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)



PARTS:

- [LG G Pad 7.0 VK410 Speaker](#) (1)

Step 1 — Speaker

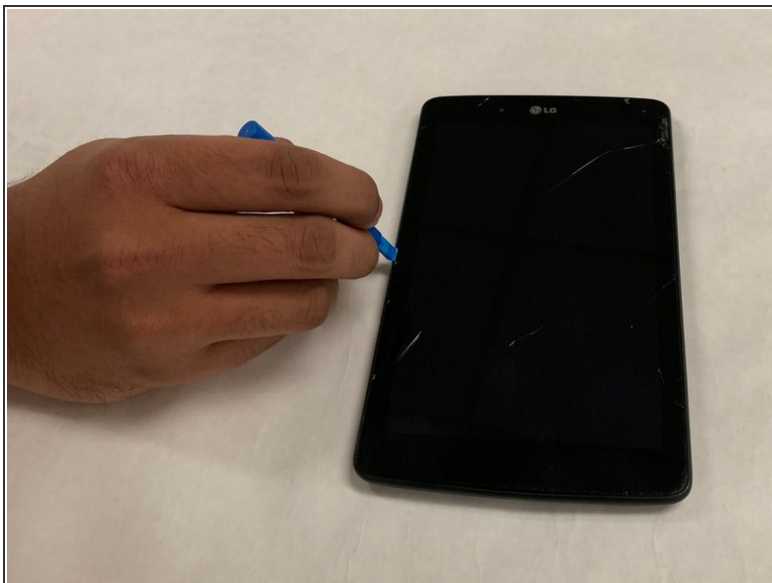

- Power down the device.
- Insert iFixit screen removal tool along the edge of the screen.
- Carefully work the tool around the edge of the screen avoiding the front camera and volume buttons.
- Once the screen is free, remove it from the back cover.

Step 2



- Using a Phillips #000 head screwdriver, remove the 3mm Phillips head screw holding down the speaker.
- The speaker is now free and can be replaced.

To reassemble your device, follow these instructions in reverse order.