



# ASUS Chromebook C100PA-RBRKT07 Battery Replacement

Details to remove the battery of ASUS...

Written By: Tiffany Foo



# INTRODUCTION

Details to remove the battery of ASUS Chromebook Flip C100PA-RBRKT07

## TOOLS:

[iFixit Opening Tool](#) (1)  
[T5 Torx Screwdriver](#) (1)  
[ESD Safe Blunt Nose Tweezers](#) (1)  
[JIS #1](#) (1)  
[JIS #00 Screwdriver](#) (1)

## PARTS:

[ASUS Chromebook C100PA Battery](#) (1)

## Step 1 — Battery



- Use the T5 screwdriver to remove the nine 2.1 mm screws from the bottom of the device.

## Step 2



- Use the iFixit opening tool to remove the 4 pads to reveal six 3.1 mm screws underneath.

## Step 3




- Use the T5 screwdriver to remove the 6 3.1 mm screws under the pads.
- ⓘ There might be a layer of tape that covers the screws. Remove the tape first with a pair of [tweezers](#).

## Step 4




- Use the iFixit opening tool to pry the backing of the device off.

## Step 5

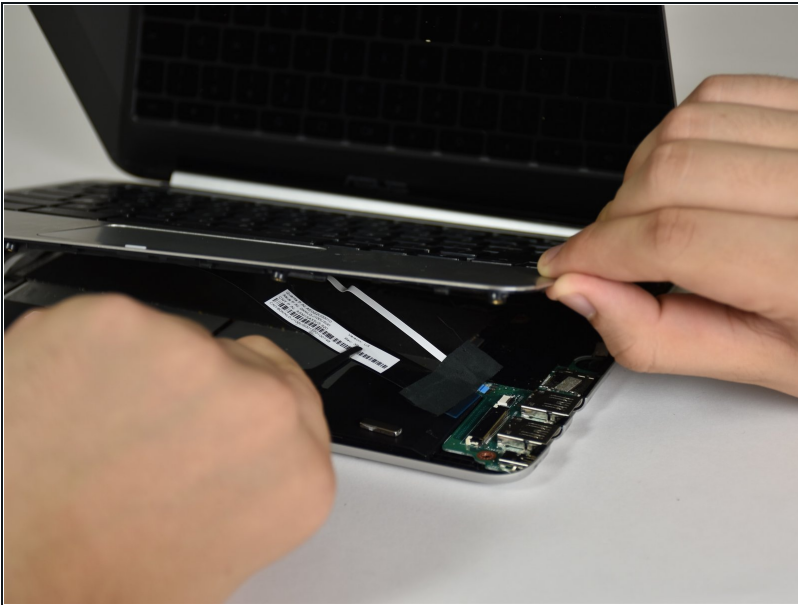


- Use the tweezers to separate the cables from the motherboard.
- ① You need to reach inside and peel some tape to disconnect the wire.

## Step 6

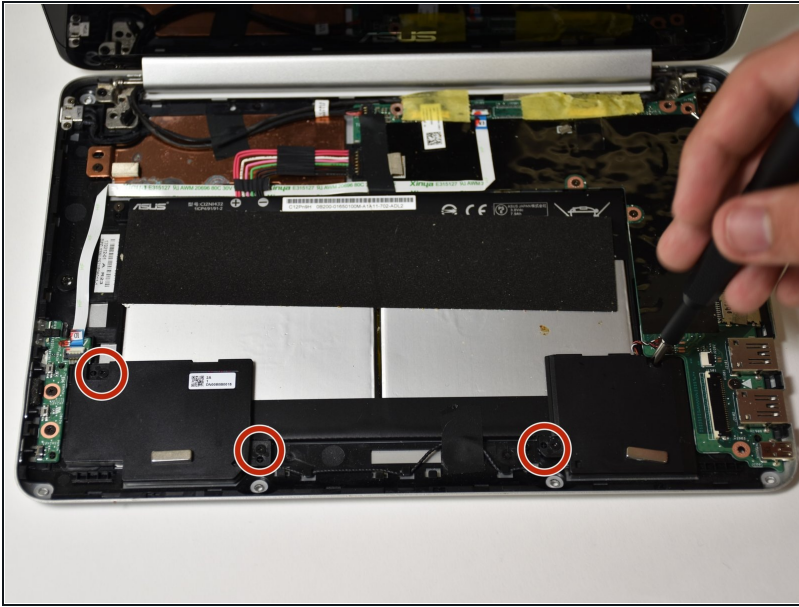


- Use the JIS1 screwdriver to remove the four 2.1 mm screws around the audio cards.

## Step 7

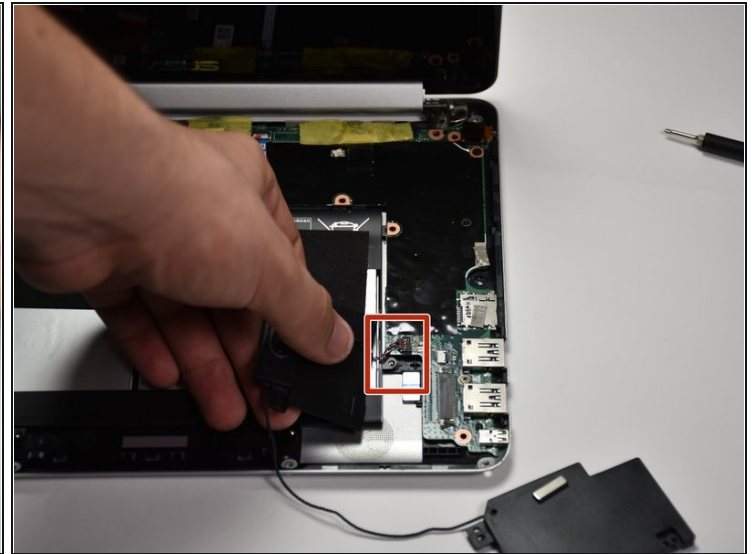

- Gently disconnect the audio cards, exposing the battery.

## Step 8

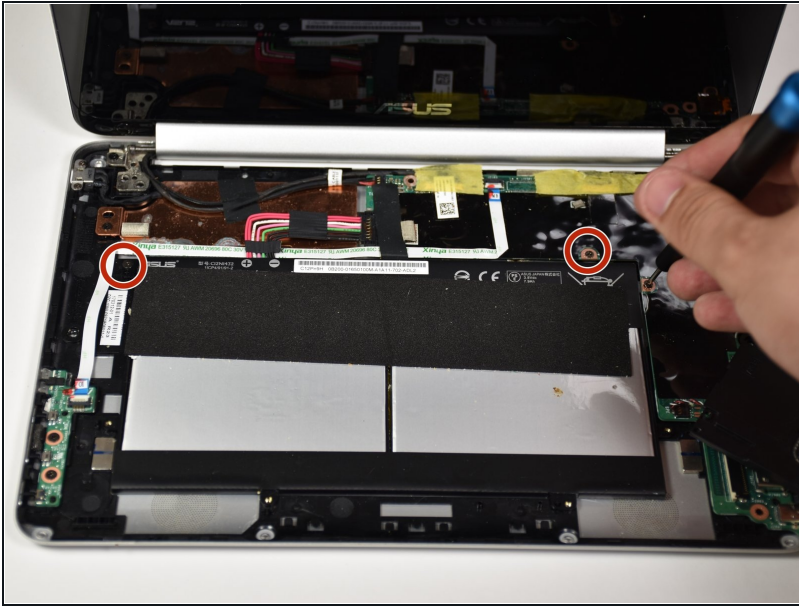

- Use the J00 screwdriver to remove the three 1.7 mm battery screws.

## Step 9



- Grip the battery and remove it from the device.
- Remove the battery cable out of the motherboard by lifting the battery cables.

To reassemble your device, follow these instructions in reverse order.