 






Casablanca W-11 Wall Control Switch Replacement

Replace power switch

Written By: Alan Nishioka

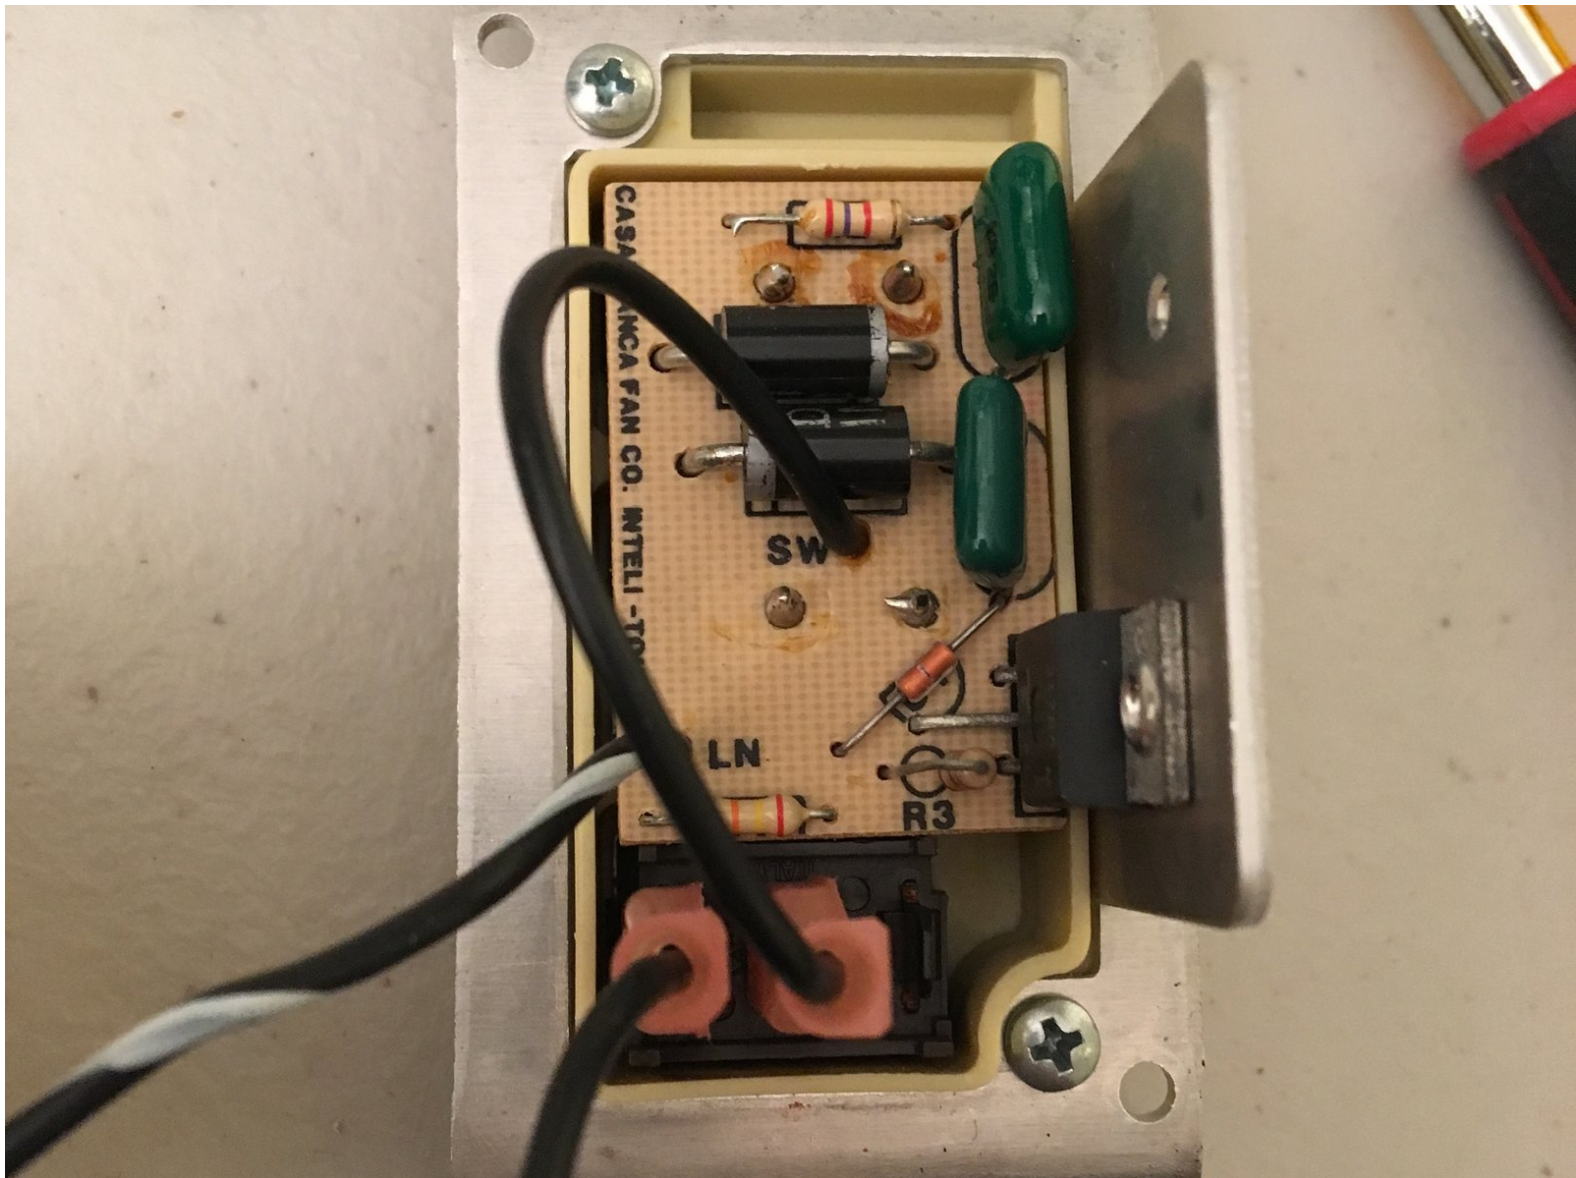

  Step 1 — Replace Burned Out Main Power Switch

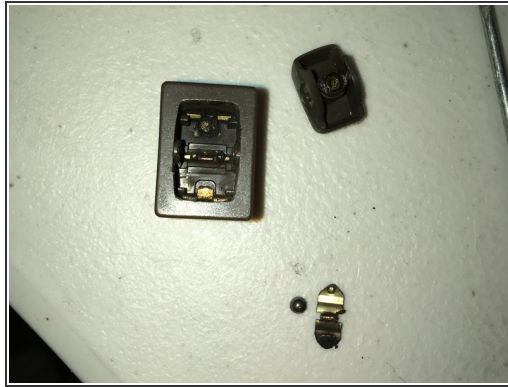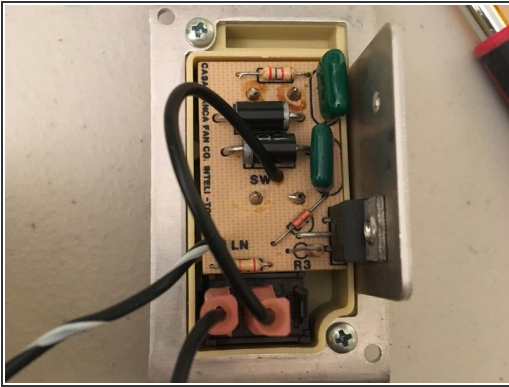

- Apparently W-11 is obsolete and replaced by W-32 which is also obsolete.
- Main power switch was burned out. You can see lots of black around contacts of switch I took apart.
- I replaced it with a rocker switch (Digikey EG1510-ND, \$1 switch + \$5 shipping). It's the wrong color but brown switches are hard to find.
- New switch has on/off marking. Original switch always annoyed me because I could not tell if it was on or off.

To reassemble your device, follow these instructions in reverse order. **Important:** Buy SPST or SPDT switch or connectors won't fit.