



HP Spectre x360 13t-4000 Battery Replacement

This guide will instruct you on how to remove...

Written By: Brandon Carvalho



INTRODUCTION

This guide will instruct you on how to remove and replace the battery. Battery replacement may be necessary if the battery is not able to hold a charge.

TOOLS:

[iFixit Opening Tool](#) (1)
[T5 Torx Screwdriver](#) (1)
[Phillips #1 Screwdriver](#) (1)

PARTS:


[HP Spectre 13-4000 Series and 13t-4000 Series Battery](#) (1)

Step 1 — Bottom Cover



- Turn off and unplug the laptop.
- Flip over the laptop so that the bottom backplate is exposed.

Step 2

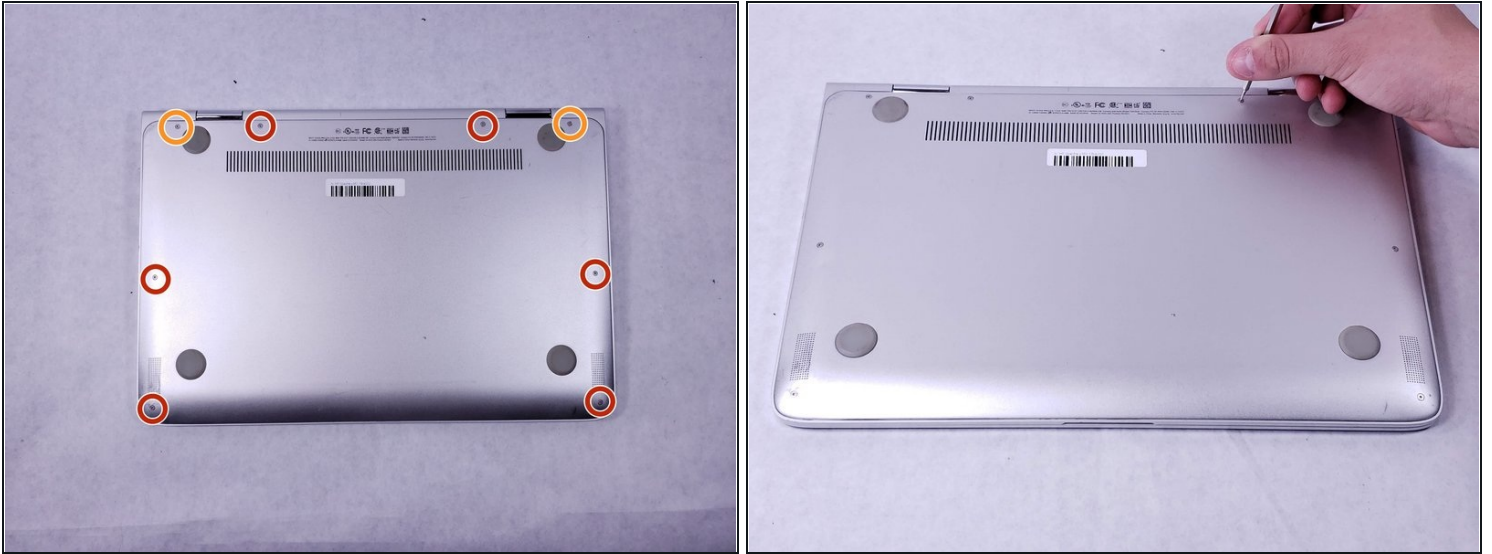

- Use a T5 screwdriver to remove the six 3 mm screws that secure the backplate.
- Use the same screwdriver to remove the two 7 mm screws.

Step 3



- Insert an opening tool under the bottom cover at the screen hinges, and gently pry the cover free.
- Carefully work your way around the cover's edges to pop it off completely.

Step 4 — Battery



- With the backplate removed, remove the four 3 mm screws securing the battery with a Phillips #1 screwdriver.
- With the screws removed, disconnect the 3 wires connected to the battery.
- ① [Tweezers](#) may be needed to remove the wires.

To reassemble your device, follow these instructions in reverse order.