 




Lenovo ThinkPad T440p Keyboard Replacement

If keys are unresponsive or the whole keyboard...

Written By: Christian Abad

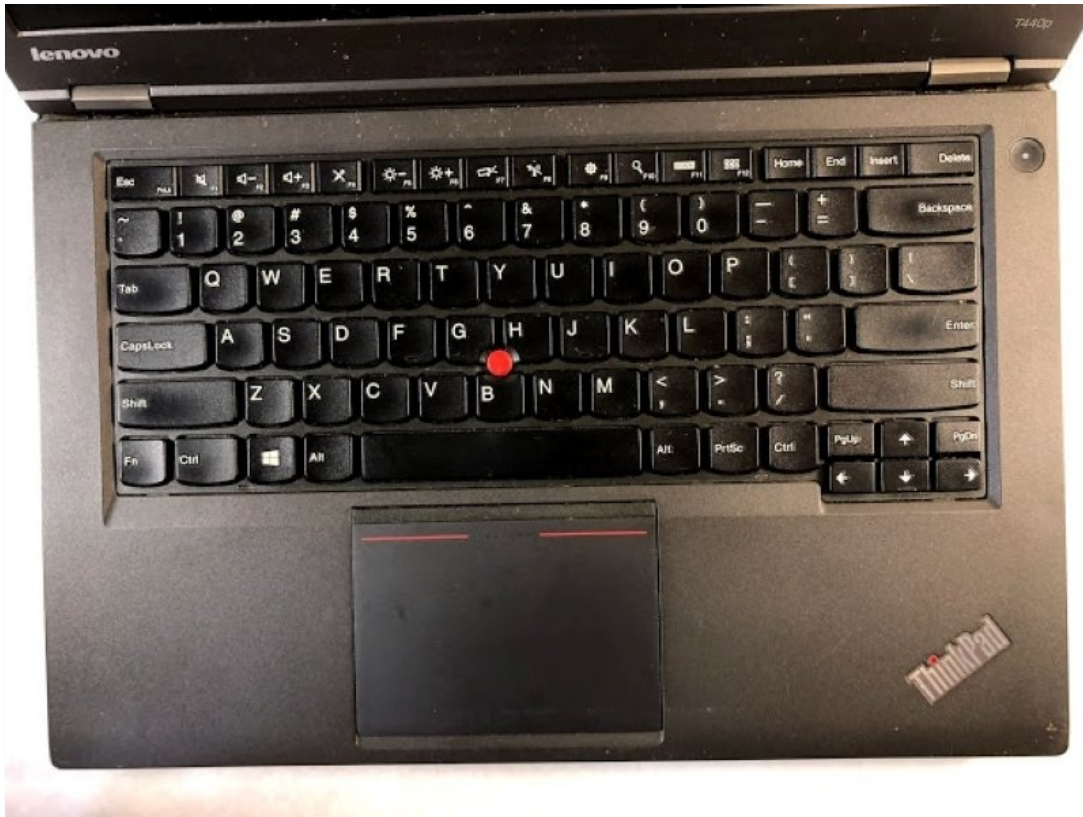

INTRODUCTION

If keys are unresponsive or the whole keyboard is unresponsive you will most likely need to replace the keyboard for your Lenovo ThinkPad T440p. Replacing the keyboard can be quite tedious but will mainly consist of unscrewing screws and using your spudger to lift and remove cables. When removing the plastic cover, remove carefully.

TOOLS:

[Phillips #00 Screwdriver](#) (1)

[Phillips #1 Screwdriver](#) (1)

[Spudger](#) (1)

PARTS:

[Lenovo Keyboard - 04Y0824](#) (1)

[Lenovo Keyboard - 04Y0862](#) (1)

[Lenovo Aftermarket Keyboard - 04Y0824](#)
(1)

Step 1 — Battery




- Flip the laptop so that the back is facing up.

Step 2





- Slide the battery latches to the unlocked position.

Step 3

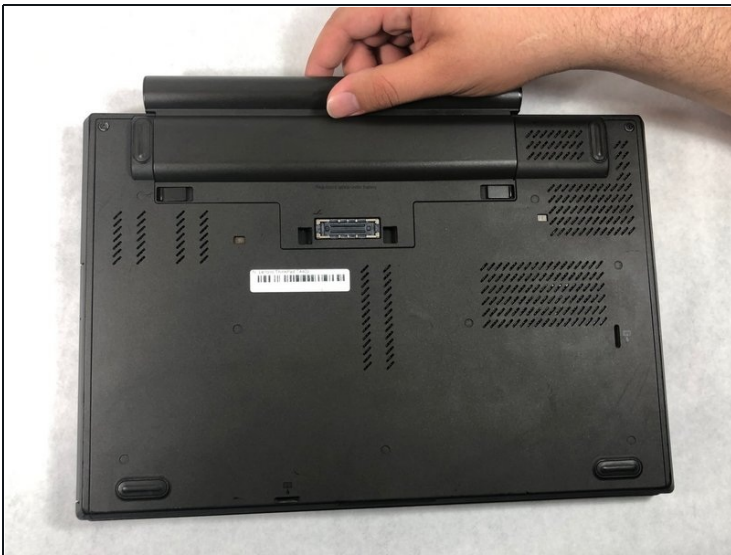


- Slide the battery pack out of the battery slot.

Step 4 — Keyboard

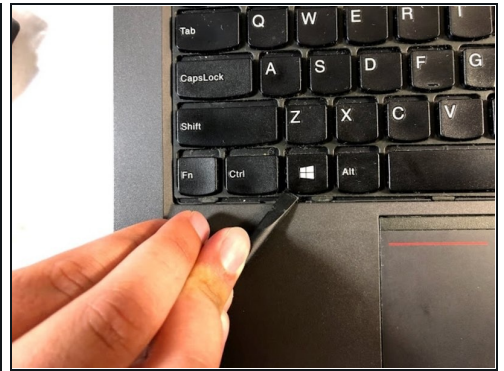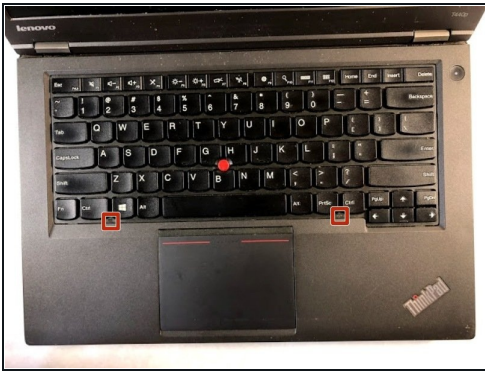

- Using the spudger, move the plastic protector by pressing it down and forward in order to uncover the screws.


Step 5

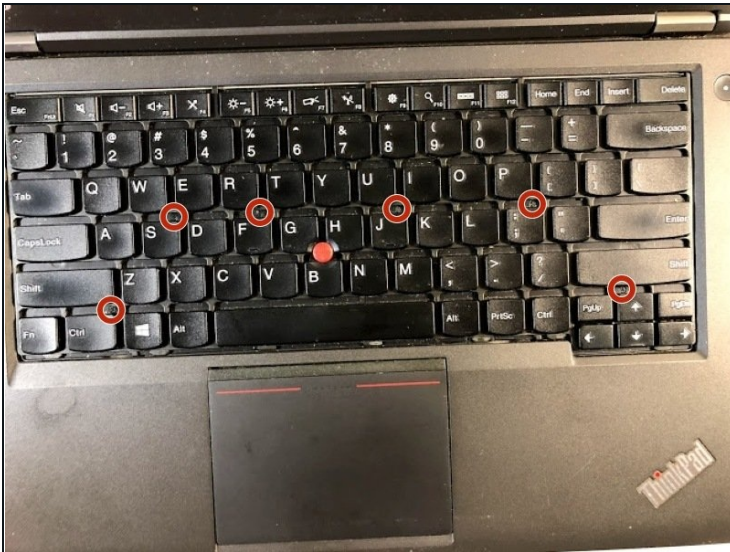

⚠ Don't remove the screws; just loosen them.


- Unscrew the six screws that are attached to the keyboard by using a Phillips #00 screwdriver.

Step 6

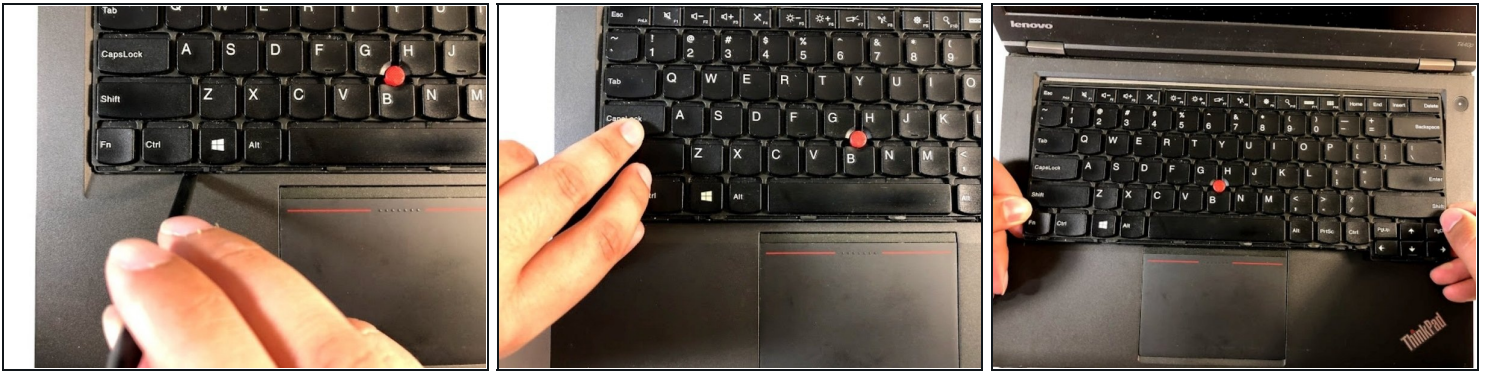




- Use the spudger to lift the keyboard.

Step 7

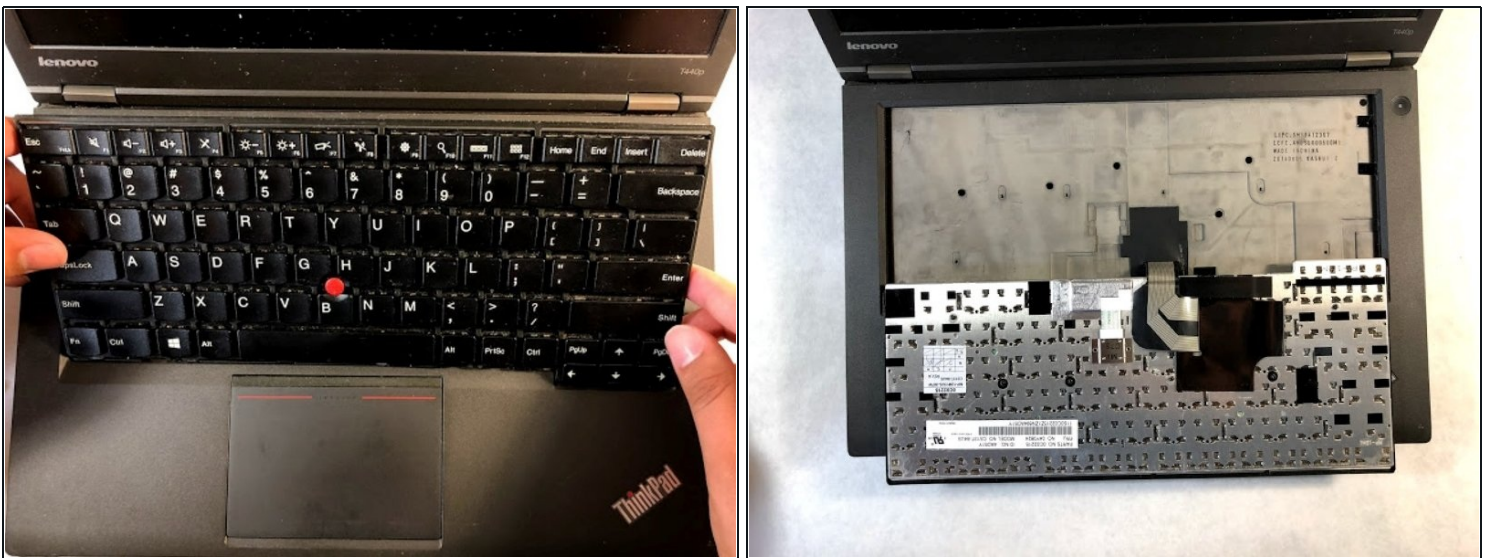




- Turn the keyboard over.

Step 8

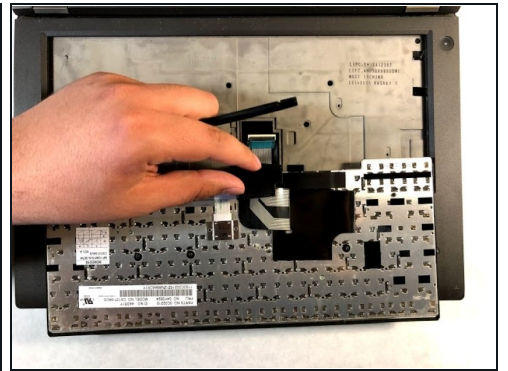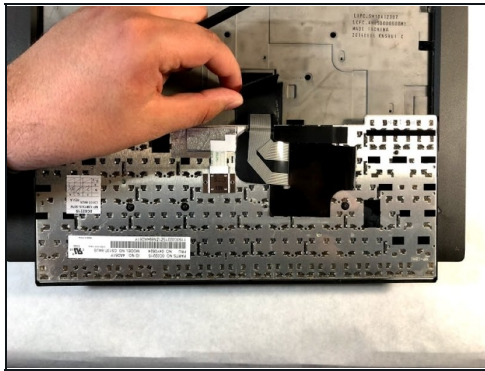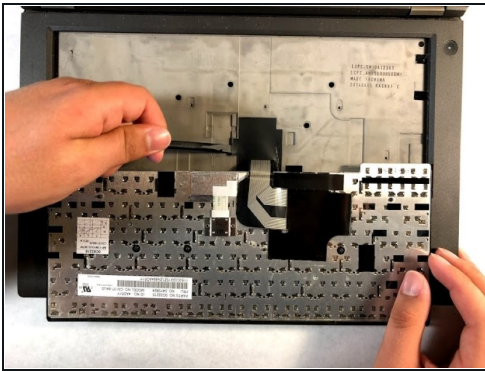


- Use the spudger to detach the plastic protection.

Step 9

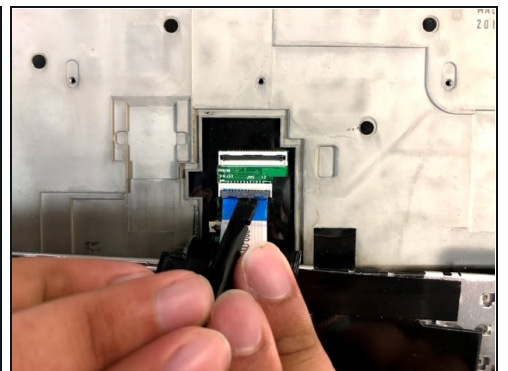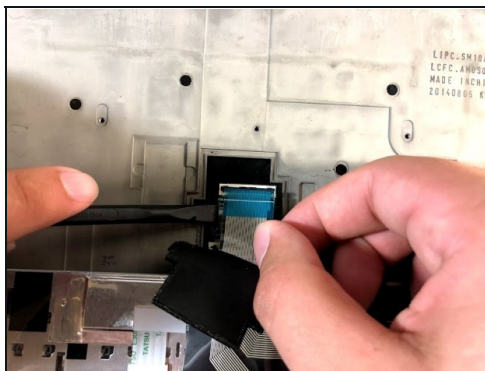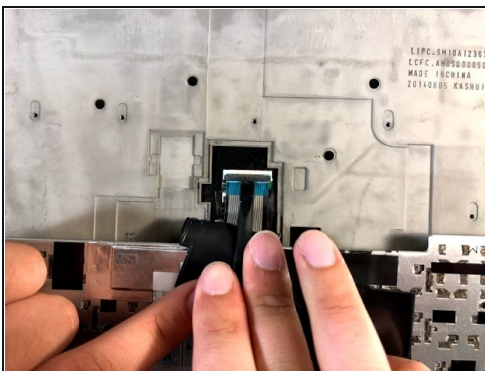

- Use the spudger to disconnect the cables.

Step 10

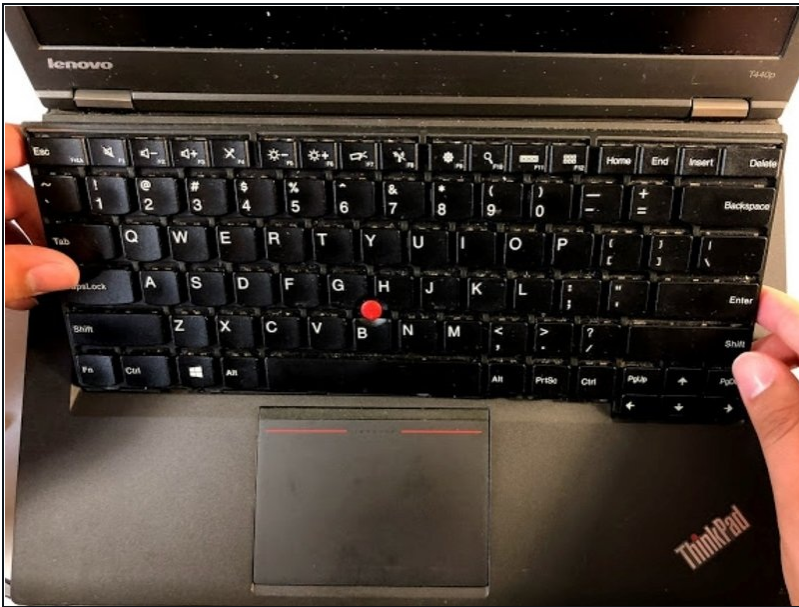

- Remove the keyboard.

To reassemble your device, follow these instructions in reverse order.