


Asus Zenbook UX31E Motherboard Replacement

Use this guide to replace a faulty motherboard...

Written By: Ryne Lee Tucker

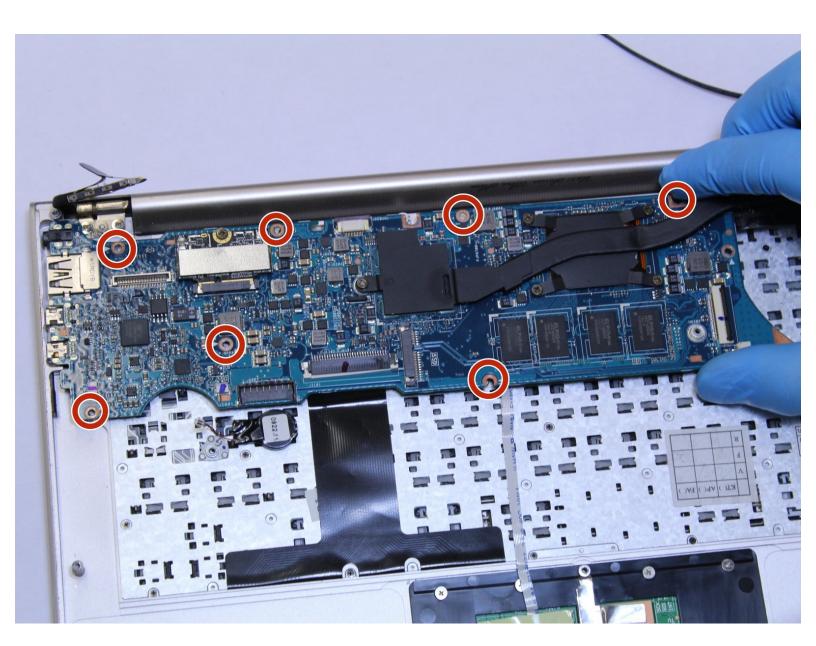

INTRODUCTION

Use this guide to replace a faulty motherboard for Asus Zenbook UX31E.

A motherboard is the most important component in the computer and is necessary for the computer to work well. A faulty motherboard can cause the computer to freeze or glitch, or a blue screen of death occurs where a blue background with a sad face ":(" appear on the screen.

Before starting the repair, make sure to power off your device completely and disconnect from any external power source.



TOOLS:

- T4 Torx Screwdriver (1)
- iFixit Opening Tool (1)
- Phillips #00 Screwdriver (1)
- Phillips #00 Screwdriver (1)
- Anti-Static Wrist Strap (1)

Step 1 — Back Cover



- Using a T4 Torx screwdriver, remove the ten screws at the marked locations.
- i Place the screws into a container as to not lose them.

Step 2



- Carefully slide your iFixit Opening Tool between the back panel.
- Lift the back plate of your ASUS
 ZenBook UX31E, and place it to the side.


Step 3 — Speaker



- Use the plastic opening tool to pry open the back cover of the laptop.
- Remove the bottom panel of the laptop.

Step 4



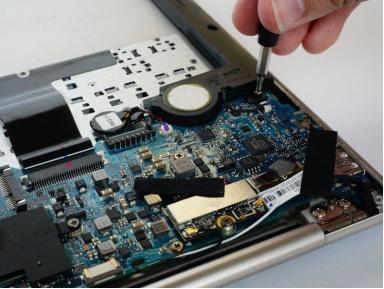


• Remove the screw connecting the speaker component to the motherboard using the screwdriver.




Disconnect the sound cable from the motherboard.

Step 6

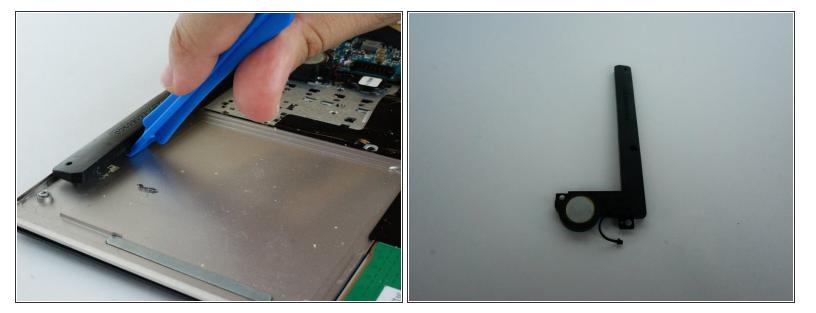

Using the plastic opening tool, pry open the speaker component from the computer.


Step 7 — Battery

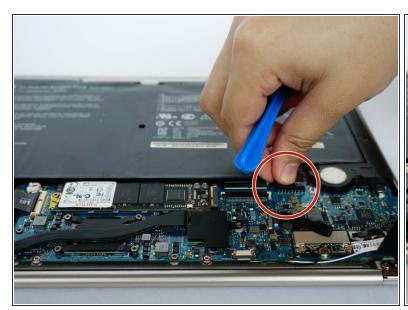



Disconnect the battery from the motherboard by gently pulling up and down on the connector.

Step 8

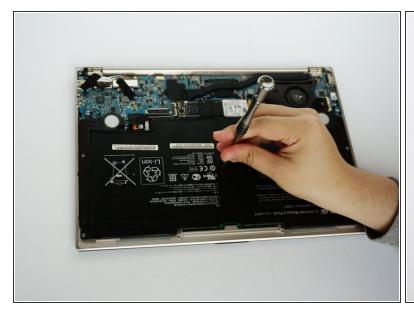




- Using the Phillips #00 screwdriver, remove the screws from the middle and the two corners of the battery.
- (i) Place the screws into a container as to not lose them.







- Remove the battery. (Picture-1)
- Picture of what the battery looks like.(Picture-2)

Step 10 — SSD

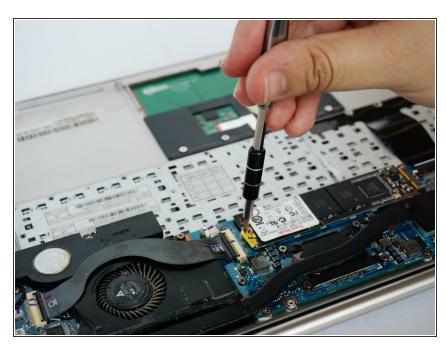


- Attach your Anti-Static Wrist Wrap to something metal as to not shock your system.
 - Peel back the warranty sticker to reveal the screw under it.
- Using your Phillips #00 Precision
 Screwdriver, unscrew the screw that you just revealed.

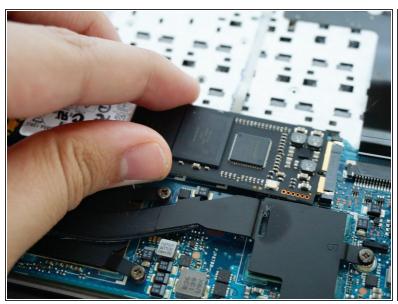


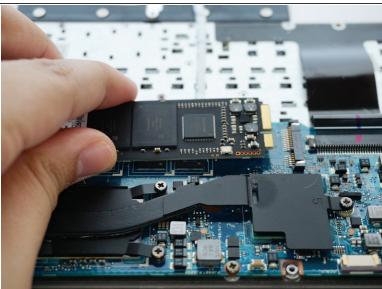


Using your hand, pull the SSD out from its slot.

Step 12 — Fan

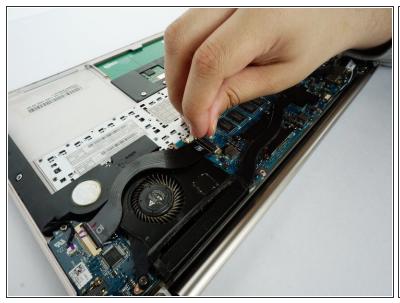

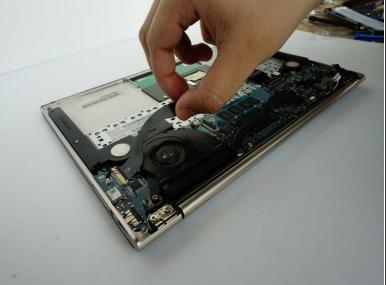



Disconnect the ribbon between the IO and the motherboard on both sides.

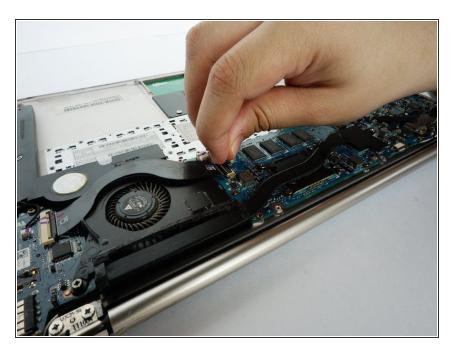


- Disconnect the fan connector from the motherboard.
- Pull up the clips on the ribbon connectors.


Step 14

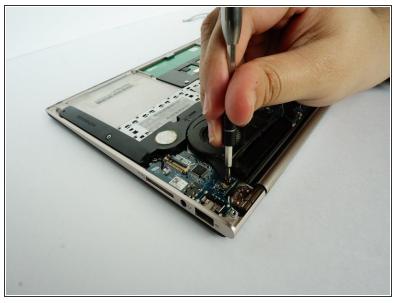

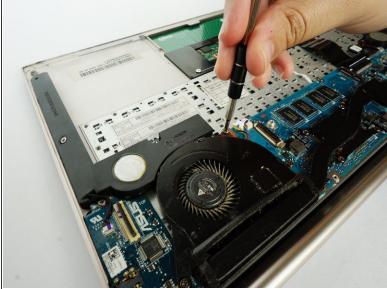


Unscrew the two screws that are across each other.

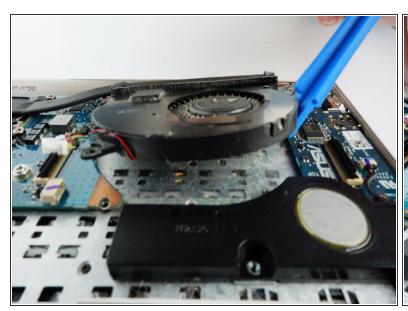


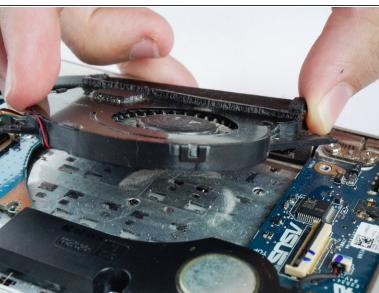


- Using a plastic opening tool, lift the fan off of the laptop.
- You can now use your hands and carefully pull the fan off the laptop.


Step 16 — Motherboard

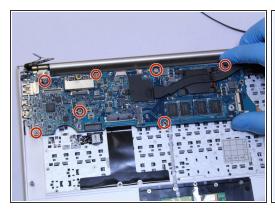


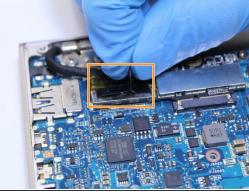

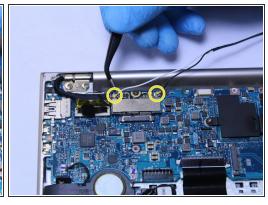

- Remove the 7 screws holding the motherboard in the case with a Phillips #00 screwdriver.
- Remove the press fit connector attaching the motherboard to the screen.
- Remove the two cables that are still attached to the motherboard. You will need to use needle nose tweezers to remove these.

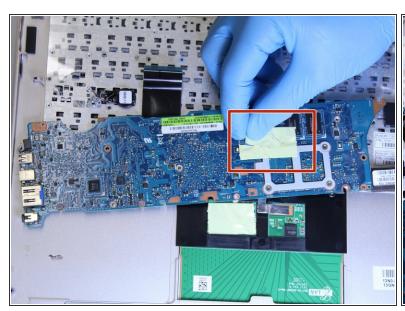

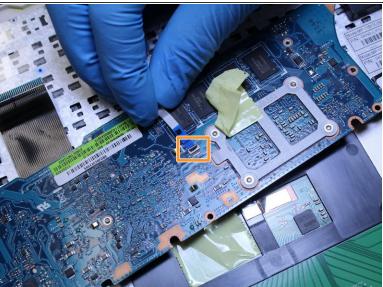

- Lift gently and flip the motherboard over in the direction of the track pad.
- Peel off the the yellow tape.
- Detach the ZIF connector on the underside of the motherboard connecting it to the keyboard.
- Remove the motherboard.

To reassemble your device, follow these instructions in reverse order.