




Dell Inspiron 7568 RAM Replacement

This will serve to instruct how you can remove the RAM from the Dell Inspiron 7568.

Written By: Elijah Basile

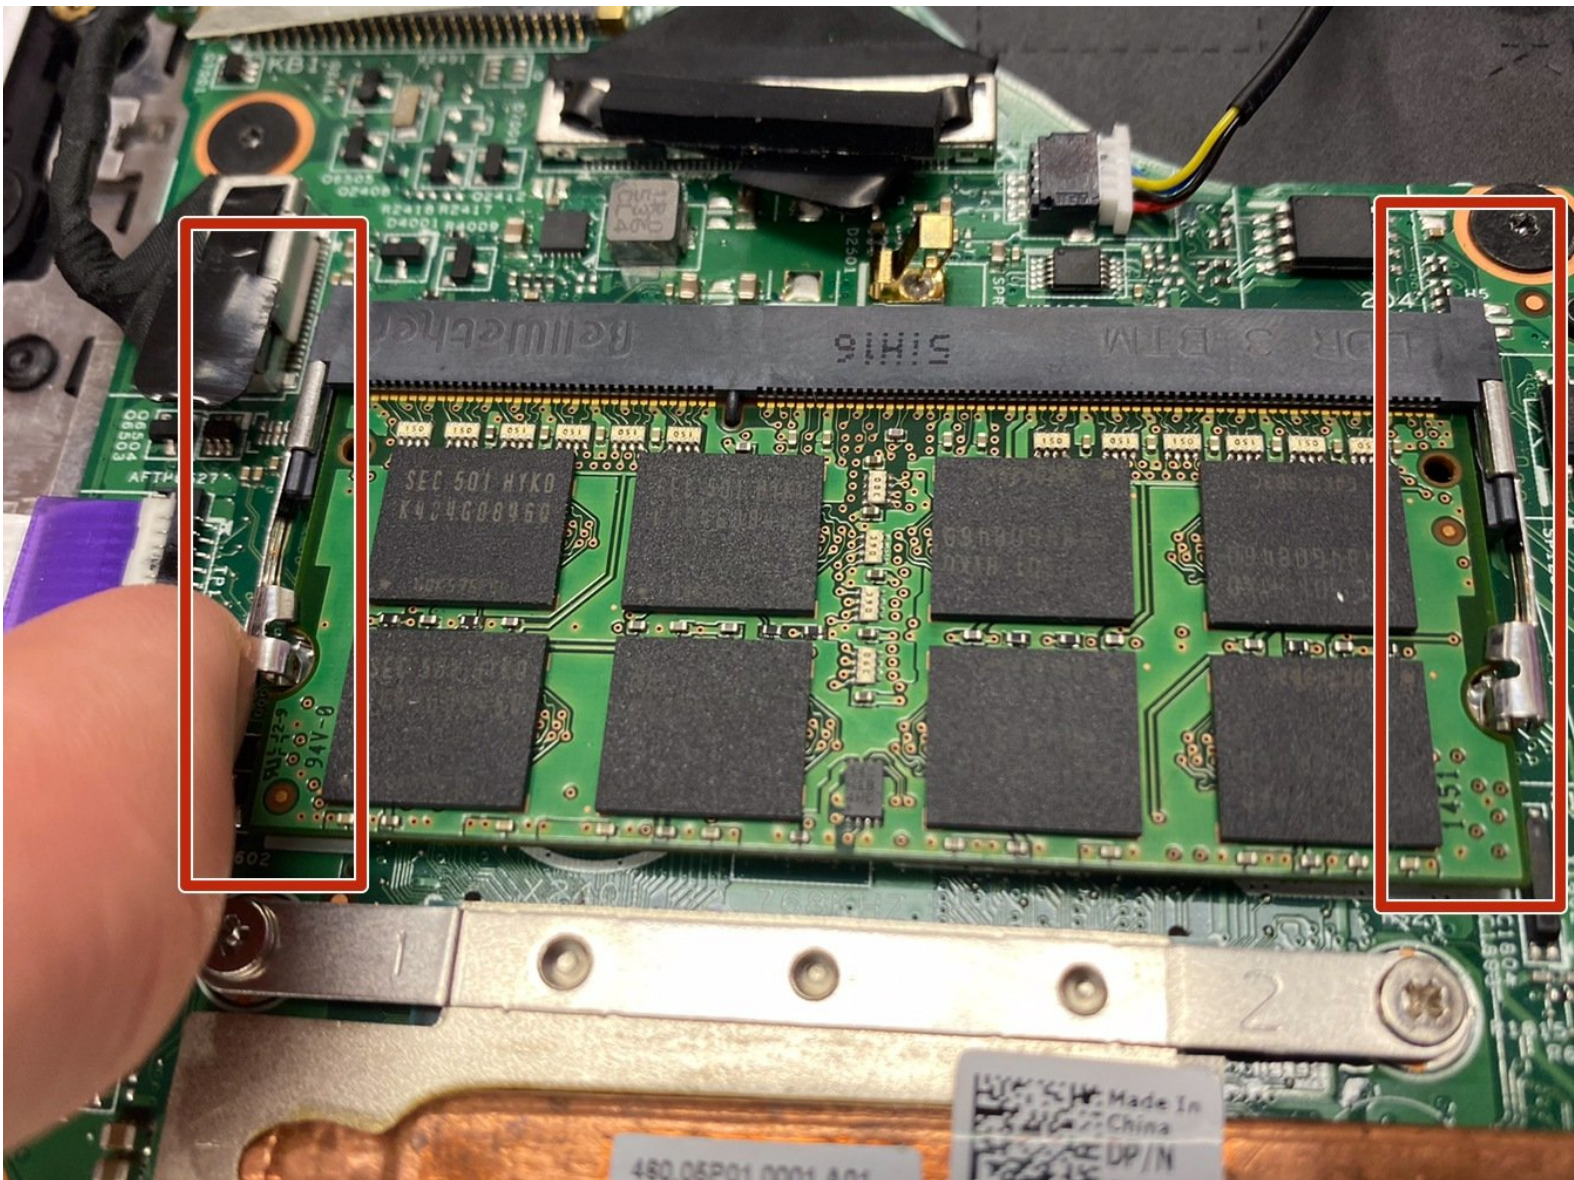



INTRODUCTION

When removing or replacing the RAM of the Dell Inspiron 7568 it is important to make sure the laptop it is unplugged and completely turned off. User should also remember to be careful when unplugging and removing the battery. It is recommended that users keep different screw types separated to keep assembly easier. Make sure to use a Phillips head #1 screw driver. Make sure to work in a static free area with static protection gloves.

TOOLS:



- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery

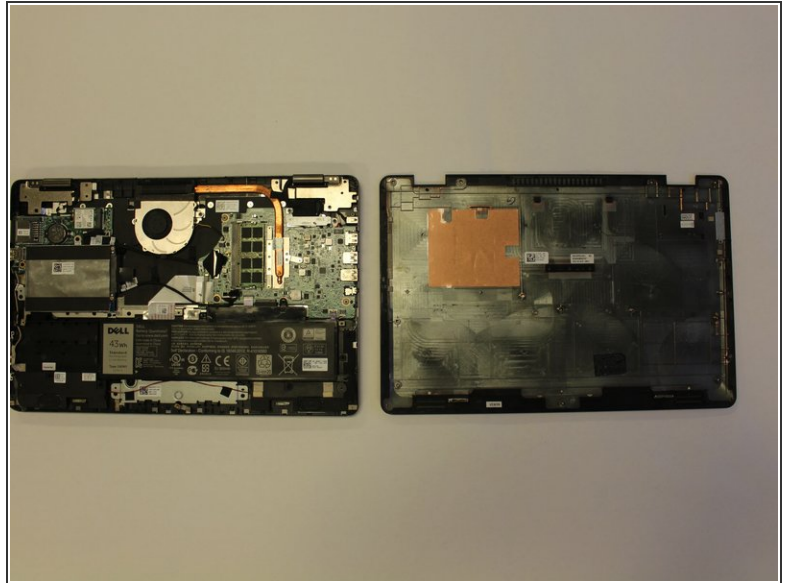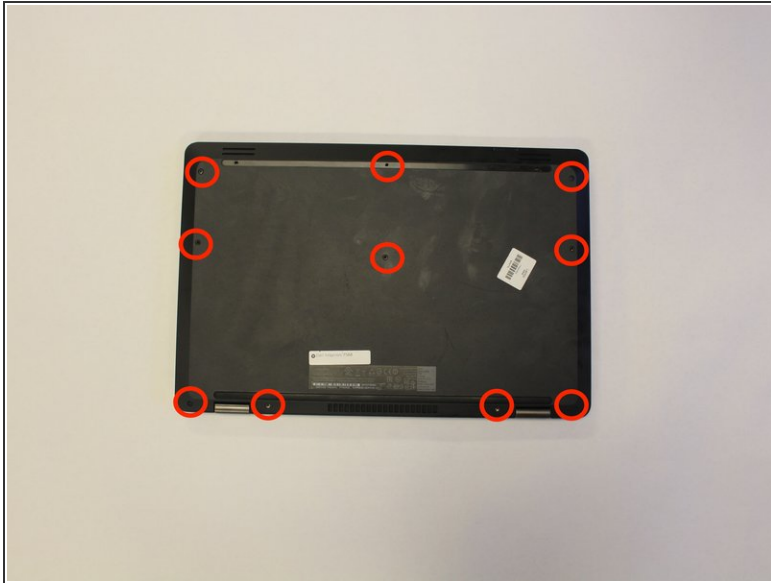


- Remove the ten 7mm Phillips #1 screws on the bottom cover.
- Remove the bottom cover.

Step 2

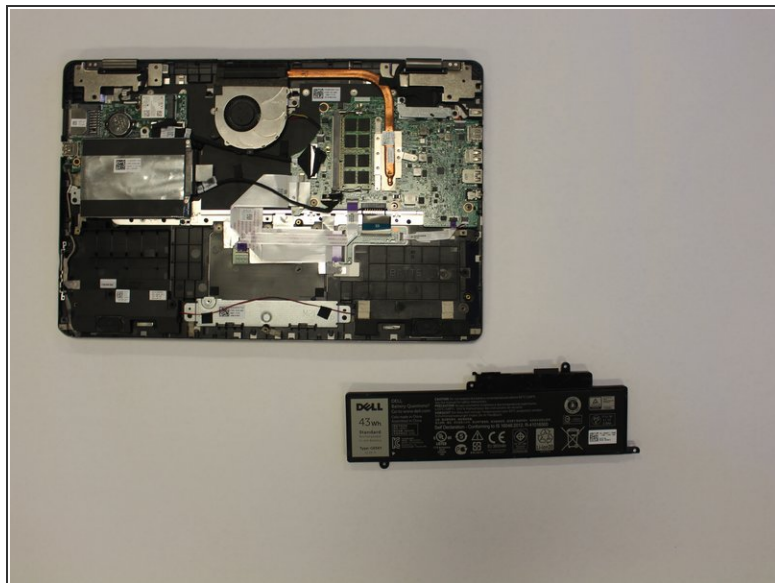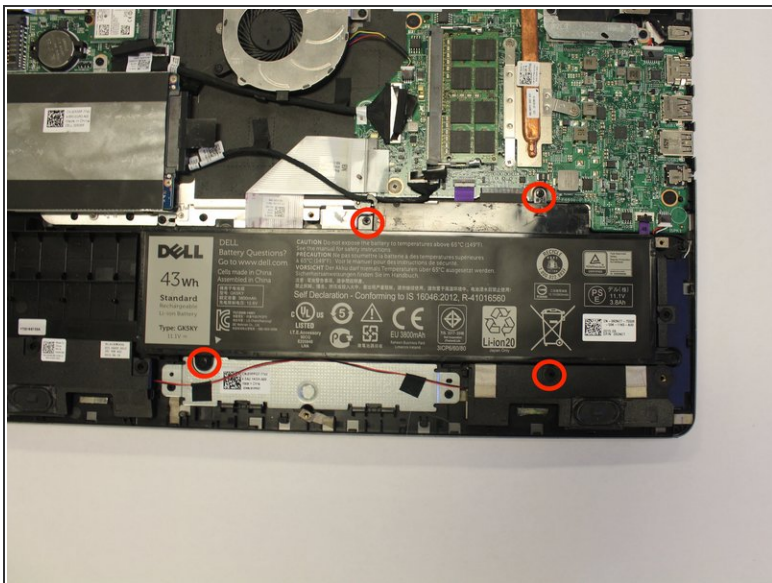



- Remove the four 3mm Phillips #1 screws holding the battery.
- Unhinge the connector cable to the battery.
- Remove the battery.

Step 3 — RAM

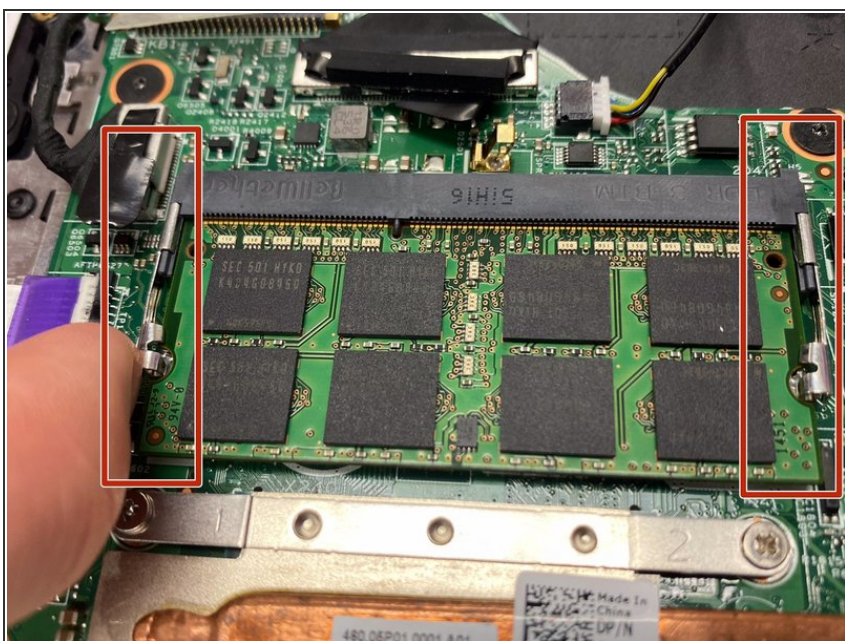

- Release the RAM by unhinging the connecting bars outward.

Step 4

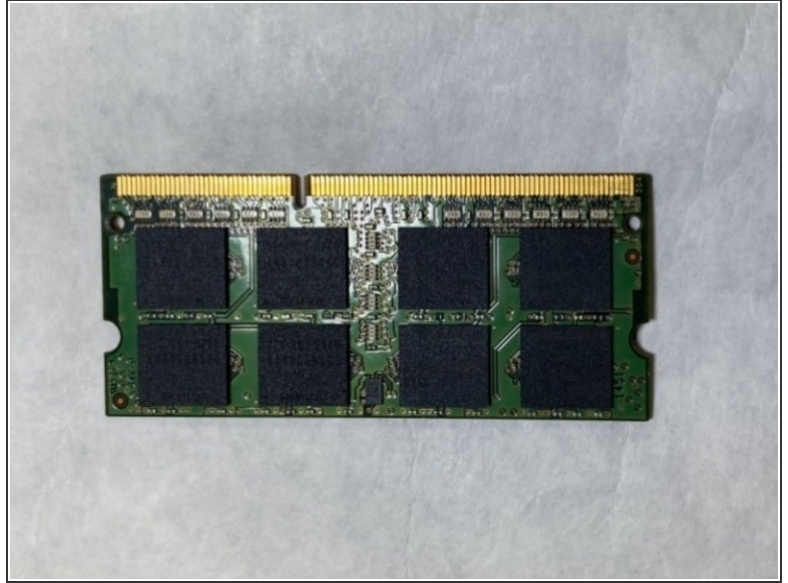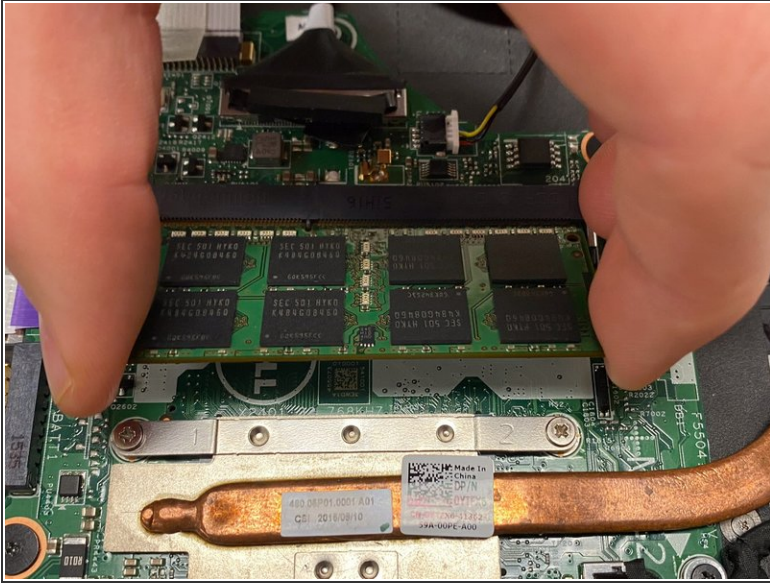

- Remove the RAM.

To reassemble your device, follow these instructions in reverse order.