



Teddy Ruxpin Battery Replacement

This guide will tell you how to open up your Teddy Ruxpin properly to remove and replace the battery.

Written By: Lauren



INTRODUCTION

If your Teddy Ruxpin is not turning on you may need to replace the battery. This is a replacement guide for removing the batteries from the Teddy Ruxpin model #17262DS. For this guide, you will need four double AA batteries and a Phillips #2 screwdriver head. This replacement guide should be quick and easy.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)



PARTS:

- [AA Batteries](#) (4)

Step 1 — Battery



- Remove the vest covering the back of the bear.
- Orient the bear with his back facing upwards and unscrew the single Phillips #2 screw.
- ⓘ Captured screws will stay in place, no need to worry about losing this one!

Step 2



- Pull the tab outward to remove the protective plate for the batteries.

Step 3



- Remove all four AA batteries by pushing the positive end down and pulling the battery out toward yourself.

To reassemble your device, follow these instructions in reverse order.