



Acer Aspire AS3810TZ-4806 Battery Replacement

Use this guide to replace the battery in your Acer Aspire AS3810TZ-4806.

Written By: Anahit Kirakosian



INTRODUCTION


This guide will show you how to replace your faulty battery. You will need your new battery ready on hand to replace the old one. This part is located at the back of your device. The battery provides power to your device and if it fails your device will not turn on.

Step 1 — Battery



- Unlock the battery release by sliding it to the right.

Step 2

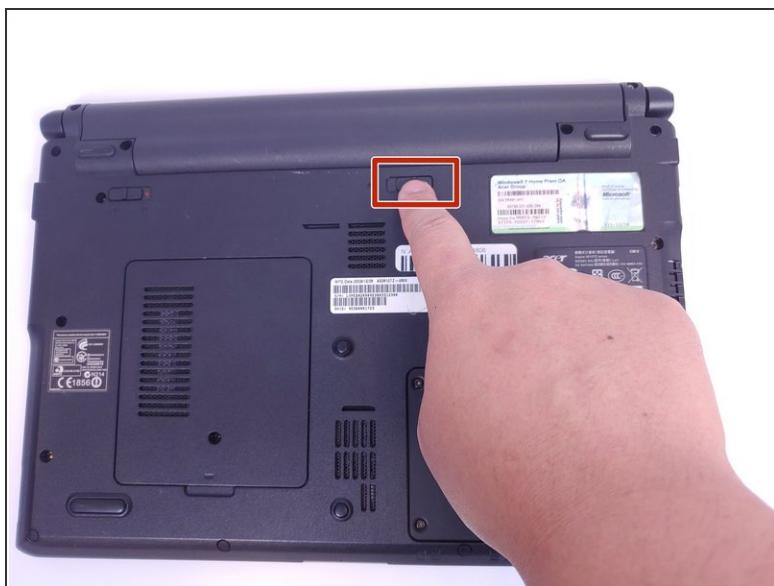

- Slide the release button and remove the battery.

To reassemble your device, follow these instructions in reverse order.