



Acer Aspire AS3810TZ-4806 Hard Drive Replacement

Use this guide to replace the hard drive in your Acer Aspire AS3810TZ-4806.

Written By: Matthew Ibanez



INTRODUCTION

This guide will take you through the steps to replace you Acer's hard drive. Make sure you completely power down your laptop and remove the battery before you begin.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Unlock the battery release by sliding it to the right.

Step 2

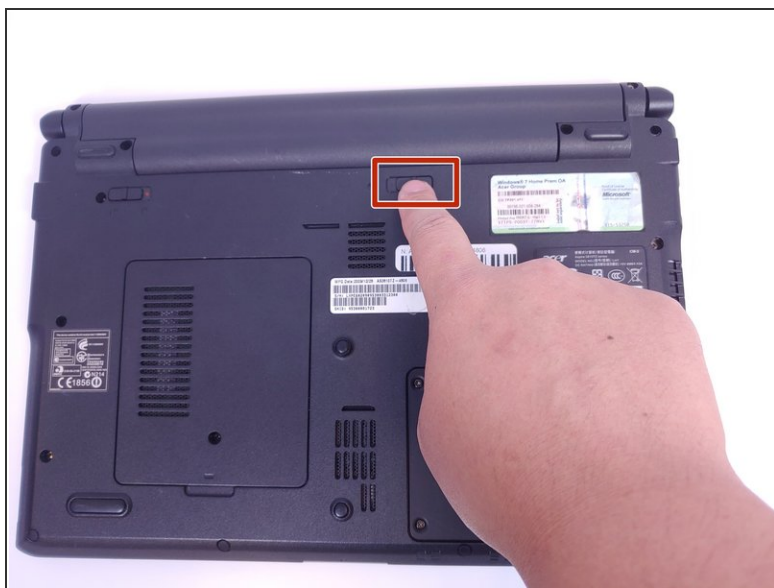

- Slide the release button and remove the battery.

Step 3 — Hard Drive



- Make sure your device is powered off and the battery is removed.

Step 4



- Using the Phillips #1 screwdriver, remove the three Phillips screws on the hard drive cover so the cover may be removed.

Step 5



- After the cover is removed, remove the hard drive from the device.

To reassemble your device, follow these instructions in reverse order.