




Acer Aspire AS3810TZ-4806 Screen Replacement

Use this guide to replace the screen in the Acer Aspire AS3810TZ-4806.

Written By: Matthew Ibanez

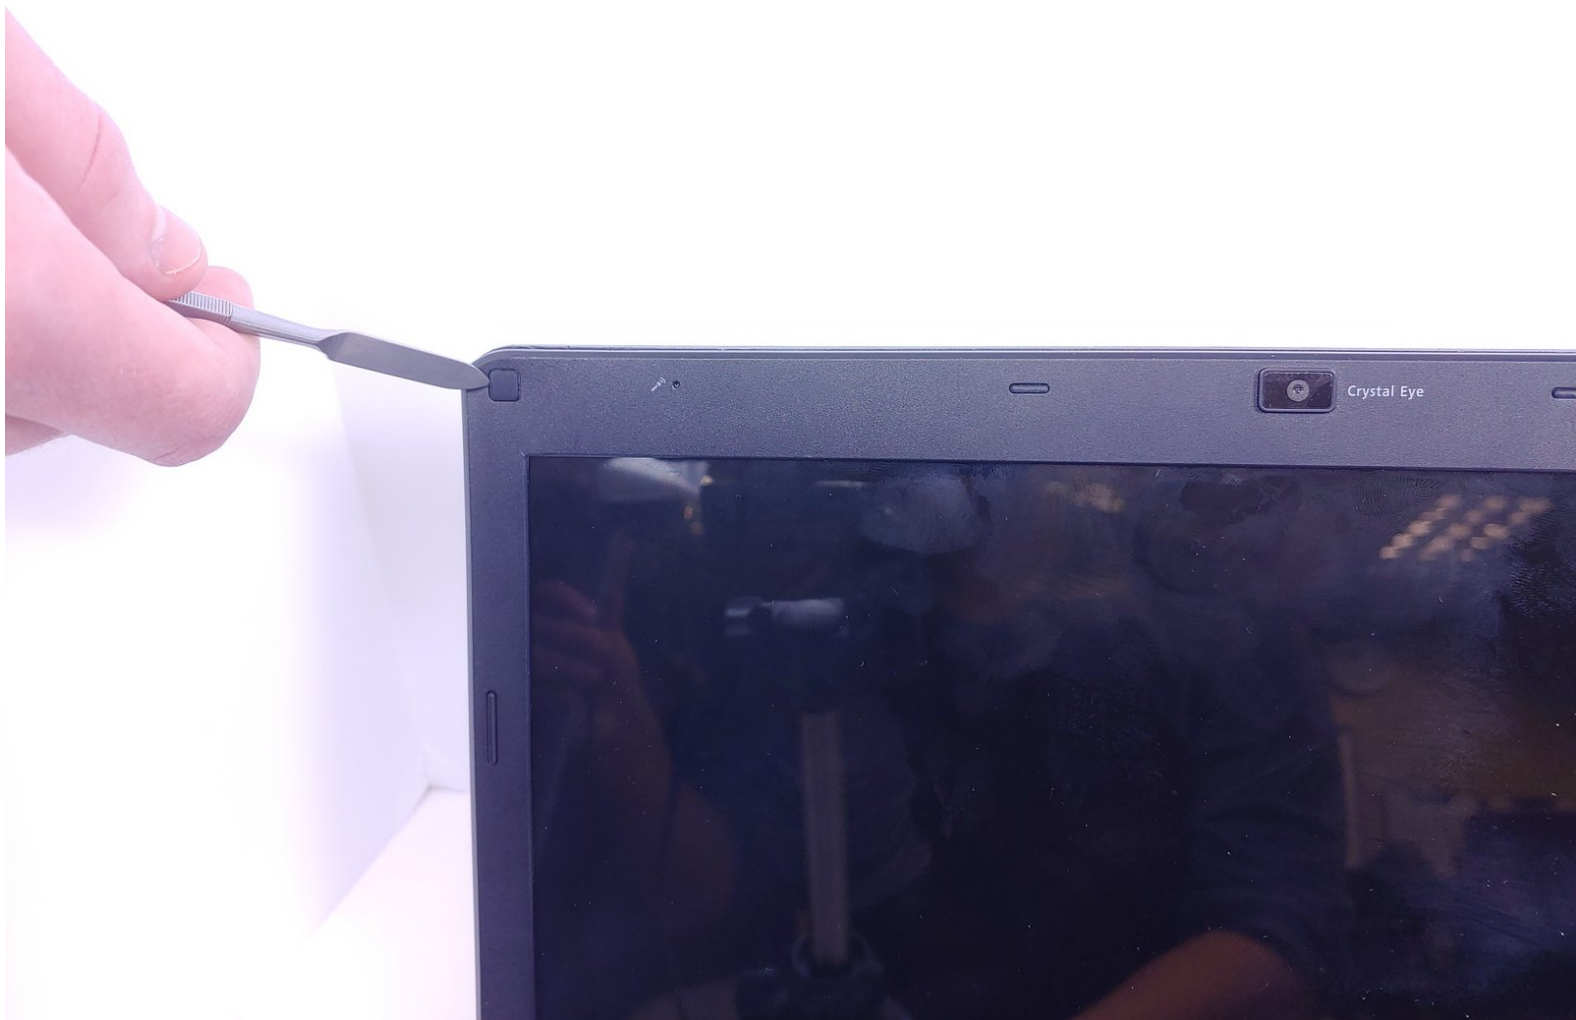

INTRODUCTION

For this repair you will need a phillips screwdriver. Make sure your laptop is completely powered off and remove the battery

TOOLS:


- [Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery





- Unlock the battery release by sliding it to the right.

Step 2

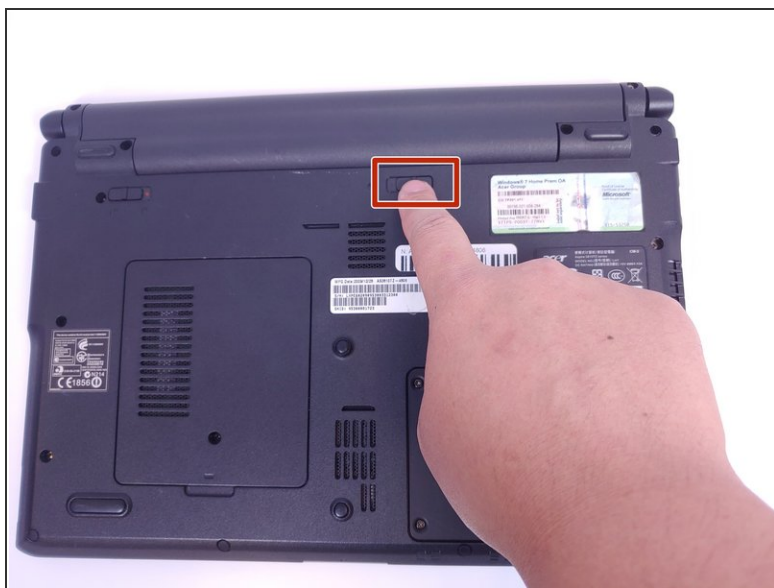


- Slide the release button and remove the battery.

Step 3 — Screen

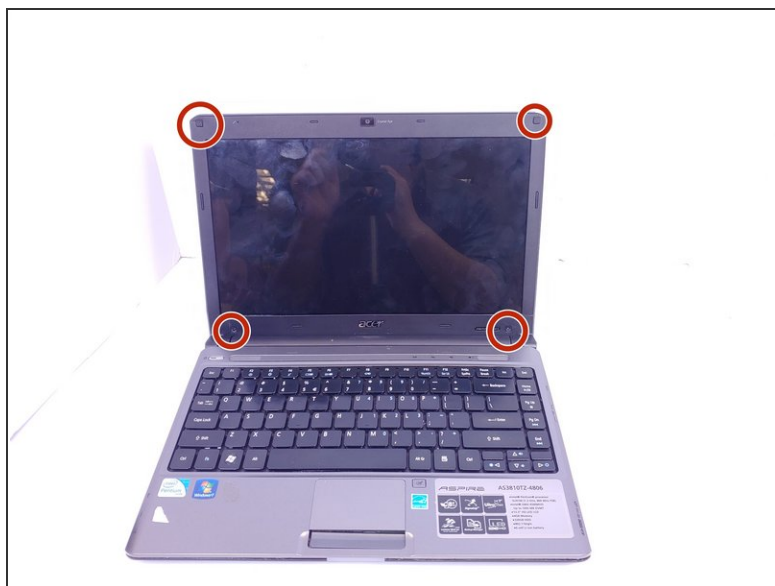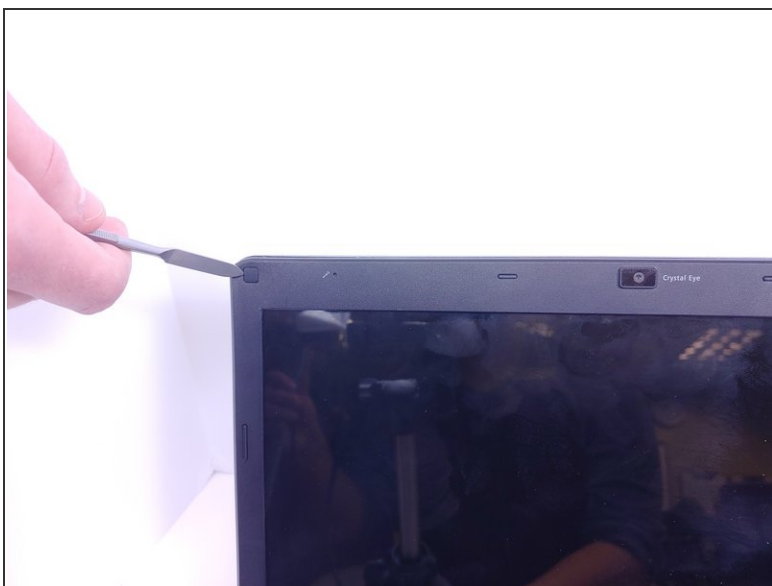


- Remove the rubber covers from the corner of the screen.

Step 4

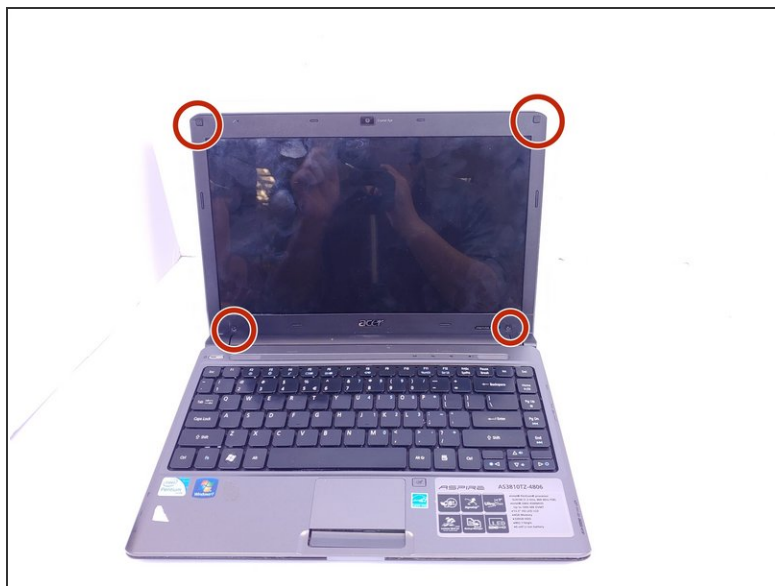

- Using the Phillips #1 screwdriver, remove the four screws holding the plastic siding to the screen.

Step 5

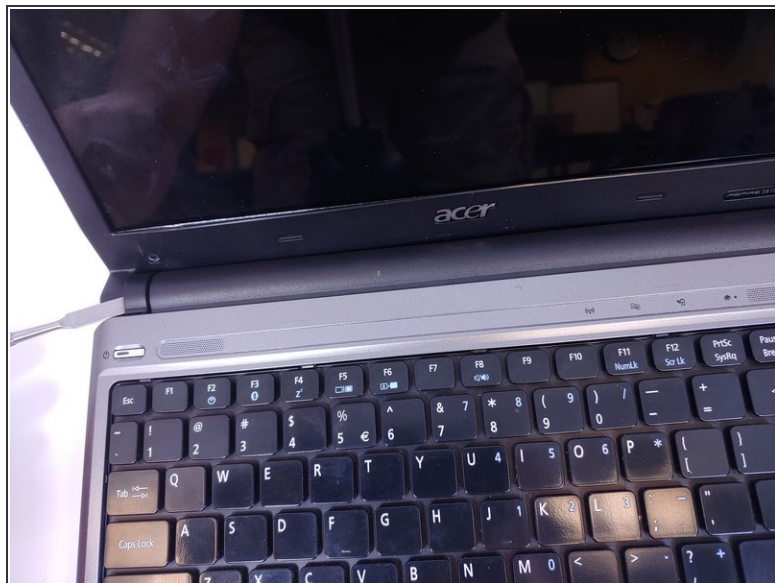




- Remove the plastic joint covers.

Step 6




- Remove the plastic siding from the screen.

Step 7

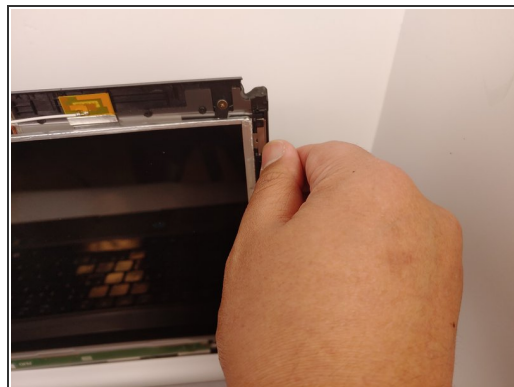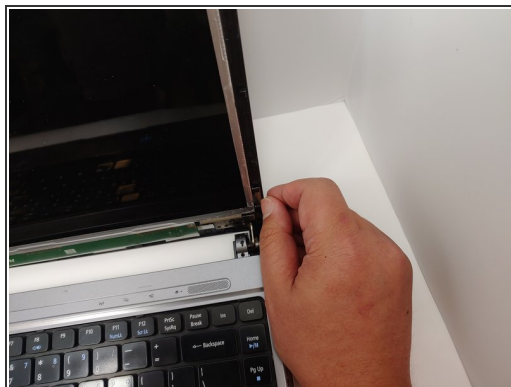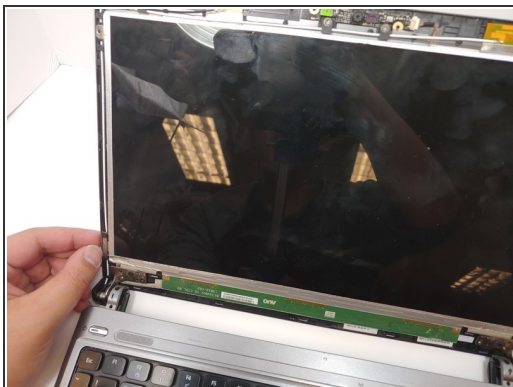

- Remove the four metal bars in each corner of the screen.

Step 8

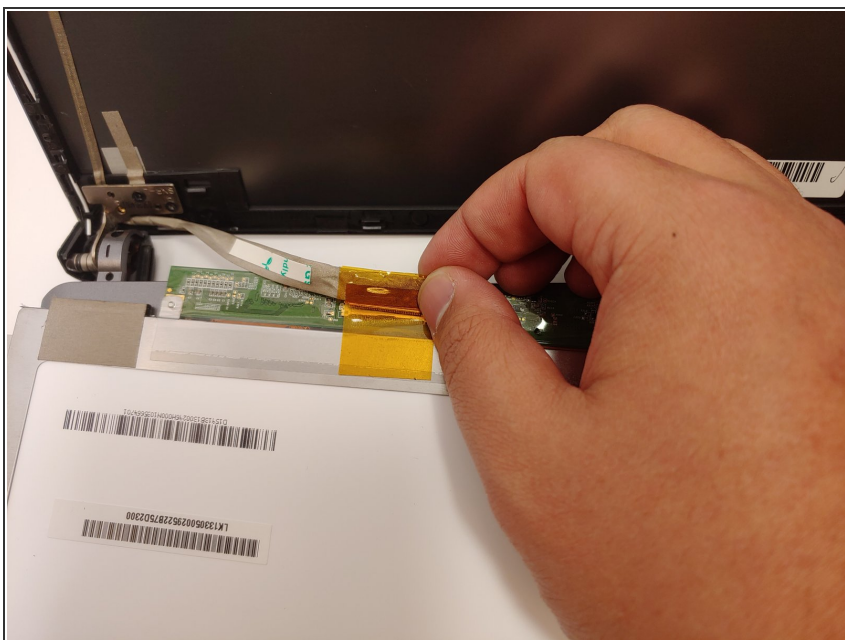

- Unplug the screen from the keyboard.

To reassemble your device, follow these instructions in reverse order.