



Acer Aspire AS3810TZ-4806 Trackpad Replacement

Use this guide to replace the trackpad in your Acer Aspire AS3810TZ-4806.

Written By: Matthew Ibanez



INTRODUCTION

For this guide you will need a phillips screwdriver. Make sure your laptop is completely powered off and the battery is removed. Remove the RAM and Hard drive before starting this guide.



TOOLS:


- [Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Unlock the battery release by sliding it to the right.

Step 2

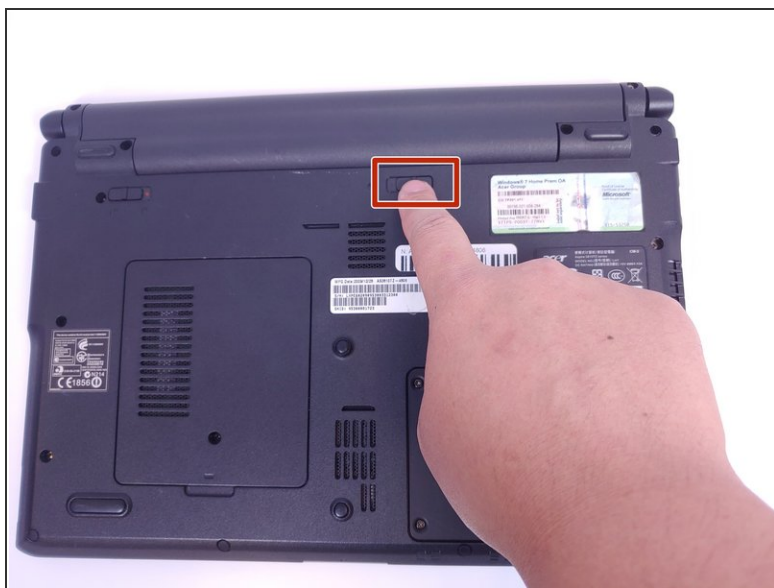

- Slide the release button and remove the battery.

Step 3 — Trackpad




- Using the Phillips #1 screwdriver, unscrew the ten screws securing the back panel.

Step 4




- Remove the two black connectors at the base of the screen.

Step 5

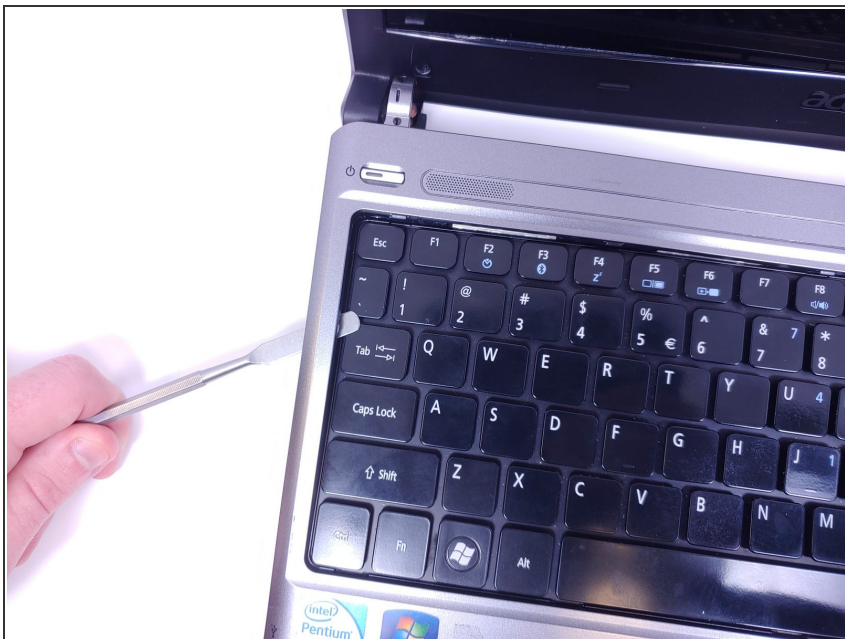

- Remove the grey keyboard cover with a spudger.

Step 6

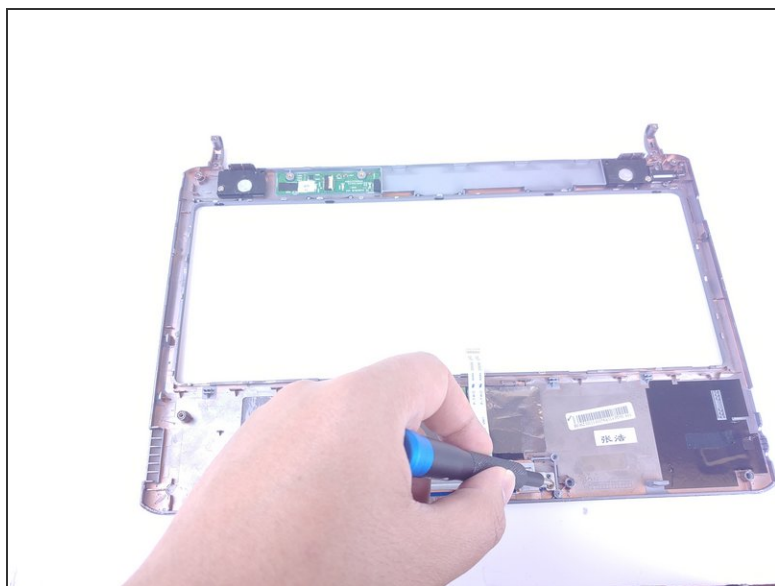

- Unscrew the trackpad sensor from the keyboard cover and remove the sensor.

To reassemble your device, follow these instructions in reverse order.