




Lenovo Yoga 720-15IKB Display Replacement

If the screen in the Lenovo Yoga 720-15IKB is...

Written By: Ryan Stewart

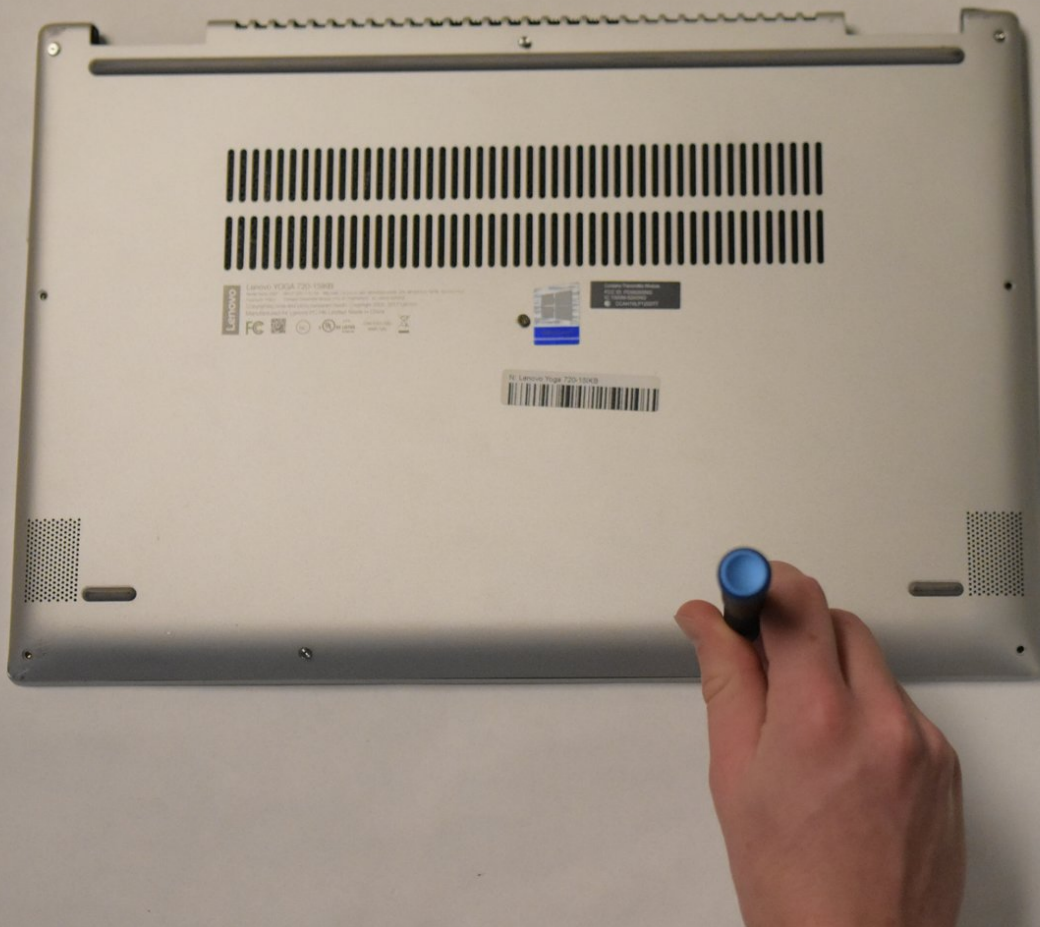

INTRODUCTION

If the screen in the Lenovo Yoga 720-15IKB is not properly displaying images or is cracked, it may be time to replace it. Follow these instructions to replace the display in your laptop.



TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [Tri-point Y000 Screwdriver](#) (1)
- [iFixit Opening Picks \(Set of 6\)](#) (1)
- [iFixit Opening Tool](#) (1)



PARTS:


- [Lenovo Yoga 720-15IKB FHD LCD Panel](#) (1)
- [Lenovo Yoga 720-15IKB LCD Panel](#) (1)

Step 1 — Bottom Cover



- Power off the device before starting.
- Flip the device over with the hinges facing away from you.
- Remove seven 5.0 mm Torx T5 screws.
- Remove three 9.5 mm Torx T5 screws.

Step 2

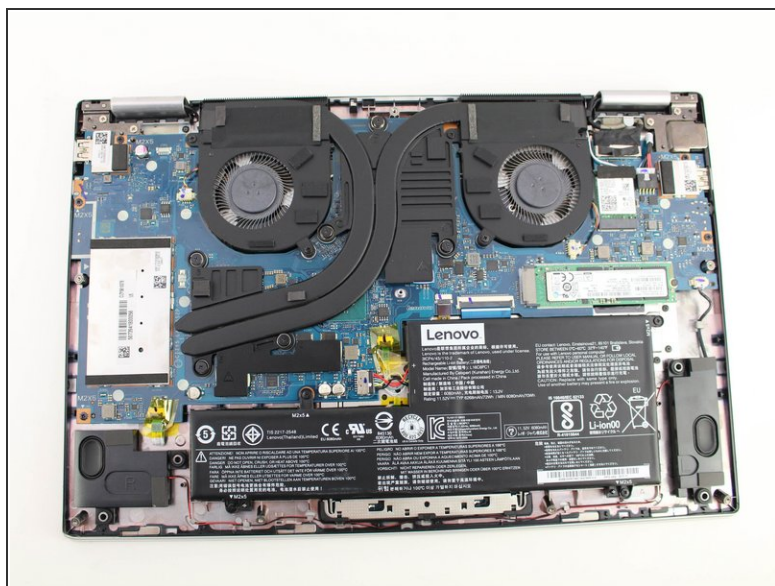

- Pry around the edges from one side to another with a plastic opening tool.


⚠ Do not pry on the side with the hinges because this can break the cover.

- Lift the case from the front until you feel resistance.

⚠ Do not keep lifting after you feel resistance, or the bottom cover can break.

- Pull the cover towards you, away from the hinges.
- Completely lift off the cover.

Step 3 — Display

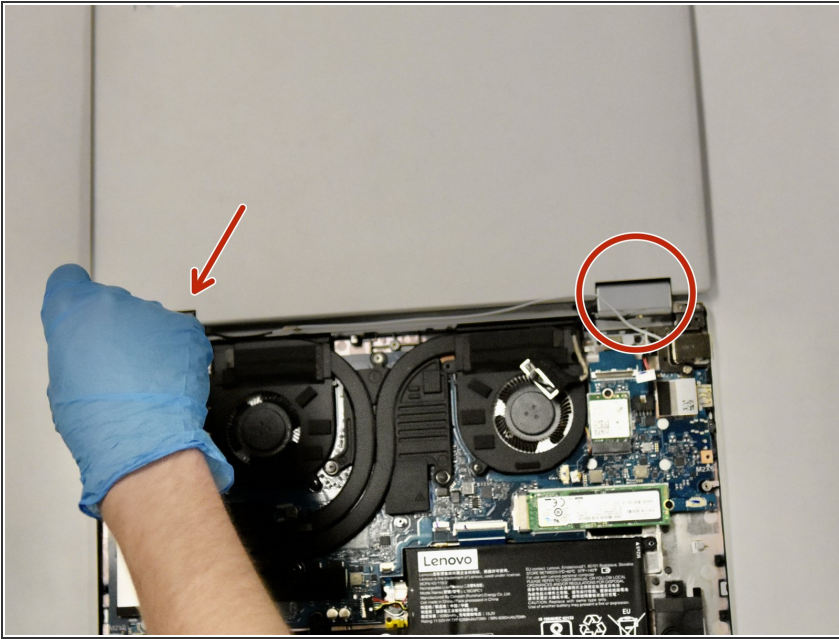

- Remove the 6, 2.5x5 screws, located on the hinges of the underside of the device.
- Separate the display from the back panel. The display should be away from the actual computer itself.

Step 4



- Use the opening picks and opening tool to pry off each side without cracking the display.
- Once that is finished, carefully lift it up and place it on a safe surface.

To reassemble your device, follow these instructions in reverse order.