



2002 Toyota Tacoma Headlight Bulb Replacement

How to easily remove and replace your broken headlight bulb in a 2002 Toyota Tacoma

Written By: Drake Fenwick



INTRODUCTION

It is very easy to remove and replace your headlights in your 2002 Toyota Tacoma. You can save a lot of time by replacing the bulb yourself. The replacement is a H4 9003 bulb. The process is easy and requires no tools to get the job done.



PARTS:


- [Headlight Bulb](#) (1)
H4 9003 Bulb

Step 1 — Headlight Bulb




- Pull the lever under the steering wheel.

Step 2

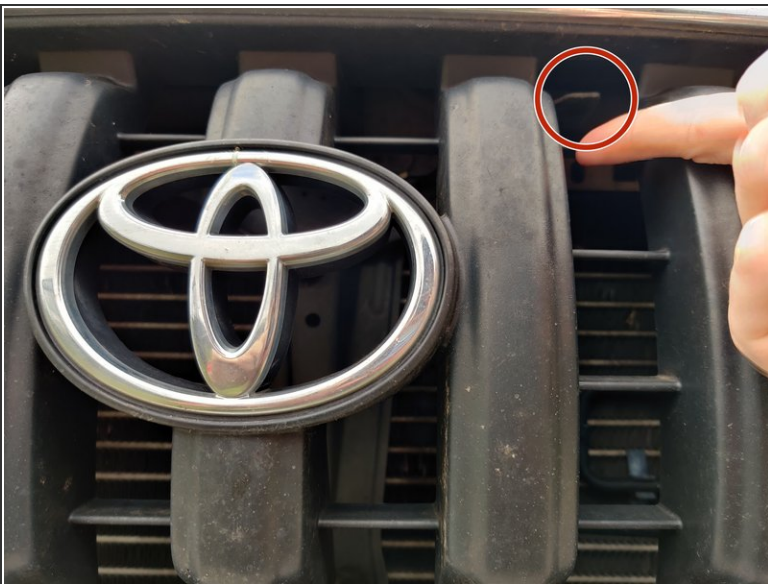


- Pull up on the lever under the hood.
- At the same time, lift the hood of the car.

Step 3

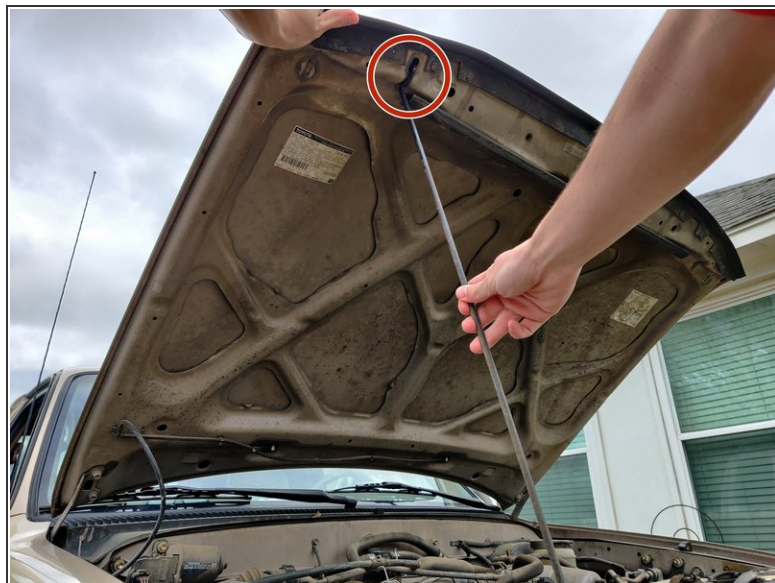

- Remove the metal rod.
- Insert the metal rod to hold the hood in place.

Step 4

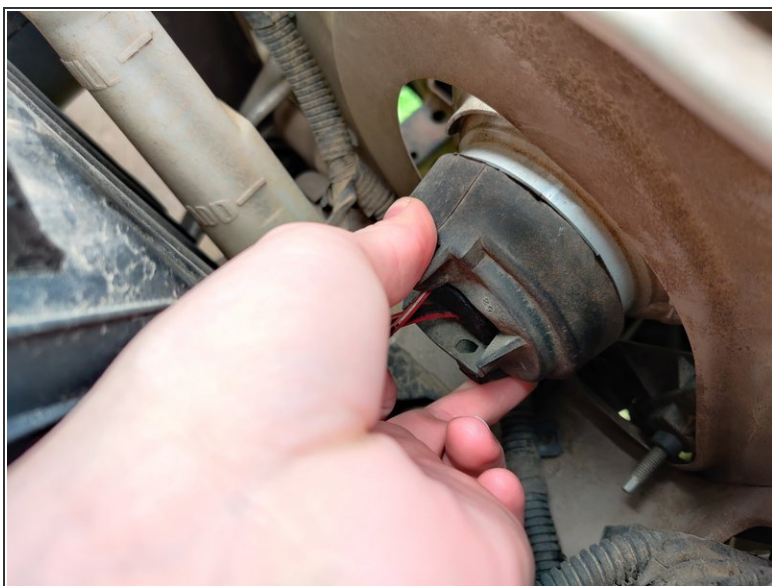

- Pinch the rubber cover and disconnect the headlight bulb.

Step 5



- Push down on the metal lever to release it. After you have released the lever you can remove the bulb.

Step 6



- Remove the headlight bulb cover when you are ready to install it.
- ⓘ Do not touch the bulb or let it touch anything to prevent it from getting damaged.

To reassemble your device, follow steps 3-5 in reverse order. At the end of step 3 make sure to push down on the hood to lock it back into place.

