




# Dell Latitude D620 Battery Replacement

This is a guide on how to replace the battery for the DELL Latitude D620.

Written By: Hezekiah Brown

## Step 1 — Slide two latch releases.



 Shut down your computer. Disconnect all power sources before opening the computer cover or panels.


- Slide the two battery-bay latch releases on the bottom of the computer toward the sides of the computer until they are engaged.

## Step 2 — Grasp battery by battery tab.



- Grasp the battery by the battery tab and slide the battery horizontally toward the front of the computer.

### Step 3 — Lift to remove the battery from the bay.

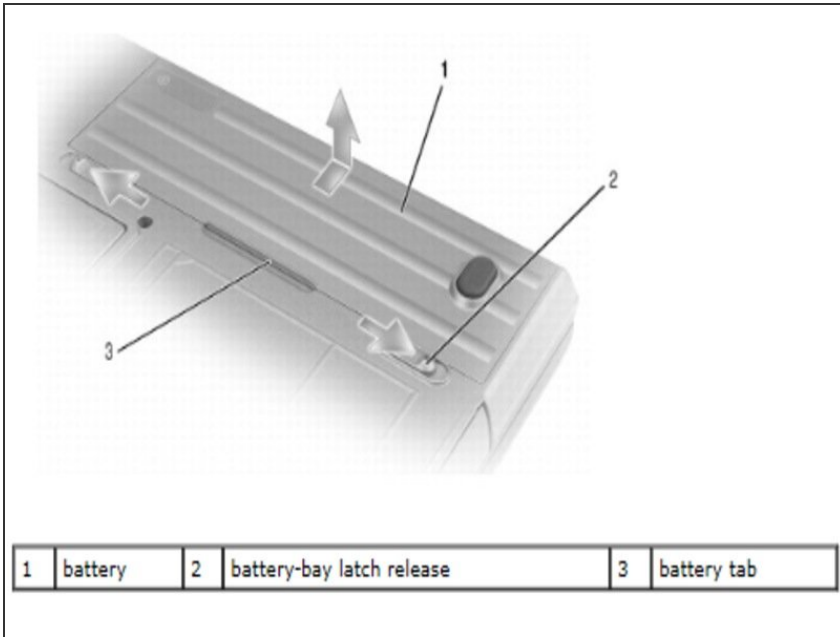

- Lift to remove the battery from the bay.

### Step 4 — Press the power button to ground the system board.



- Press the power button to ground the system board.

**Step 5 — Remove any installed ExpressCards from the ExpressCard slot.**

- Remove any installed ExpressCards from the ExpressCard slot.

To reassemble your device, follow these instructions in reverse order.