

2007-2012 Nissan Altima Key Fob Battery Replacement

Written By: Johnrich Mbwambo



2.5 mm Flathead Screwdriver (1)

CR2032 Lithium Battery (1)

Step 1 — Key Fob Battery



 Slide the switch on the back of the key fob and release the physical car key that is stored inside.

Step 2



• Insert the small flathead screwdriver into the small notch on the left side of the key fob and carefully pry apart.

Step 3



• Pry out the old CR2032 3V battery with the flathead screwdriver.

⚠ Don't insert the screwdriver near the metal battery contacts so as to avoid damaging them.