



1994-2004 Ford Mustang Headlight Replacement

This guide is for the purpose of demonstrating...

Written By: Josiah Crutchfield



INTRODUCTION

This guide is for the purpose of demonstrating how to remove and replace the headlights in a 1994-2004 Ford Mustang. There are no safety hazards for this fast fix, and the difficulty level is not high. To complete this fast fix, no prior mechanical experience is needed beyond knowing how to tighten and loosen a screw. Since the car is old, you may need to lubricate certain parts to assist in the removal of them, and some connecting pieces may be worn or broken. The bulb can easily be found at an auto-parts store.

Prior to beginning your guide, make sure that your car is off and the emergency break is on.

TOOLS:

11mm Wrench (1)

12mm Wrench (1)

Large Needle Nose Pliers (1)


Headlight Bulb (1)

Step 1 — Headlights




- To open the hood, pull the release lever by your foot break inside the car.

Step 2

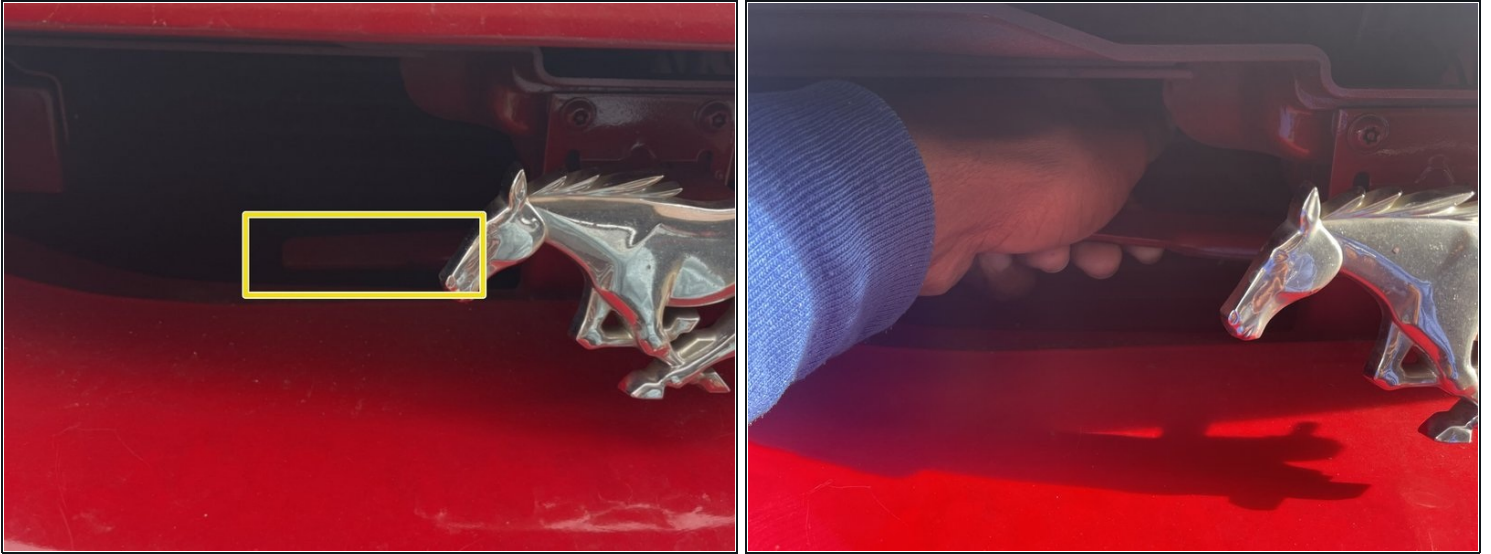

- To raise the hood, lift up on handle at the front of the hood.

Step 3

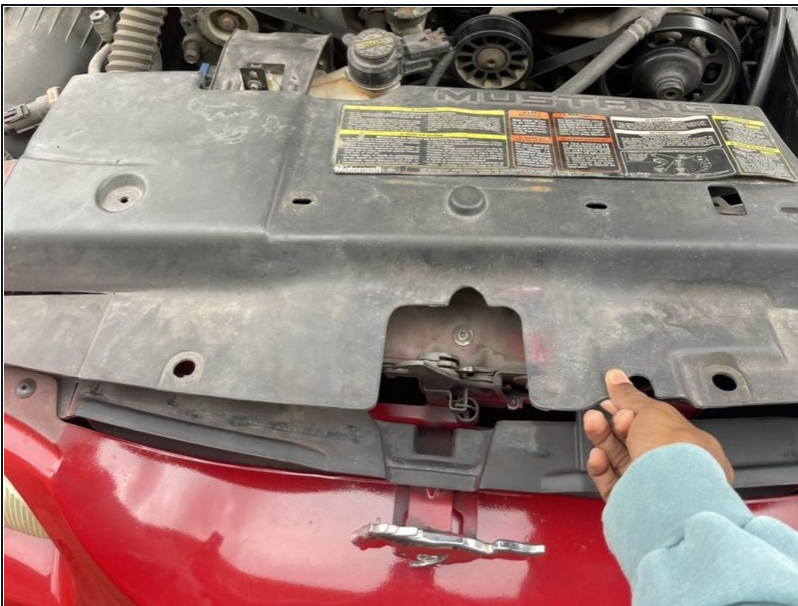

- Pull on the edges until the cover pops off revealing the nut shown in the next step.

Step 4



- Using the 11mm wrench, remove the nut.

Step 5



- Gently pull out the side paneling using your hands.

Step 6



- Take out the turn signal light by twisting it. Remove the side panel.

Step 7



- Remove the bulb from the connector by pulling the two apart.
- Connect the new bulb to the connector.

Step 8




- In the same area where you removed the screw, remove the clip by hand or use needle nose pliers.

Step 9



- ① Identify the three retainers. Two of them are on the same side from which the metal clip was removed. The third is on the opposite side, shown in the next step.
- Slide the 12mm wrench over the retainer and push until you are able to remove the headlight.

Step 10

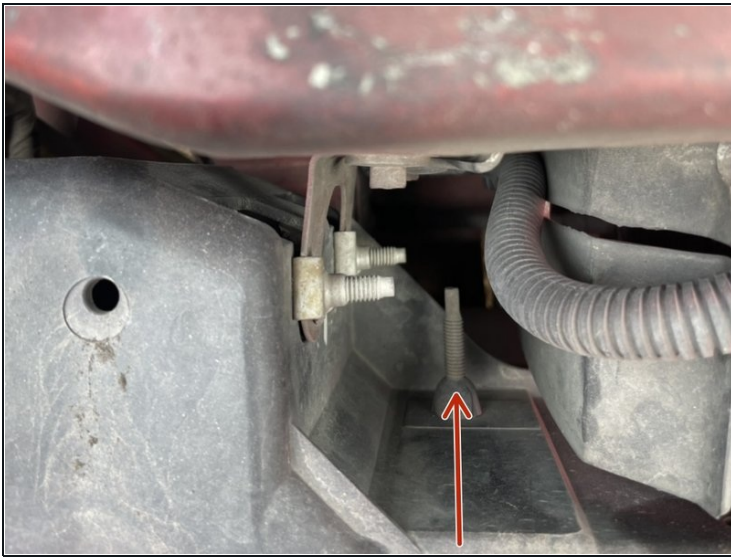

① This is the third retainer.

- To push the retainers in so that I was able to remove the headlight, I pressed the handle of the wrench against the metal part of the retainers and pushed.

Step 11



- Similar to removing the turn signal, twist the headlight connector and remove the headlight from the bulb.
- ☑ Disconnect the bulb from the connector by pulling the two apart and connect the new bulb. Attach the new bulb to the connector.

To reassemble your device, follow these instructions in reverse order.