



Panasonic KX-TGA410C Keypad Replacement

Use this guide to replace the keypad on the handset of your Panasonic KX-TGA410C phone.

Written By: Mumtaaz Mohamoud



INTRODUCTION

If your Panasonic KX-TGA410C handset's keypad is not working as intended, or worn out and the numbers are no longer visible, use this guide to replace the button pad.




TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Picks \(Set of 6\)](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Keypad



- Slide the battery cover in a downwards motion to uncover the batteries.

 Use the indentation on the case.

Step 2




- Remove the batteries by pulling them forward.

Step 3




- Use a Phillips #00 screwdriver and remove two 6.4 mm screws.
- ① The screws are at the bottom right and left-hand corner.

Step 4

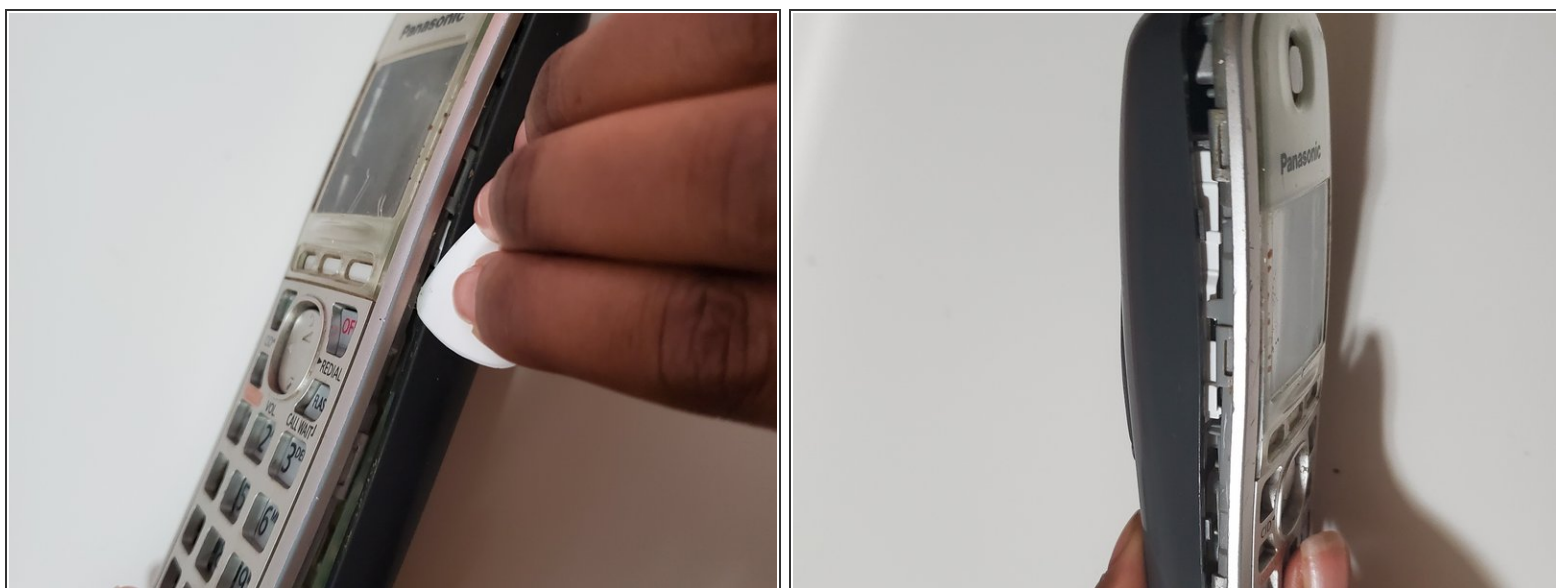

- Take an opening tool or pick and slide it in between the back and front cover all the way around the phone, then pull the back case off.

Step 5

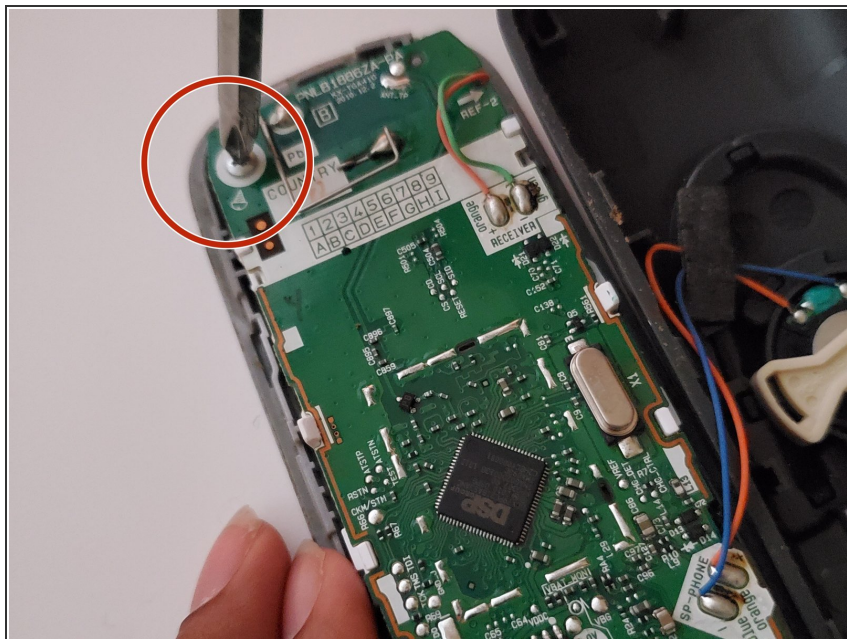

- Use a Phillips #00 screwdriver to remove one 6.4 mm screw from the top left corner of the phone.

Step 6



- Gently pull the circuit board back.

Step 7



- Pull the button pad out.

To reassemble your device, follow these instructions in reverse order.