


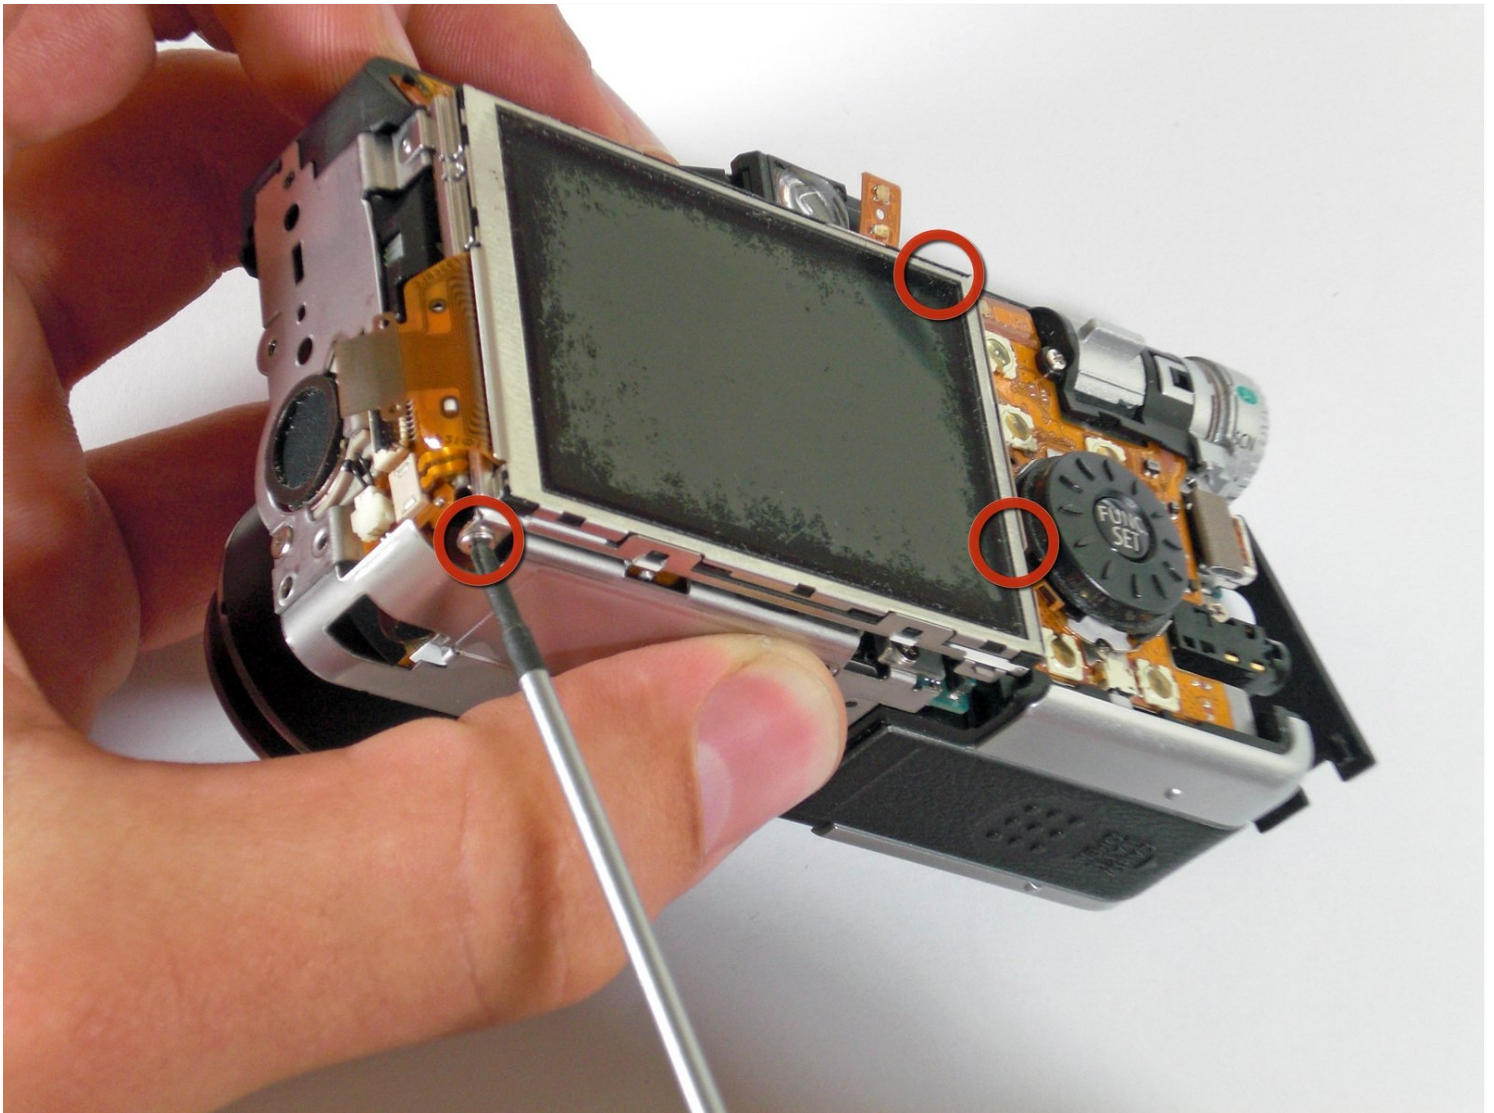

# Canon PowerShot S80 LCD Screen Replacement

The LCD screen of the Canon PowerShot S80 is...

Written By: BrettH



# INTRODUCTION

The LCD screen of the Canon PowerShot S80 is necessary for the normal operation of the camera. The screen is also vulnerable to cracks, chips and water damage. This guide will show you how to replace your LCD screen.

---

## TOOLS:

Phillips #00 Screwdriver (1)

Spudger (1)

---

## Step 1 — Outer Casing



- Remove the knot on the wrist lanyard.
- Remove the battery and the memory card.




## Step 2




- Begin removing the screws on the bottom of the outer casing.
- Next, remove the rest of the screws from the outer casing.

## Step 3

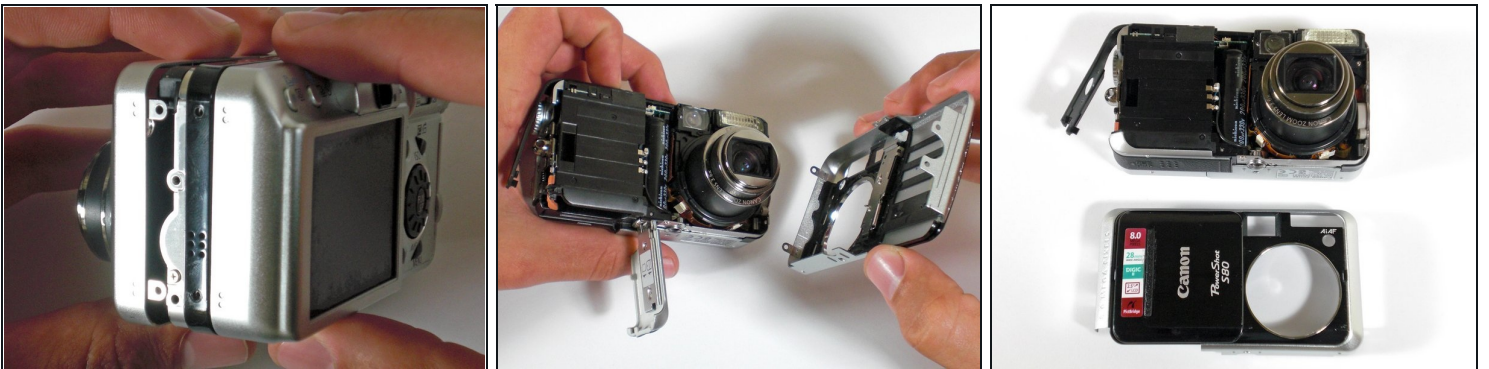


- Gently pull the front cover off of the camera.

## Step 4

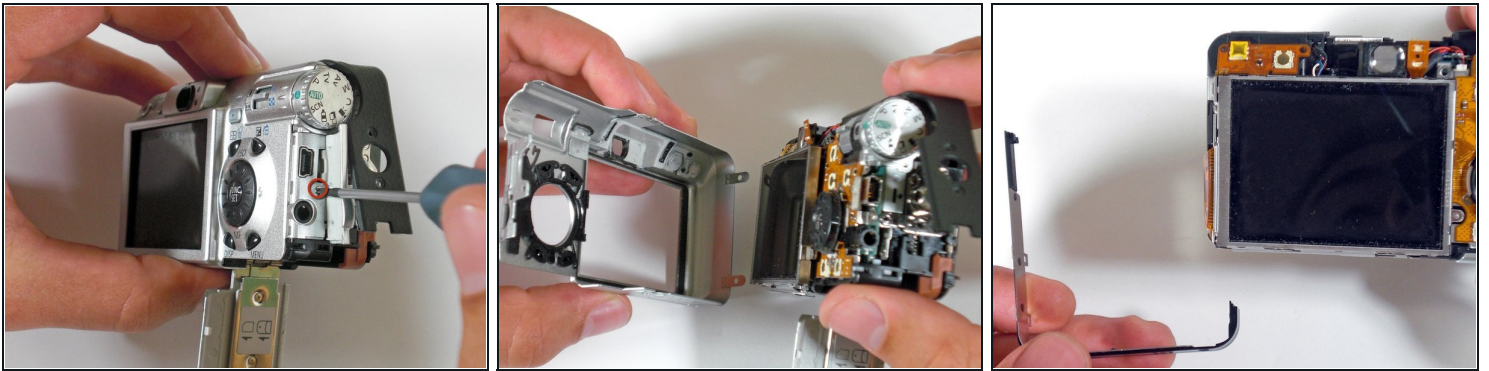

- Open the "A/V Out Digital" cover. Remove the screw inside.
- Gently pull off the back casing.
- Remove the black "L" shaped piece of metal.



## Step 5 — LCD Screen

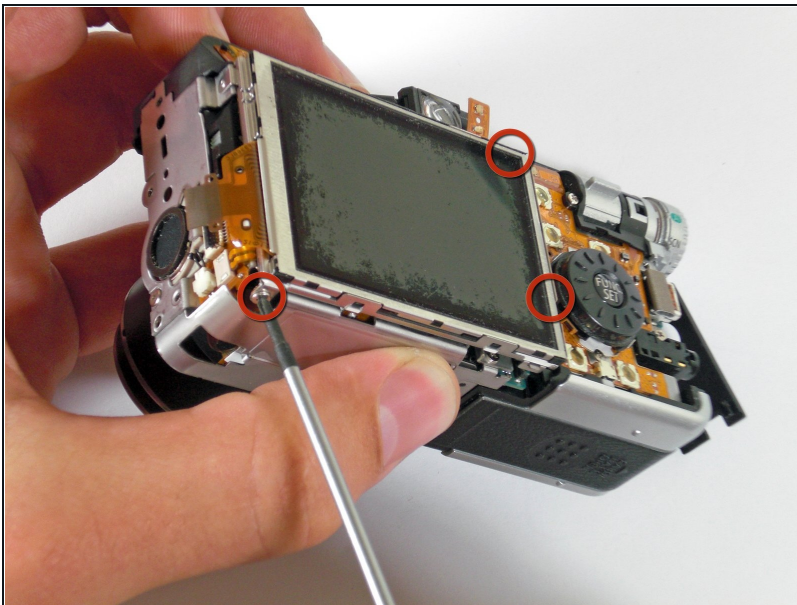

- Remove the three screws that are holding the screen in place. Free the screen from the underlying components.

⚠ Be careful with the ribbon wire that is still attached on the left side of the screen.

## Step 6

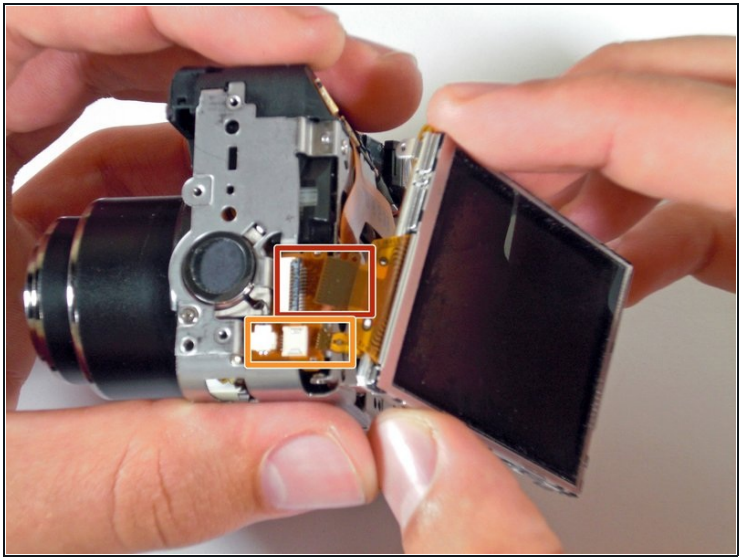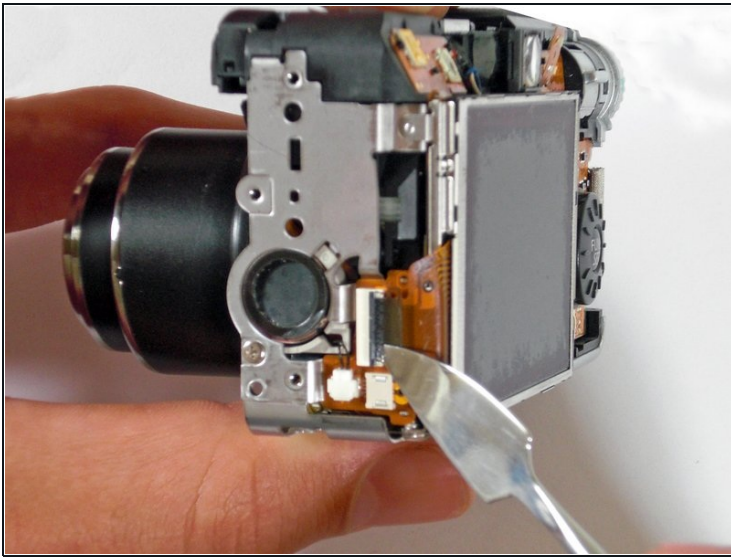

- With the spudger, gently lift the black flap that is holding the wide ribbon cable wire in place.
- Unplug the wide ribbon cable.
- Unplug the narrow ribbon cable to free the LCD screen from the camera body.

---

To reassemble your device, follow these instructions in reverse order.