


Removing the HP Elitebook 6930p Bluetooth module

This guide will show you how to locate and remove the Bluetooth module

Written By: Richdave

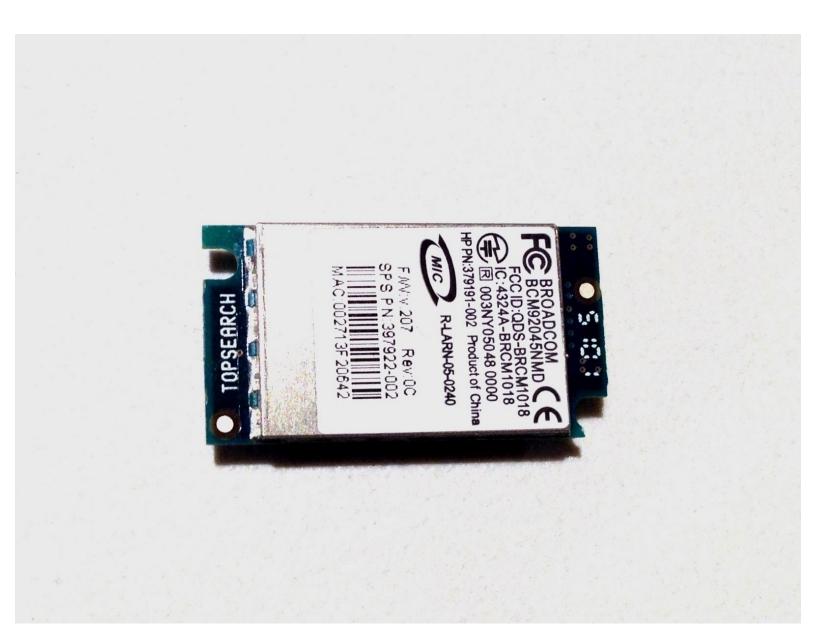

Guide ID: 14812 - Draft: 2013-10-04

INTRODUCTION

This guide will show you how to locate and remove the Bluetooth module



TOOLS:

- Phillips #1 Screwdriver (1)
- Spudger (1)

Step 1 — Battery Removal







- Flip laptop over and locate the battery release button
- Push release button to the left to release battery and gently pull battery from the laptop

Step 2 — Bluetooth module







- Locate the Bluetooth module cover on the bottom of the laptop
- Loosen the M2.0×5.0 captive screw and remove the cover by by lifting it straight up
- ↑ The Bluetooth module is connected to the laptop via a small cable with very fine wires take care not to damage the cable when you pull the module out of the case.
- Gently lift the Bluetooth module up and over the retaining clip. A plastic spudger may be useful.
- Disconnect the connector being careful not to damage the fine wires on the cable.

To reassemble your device, follow these instructions in reverse order.