



Microsoft Zune HD Upper Rear Panel Replacement

Written By: Walter Galan



INTRODUCTION

Replace the upper rear panel and keep your Zune HD nice and shiny.

TOOLS:

- [Tri-wing Screwdriver](#) (1)
-

Step 1 — Upper Rear Panel



- Remove the four Tri-Wing screws securing the upper rear panel to the inner chassis.

Step 2



- Slightly rotate the top edge of the upper rear panel away from the Zune.
- Lift the upper rear panel straight up off the black plastic lower rear panel.

To reassemble your device, follow these instructions in reverse order.