




Dell Latitude E6400 CPU Replacement

Written By: D. K. Labudek



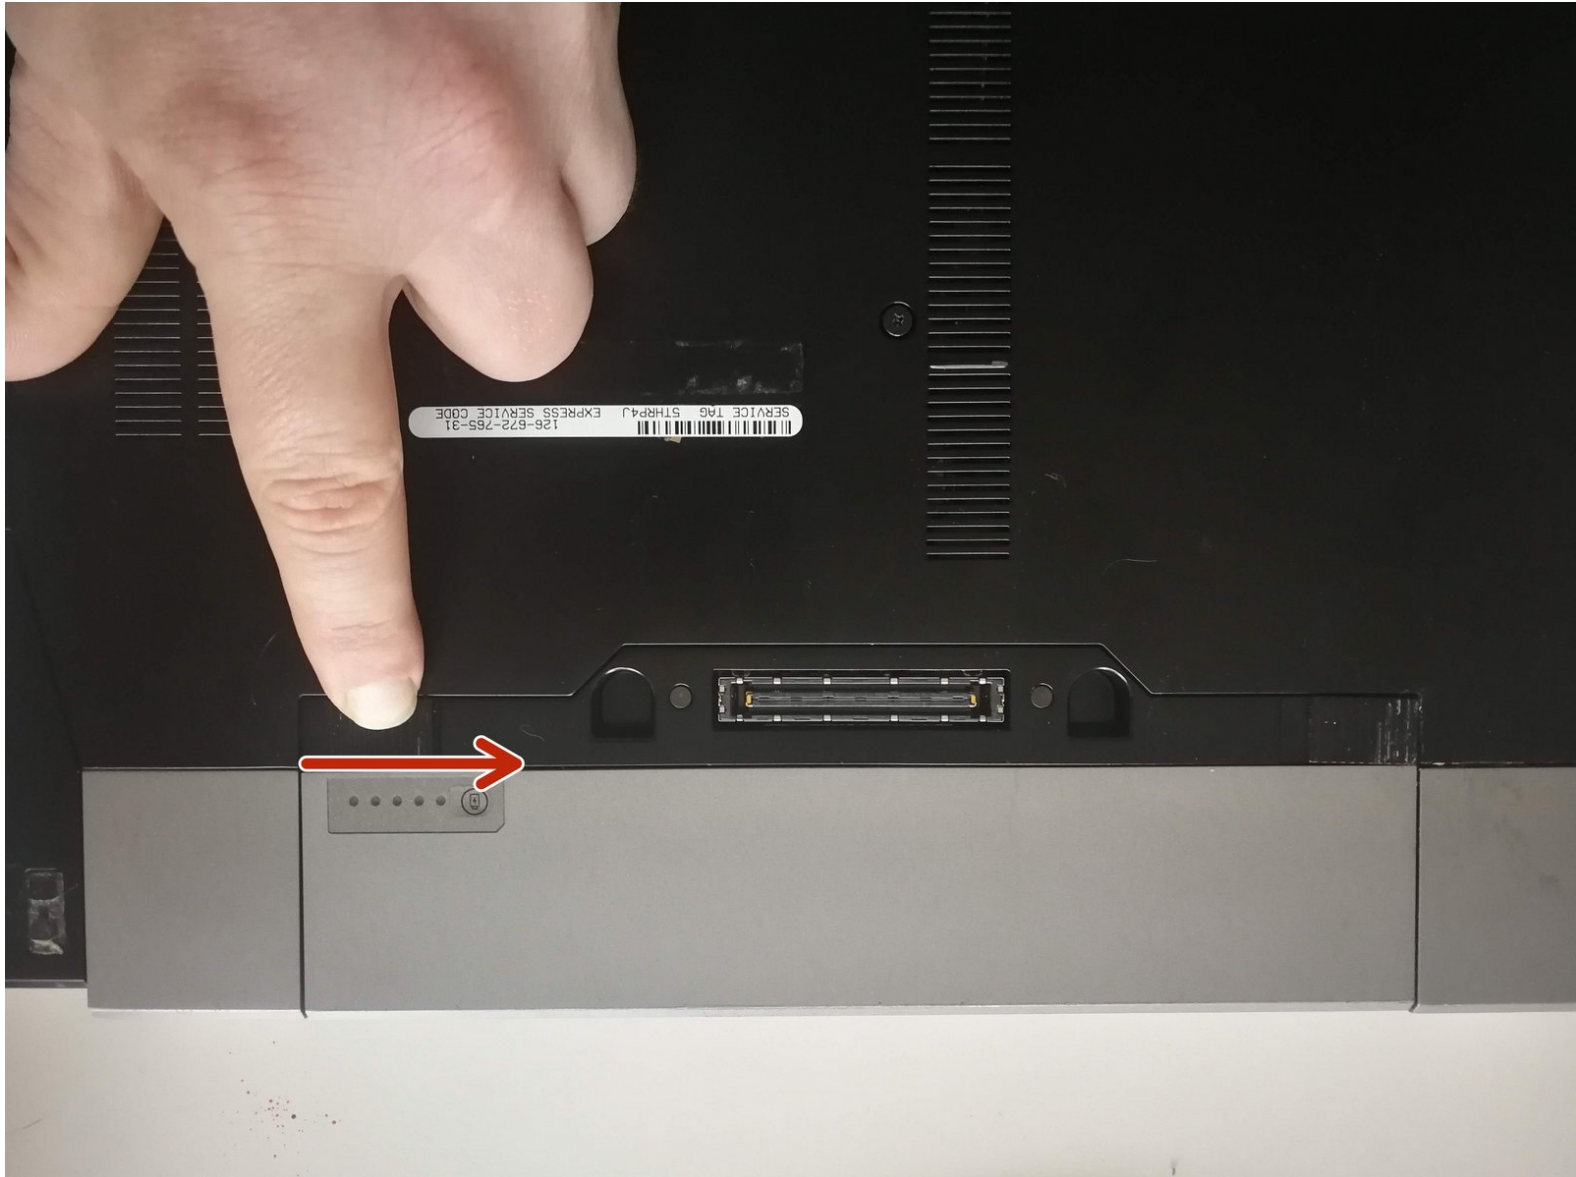

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery Removal




- Disconnect AC power adaptor
- Push battery release tabs inwards.
- Slide the battery out of the computer.

Step 2 — Bottom Lid

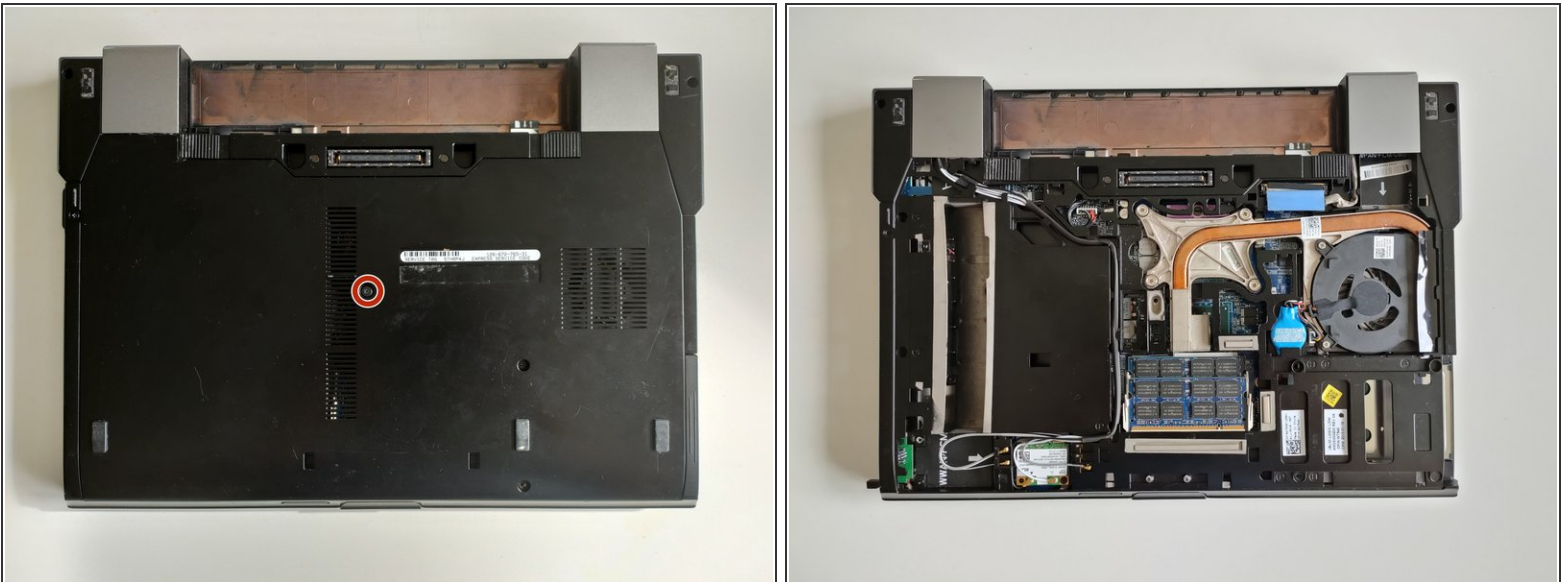


- Remove the one 7.5 mm Phillips screw securing the bottom case.
- Pull the bottom lid towards yourself to remove it.

Step 3 — Fan

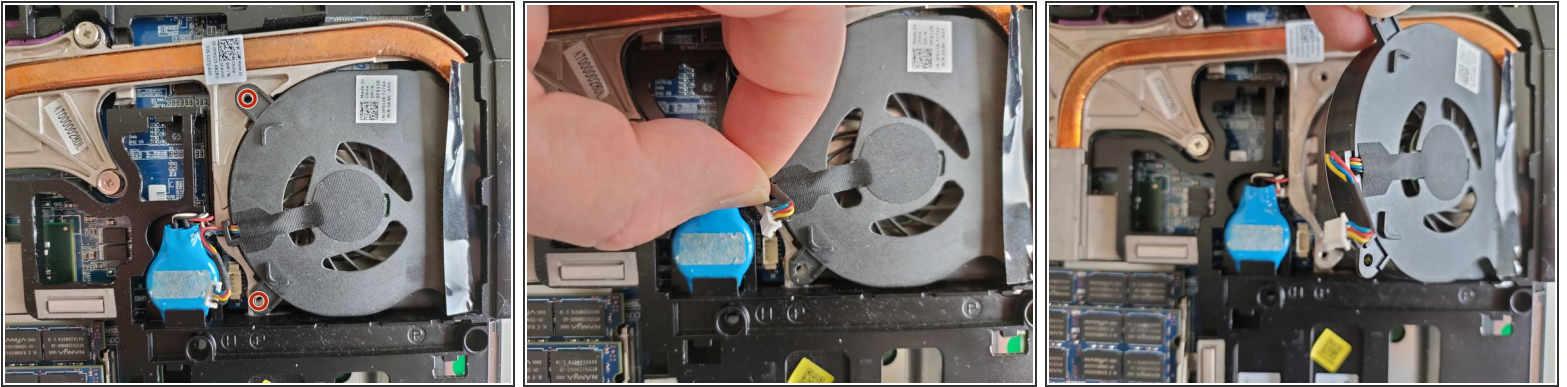


- Remove the two 4.8mm Phillips screws securing the fan.
- Disconnect the fan by pulling power cable straight up.
- Lift the fan with your finger and slide it out towards the inside of the laptop.

Step 4 — Heat Sink

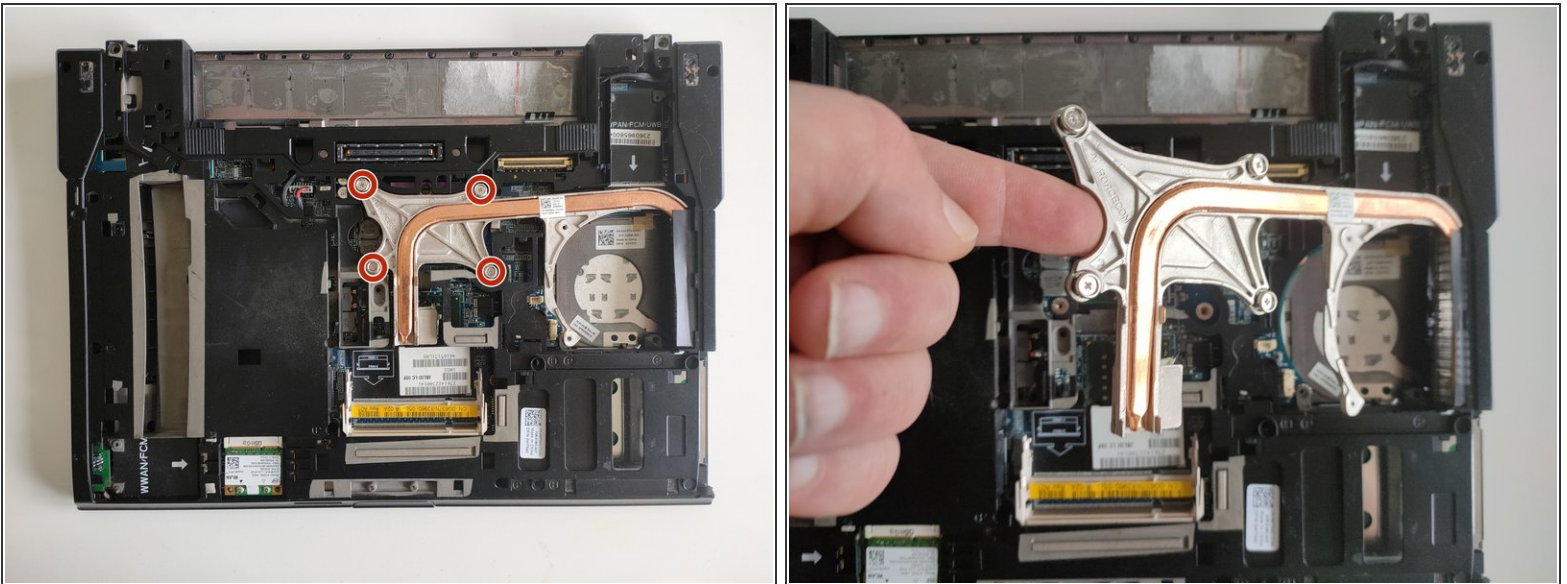

- Remove the four Phillips screws securing the heat sink.
- Using your finger gently lift and remove heat sink .

Step 5

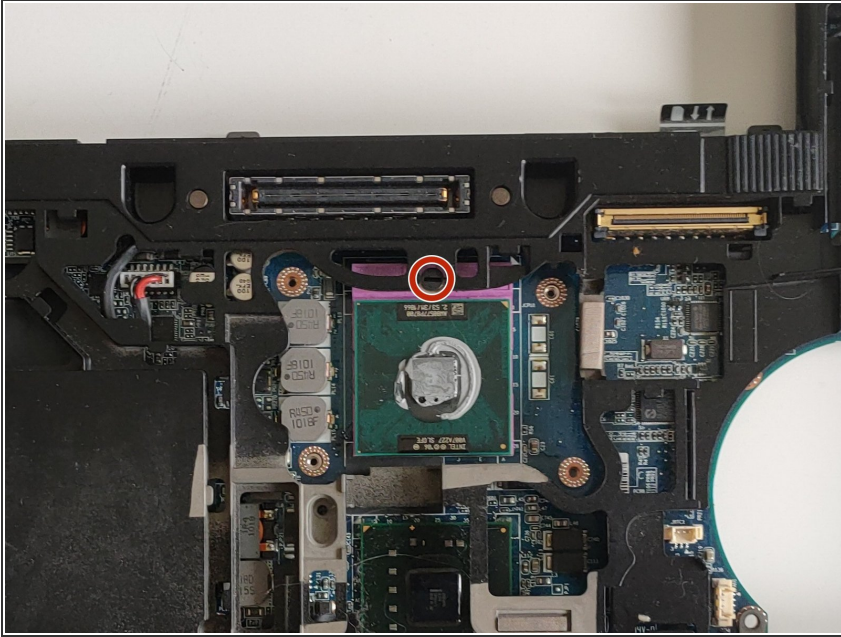

- Gently rotate left the locking screw to release CPU from its socket.
- Lift the CPU straight up of it's socket.

To reassemble your device, follow these instructions in reverse order.