


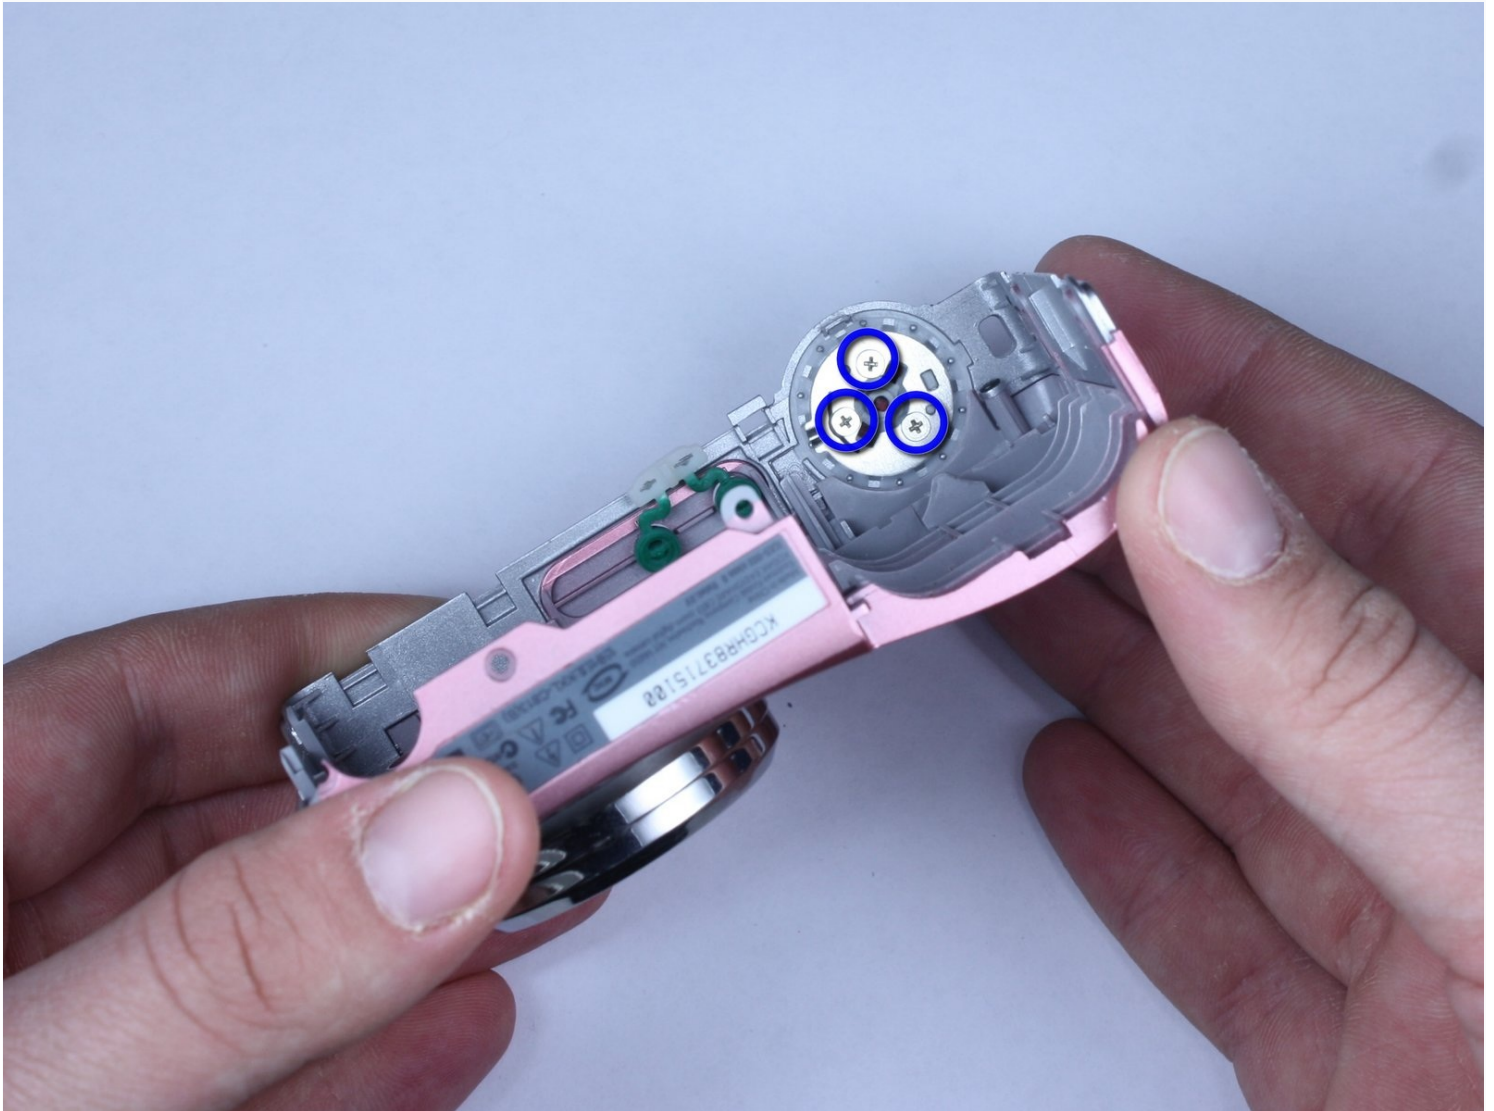

# Kodak Easyshare C813 Shutter Button Replacement

This guide demonstrates how to clean or replace...

Written By: Susan Marano



# INTRODUCTION

This guide demonstrates how to clean or replace the shutter button.

## TOOLS:

[Anti-Static Wrist Strap](#) (1)

[Phillips #00 Screwdriver](#) (1)


[iFixit Opening Tool](#) (1)

## Step 1 — Battery



- Turn off camera by firmly pressing the power button that is located on the top of the camera near the selector dial.

## Step 2

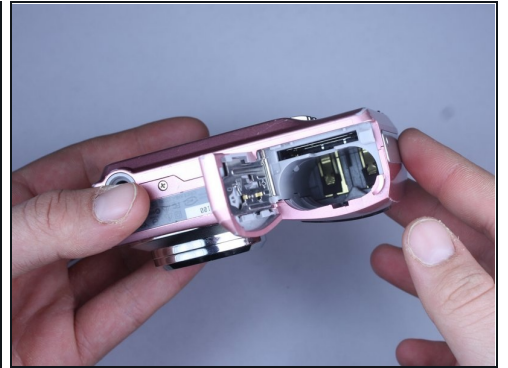

- Press thumb firmly on battery door and slide it in the direction of the arrow.
- Lift thumb allowing the door to swing open.

## Step 3 — Back Cover




- Before removing back cover, it is advisable to use an [anti-static wrist strap](#) to prevent damage to electronics.

## Step 4



- Turn the camera off by firmly pressing the power button located on top of the camera.

## Step 5

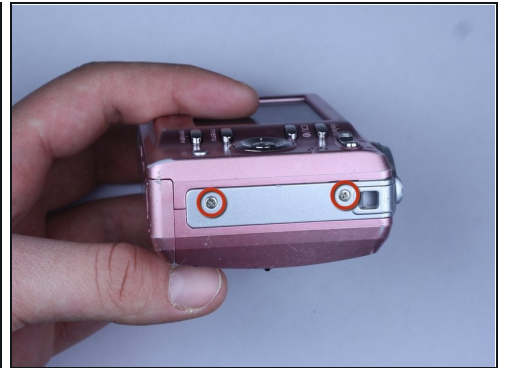

- Locate the 7 screws holding the back cover on.
- Three screws are located on the bottom of the camera.
- Two screws are located on the side shown in the photograph.
- Two final screws are located on the opposite side shown in the photograph.

## Step 6



- Remove all 7 screws:
  - Hold the camera firmly with one hand so that you can still see a screw.
  - Place the Philips 00([Found here](#))screwdriver into the screw.
  - Turn the screwdriver to the left until it is free.
  - Repeat for the remaining screws.

## Step 7




- Use plastic opening tools to slightly open the side of the case.
- Insert a plastic opening tool and apply pressure to the internal three tabs at the top.
  - The first two are near the words "3X Optical Zoom".
  - The third is near the shutter button.

## Step 8




- Gently pull apart the back cover from the rest of the camera.
  - Make sure there are no more screws or tabs keeping the cover on.
  - Use the plastic opening tool to separate any sides still closely connected.

## Step 9 — Front Cover

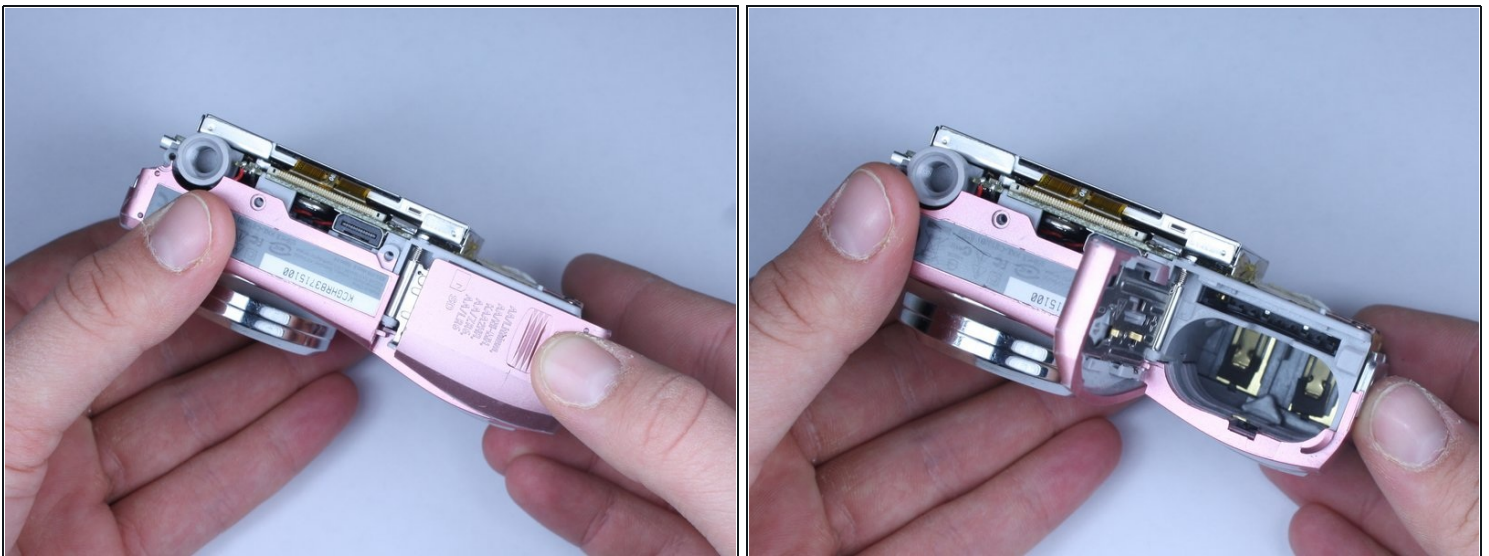

- Open the battery door.
  - Press thumb firmly on battery door and slide it in the direction of the arrow.
  - Lift thumb allowing the door to swing open.

## Step 10

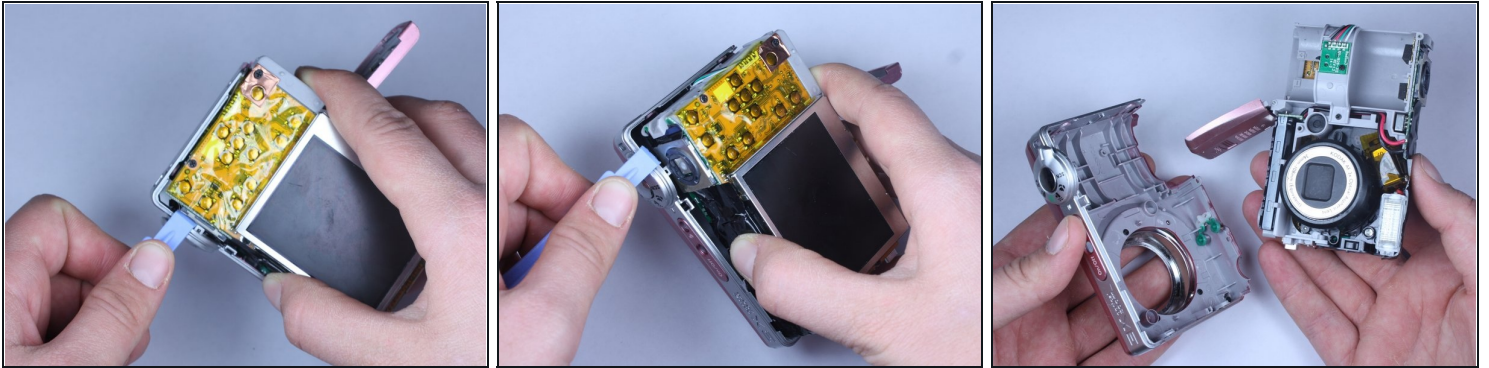

- Use the plastic opening tool to lift the casing around the shutter button.
- Gently remove the front cover from the device.


## Step 11



⚠ Do not touch the terminals shown in the photo. These link to the capacitor which could shock you if not discharged.

- To discharge the capacitor follow this [guide](#).



## Step 12 — Shutter Button

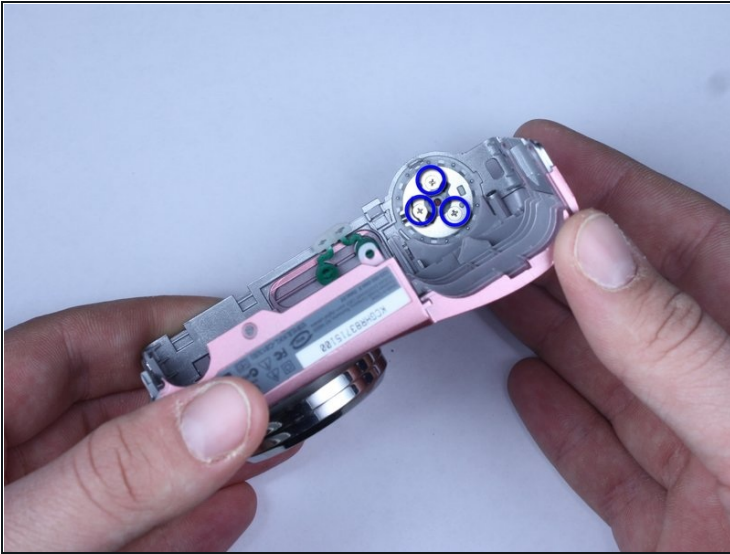

- The shutter button is held on to the front cover by three screws
- Hold the shutter button in place
- Use a Philips 00 screwdriver to remove the screws.

⚠ Careful that the power and flash button do not fall off

## Step 13

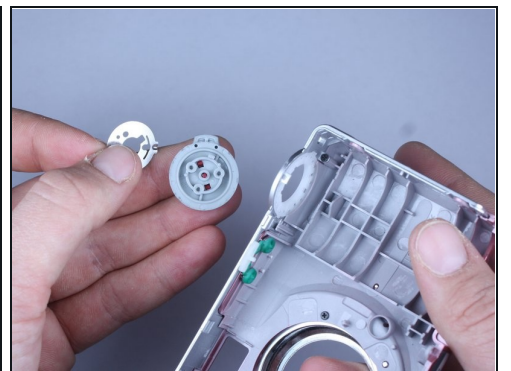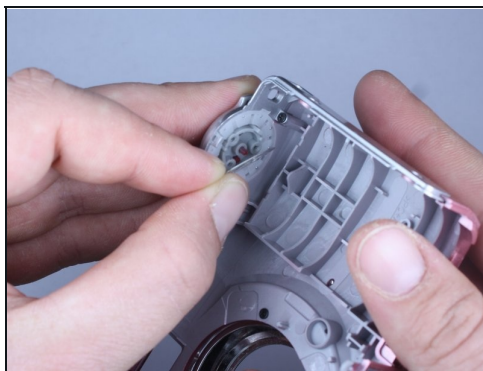

- Keep the shutter button in place while removing the circular metal plate
- Remove the shutter button by allowing it to fall into your hand

## Step 14




- Hold down the shutter button portion of the selector dial
- Press down the red tabs and slowly relieve pressure on the shutter button
- Press down on the center red stick

⚠ Careful not to lose the spring

- Tool shown is [Found here](#)

## Step 15

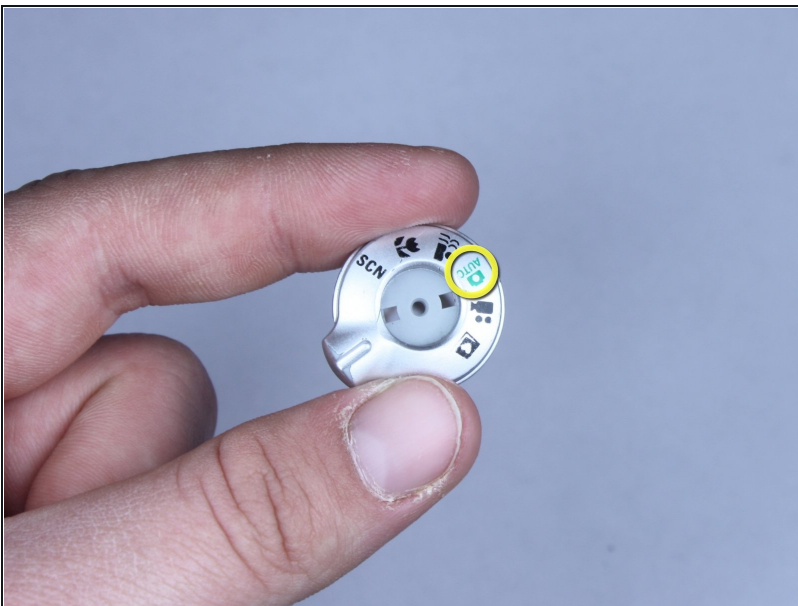

- If cleaning, remove dirt from button
- When putting back together, the button should be oriented so that the green automatic mode points towards the power button.

---

To reassemble your device, follow these instructions in reverse order.

