



# Sega Game Gear Speakers Replacement

Replace the speakers on your Sega Game Gear.

Written By: Lauren Thurston



---

# INTRODUCTION

How to repair the speakers of a Sega Game Gear.



## TOOLS:

- [Tweezers](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Place your device upside down and locate the two battery compartments.

## Step 2



- Press on the tabs at the bottom of the battery covers then lift up to remove.
- Remove batteries if they are present.

## Step 3 — Case



- Remove the following screws:
  - Six Phillips screws
  - One 4.5 mm Gamebit screw

## Step 4



- Use tweezers to take all other screws out.





## Step 5



- Gently open the case by unfolding it over the top of the Sega Game Gear.


⚠ Do not pull the back of the case away, as cables are connected between both sides.

## Step 6

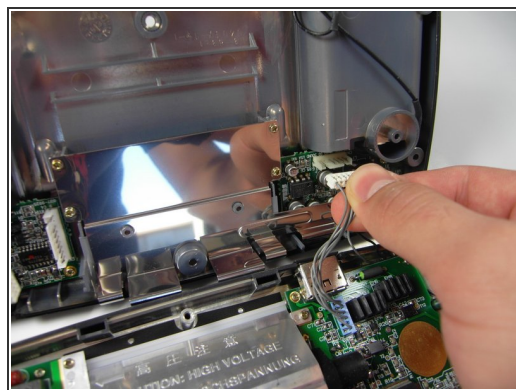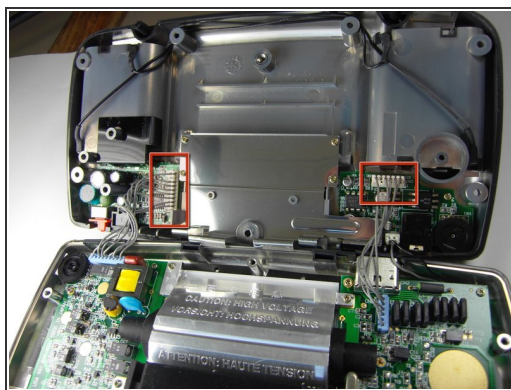


- Carefully unplug the 2 white-tipped connectors on the top cover.

## Step 7 — Speakers

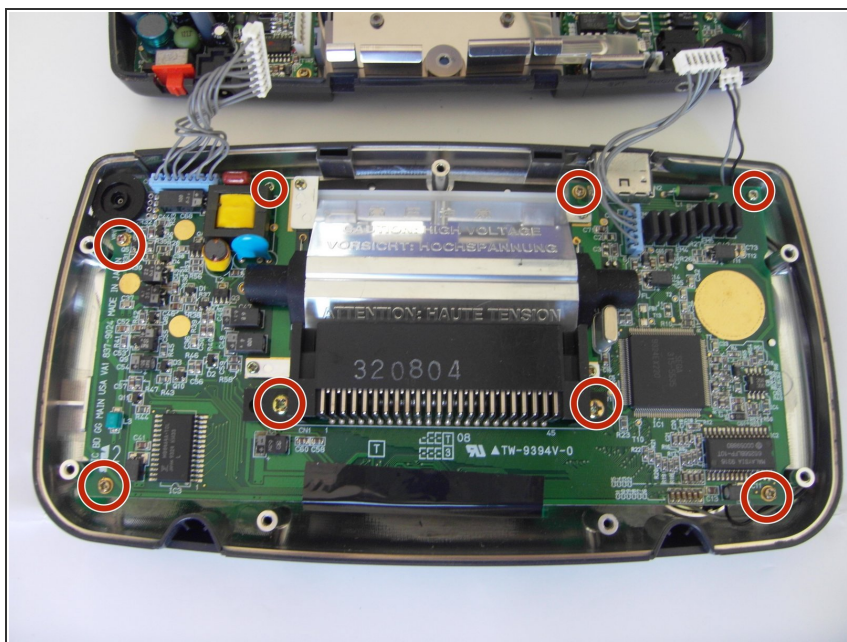

- Unscrew the 8 Phillips screws from the logic board.


## Step 8

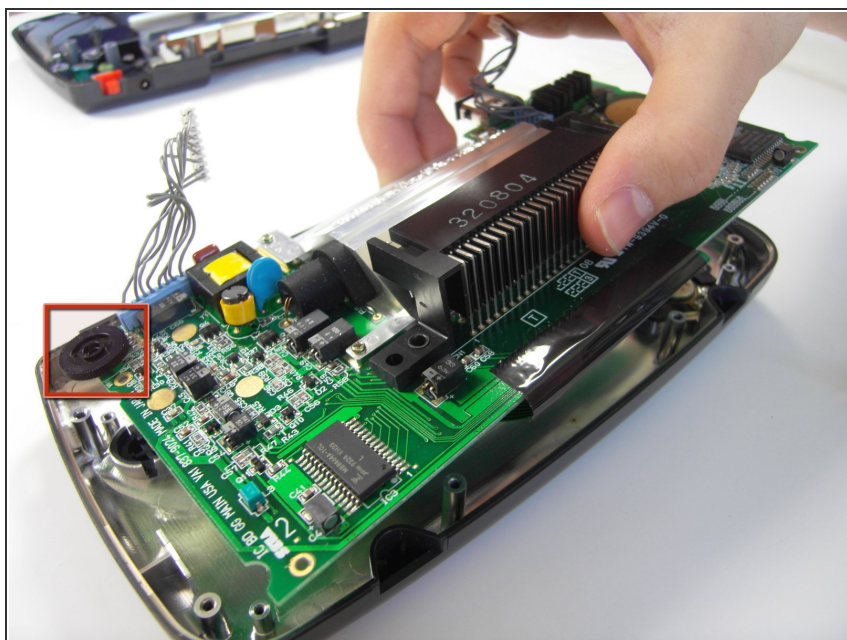

- Slide the logic board out from under the circular black fastener at the top-left corner of the case.



## Step 9

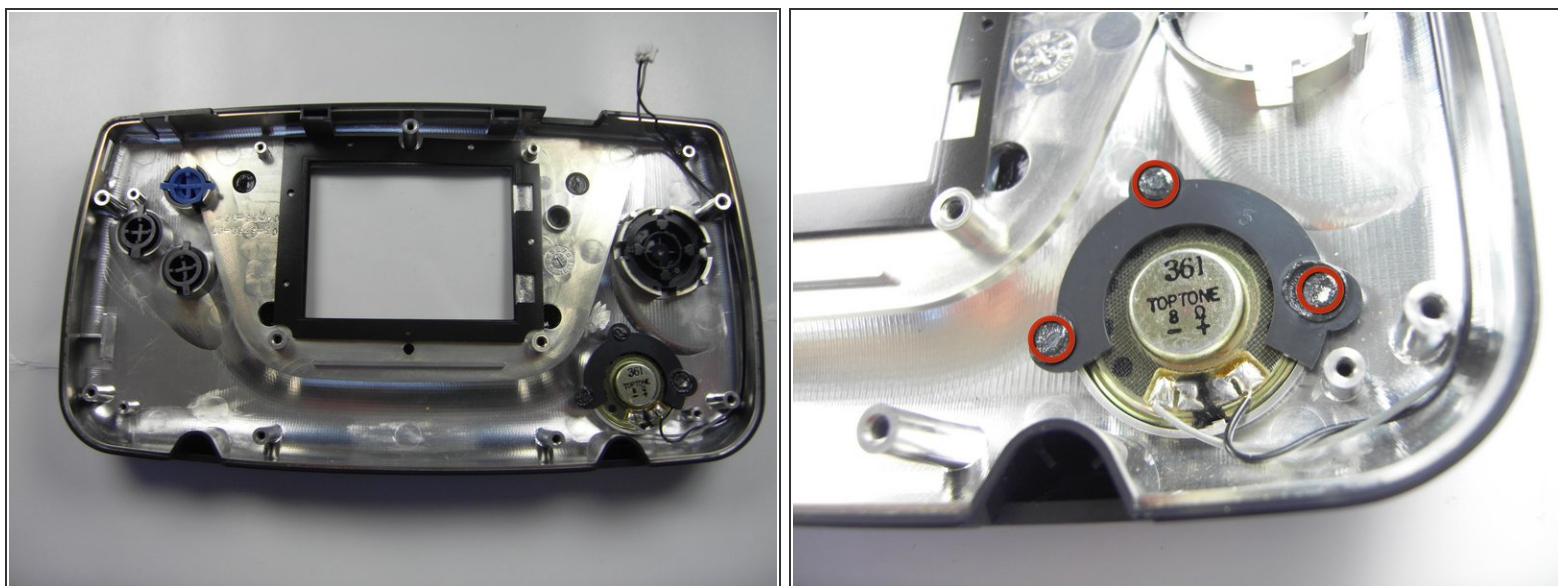

**⚠ Removing the plastic holding the speaker to the case may permanently detach the speaker.**

- The plastic at these three locations is melted to the plastic. Pry off with caution.

To reassemble your device, follow these instructions in reverse order.