



# Gateway MD2614u CD Drive Replacement

This guide will instruct you to replace the CD drive on the Gateway MD2614u

Written By: Nelson



---

## INTRODUCTION

This step-by-step guide illustrates how to replace the CD drive on the Gateway MD2614u.

---

### TOOLS:

- [Spudger](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — CD Drive



- Locate the circled screw.
- Carefully unscrew, making sure not to strip out the screw.

## Step 2



- Use any tool with a flat edge in order to pry out the CD-Drive, preferably a plastic opening tool.

### Step 3



- Once the CD drive has been pried out enough, you can pull it out without damaging the other components.

To reassemble your device, follow these instructions in reverse order.