



Kodak EasyShare M2008 Battery Door Replacement

Written By: Kyanna



🔧 **TOOLS:**


Tweezers (1)

Step 1 — Battery



- Place thumb firmly on battery cover.
- Slide thumb right, the cover should follow and pop up.

Step 2

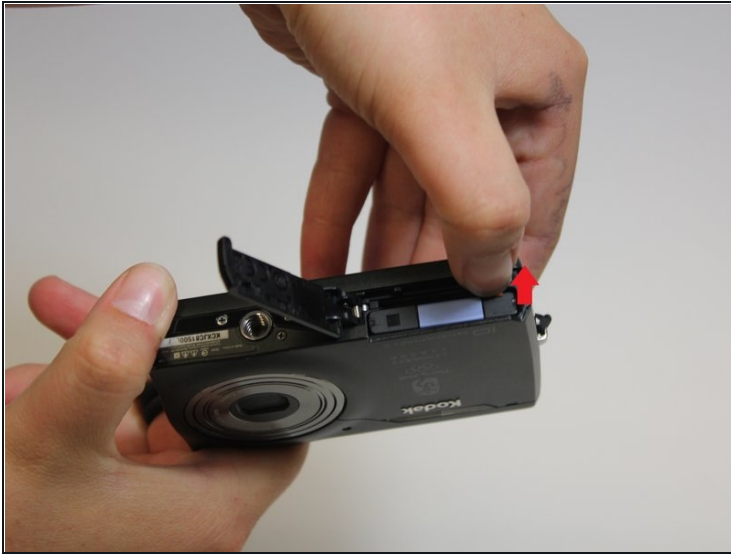



- Place thumb on orange tab and pull back towards screen.
- The battery should pop up.
- Gently lift battery out.

Step 3 — Device Casing




- Remove screws from along outer edge of casing.
- There are 6 screws in total.
- ① Righty tighty, lefty loosey!

Step 4

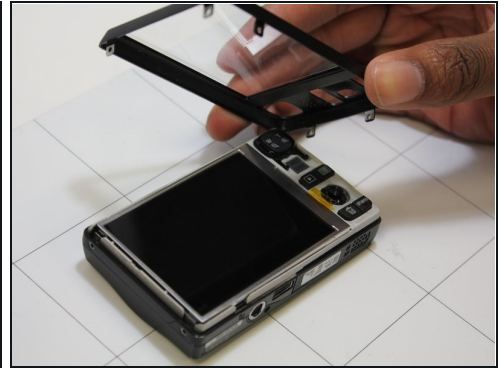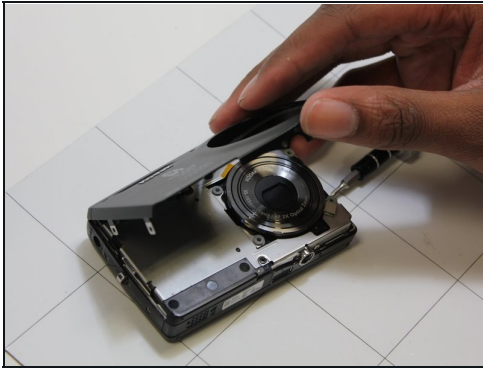


- Gently lift off front and back casing.

Step 5

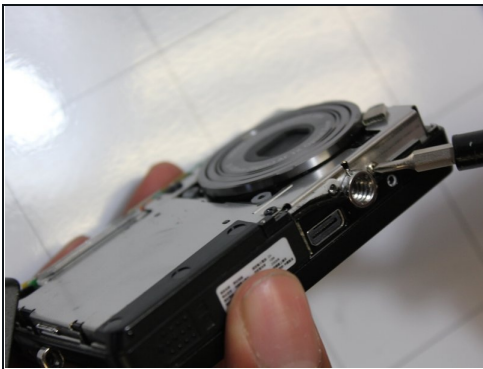


- Remove screws along side.
- Gently peel off side casing.

Step 6 — Battery Door

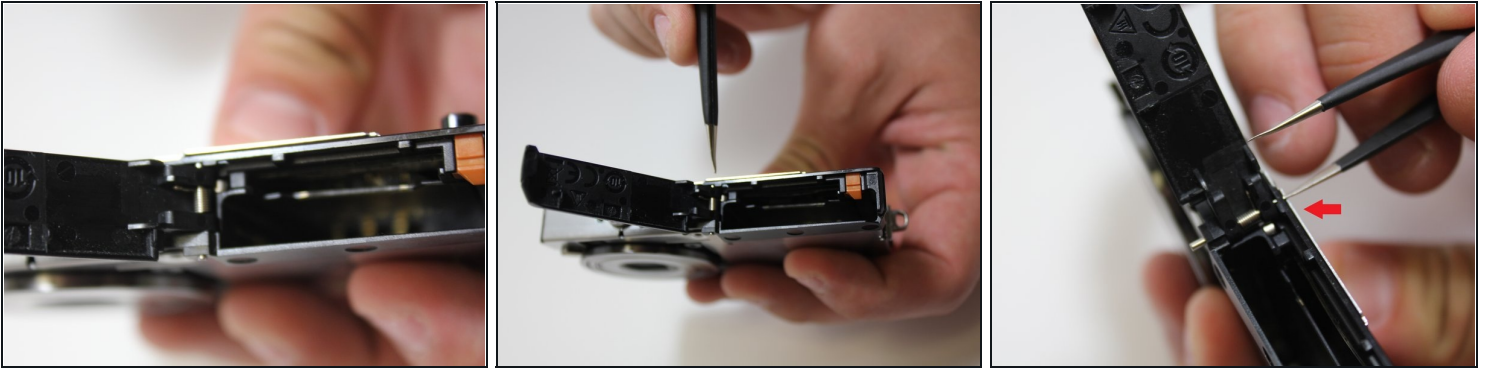

- Open the battery door and identify the retaining pin.
- Push retaining pin out with small [tweezers](#).

Step 7

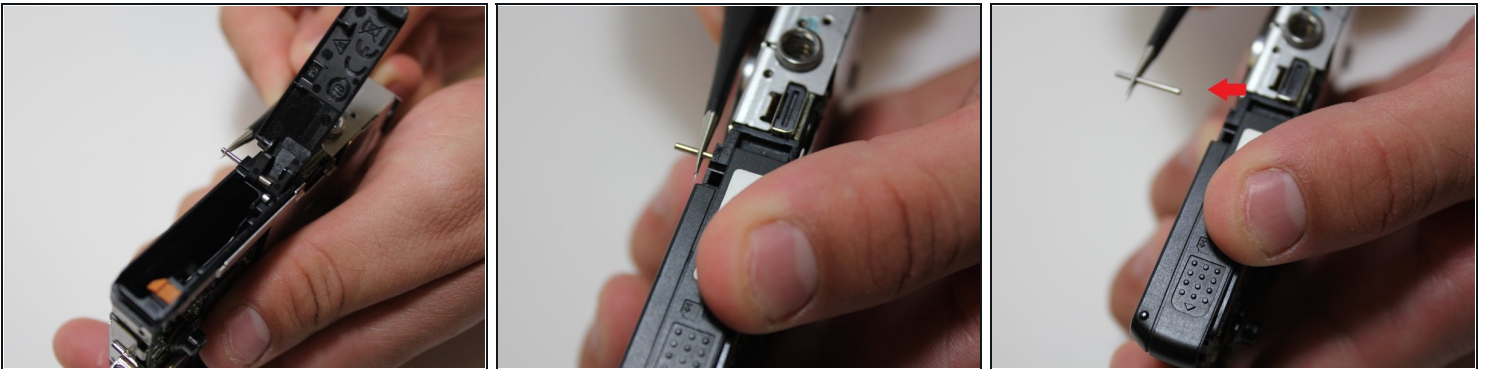

- Once pin is out halfway, close door to ensure no loose parts get lost.
- Continue to pull out the remaining length of the pin.

Step 8



- Gently lift off door cover.

To reassemble your device, follow these instructions in reverse order.