


Sony NEX-7 LCD Assembly Replacement

Written By: Jay Miley

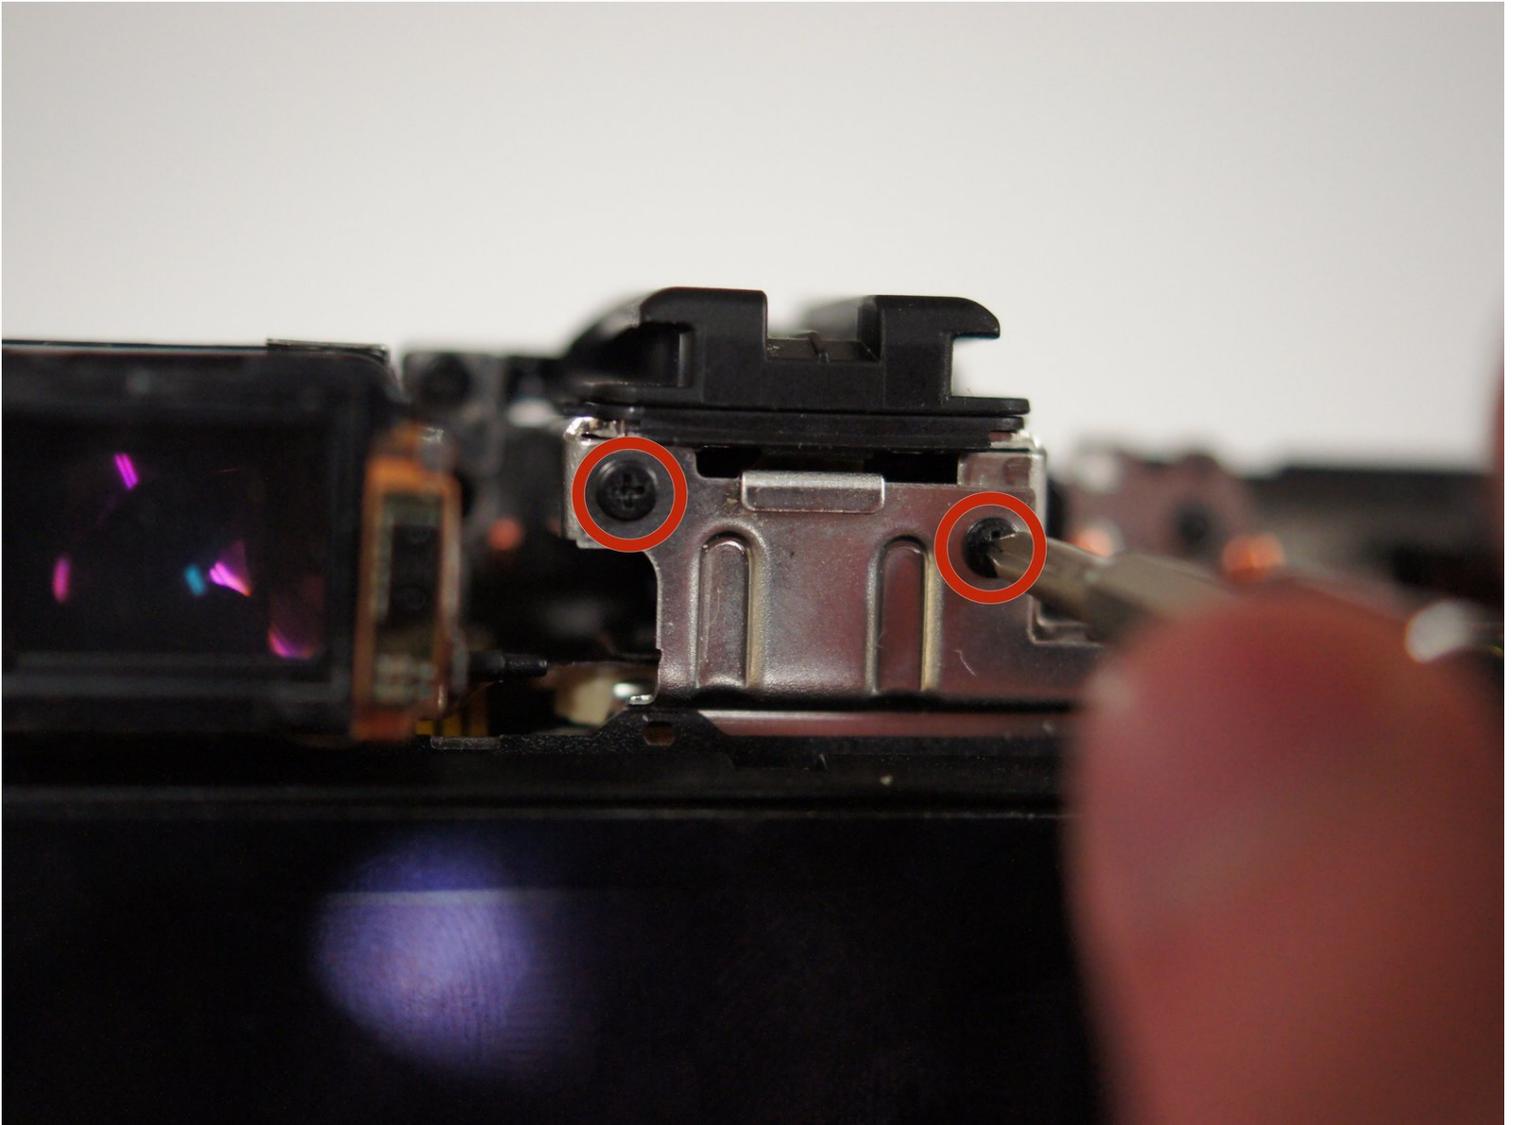


 **TOOLS:**

Phillips #00 Screwdriver (1)


Tweezers (1)

Step 1 — LCD Assembly

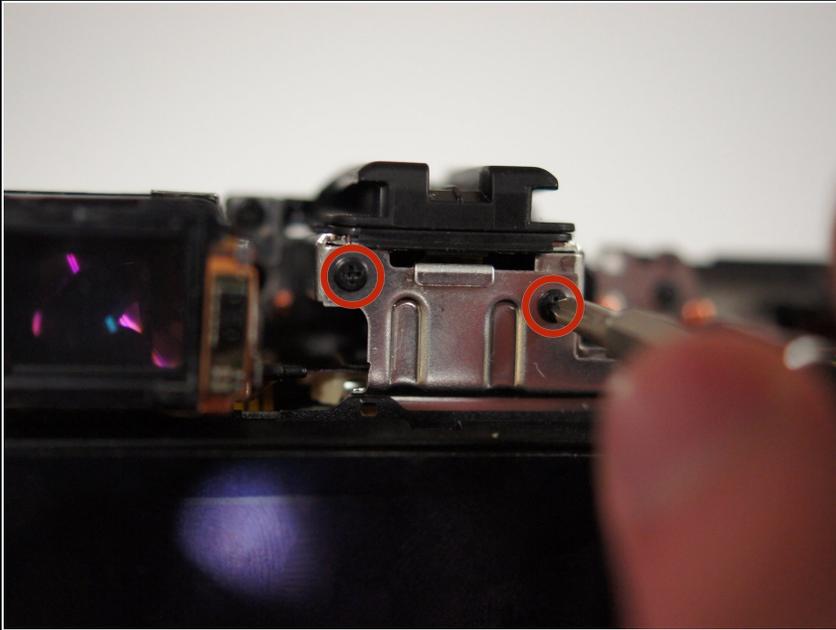


- Remove the two 3/32" #00 screws located next to the viewfinder using the Phillips #00 screwdriver.

Step 2

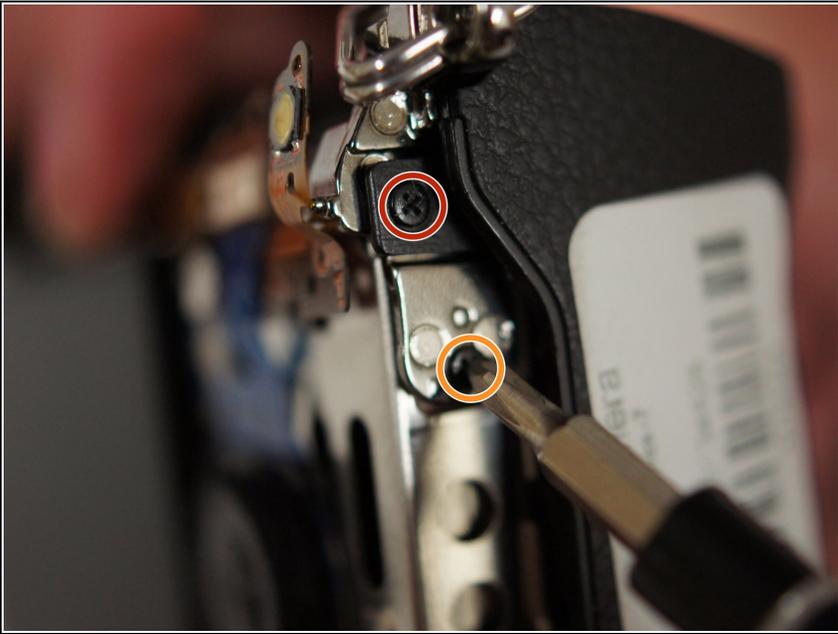


- Use a Phillips #00 screwdriver to remove the two screws from the right side of the camera below the D ring:
 - The 5/32" upper screw
 - The 3/32" lower screw

Step 3

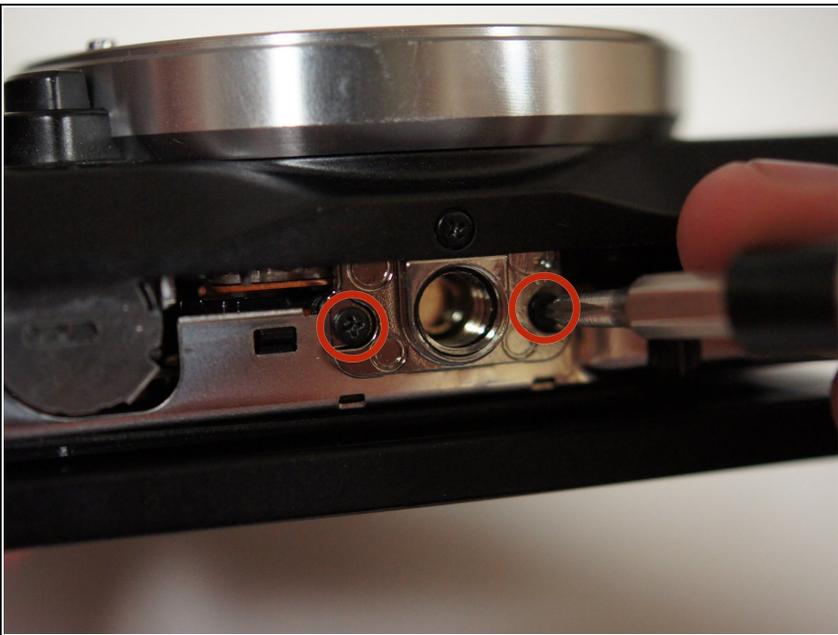


- Remove two more 3/32" #00 screws from the bottom of the camera using the Phillips #00 screwdriver.

Step 4

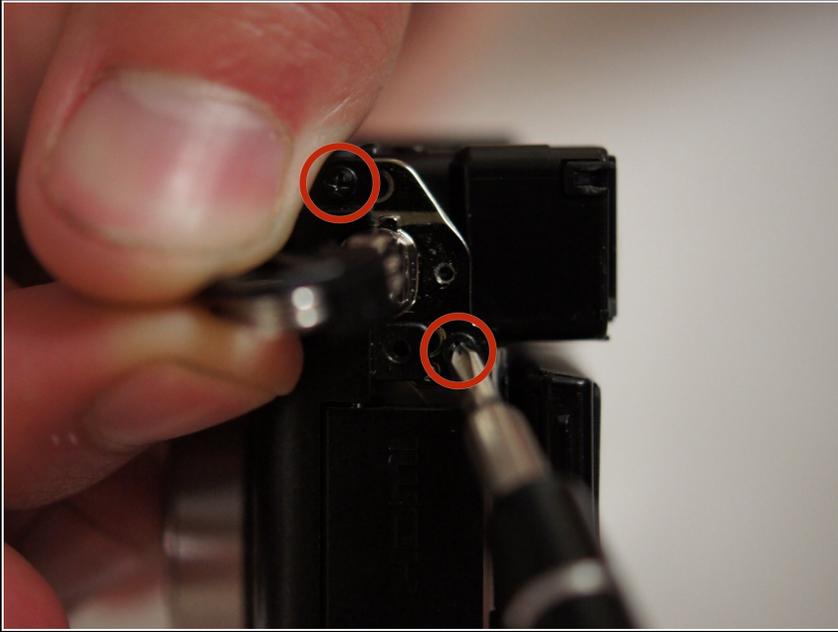


- Remove two more 3/32" #00 screws from the metal bracket on the left side of the camera using the Phillips #00 screwdriver.

Step 5

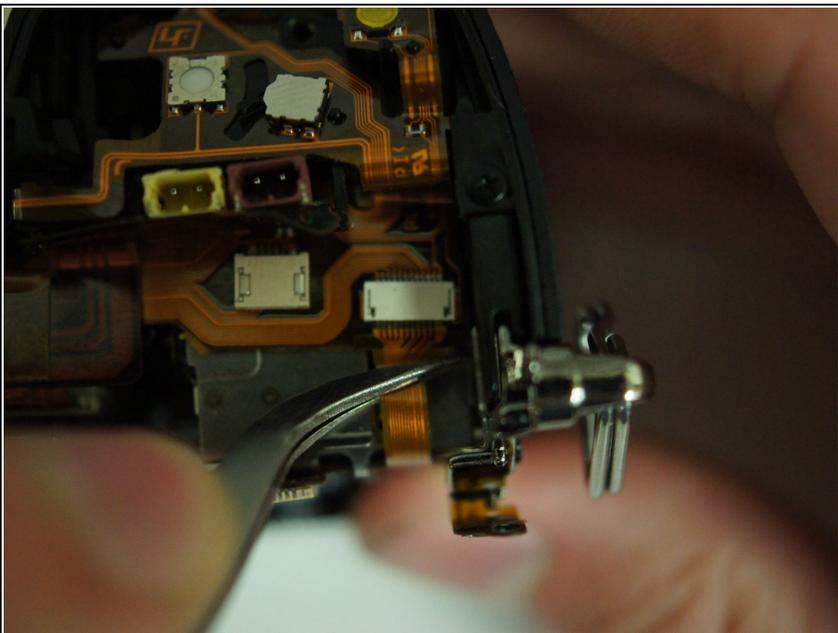


- Unplug the orange ribbon cable on the top right of the camera next to the metal bracket by applying tweezers to the tabs on either side of the plug.

Step 6

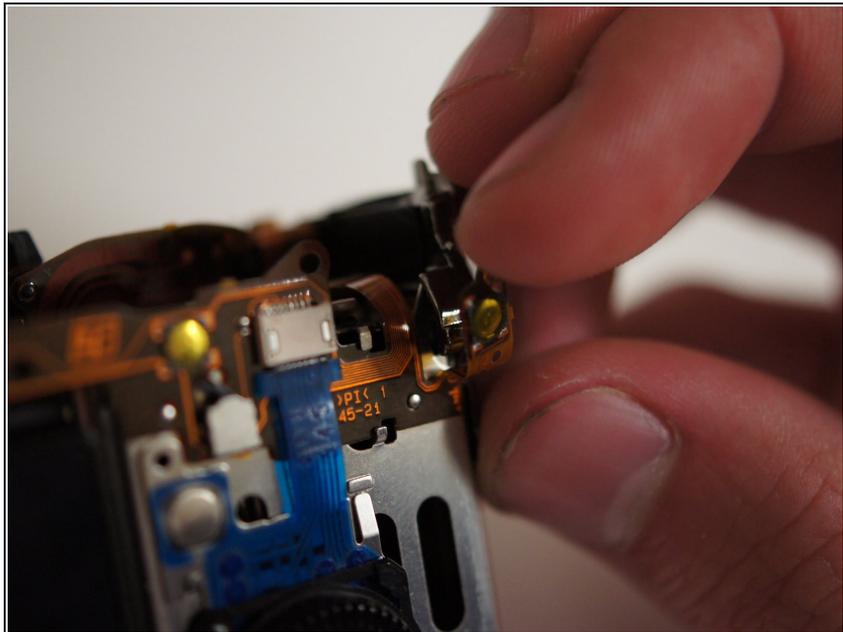

- Before pulling off the assembly, fold the rightmost tab of the flexible circuit board away from the metal bracket.

Step 7

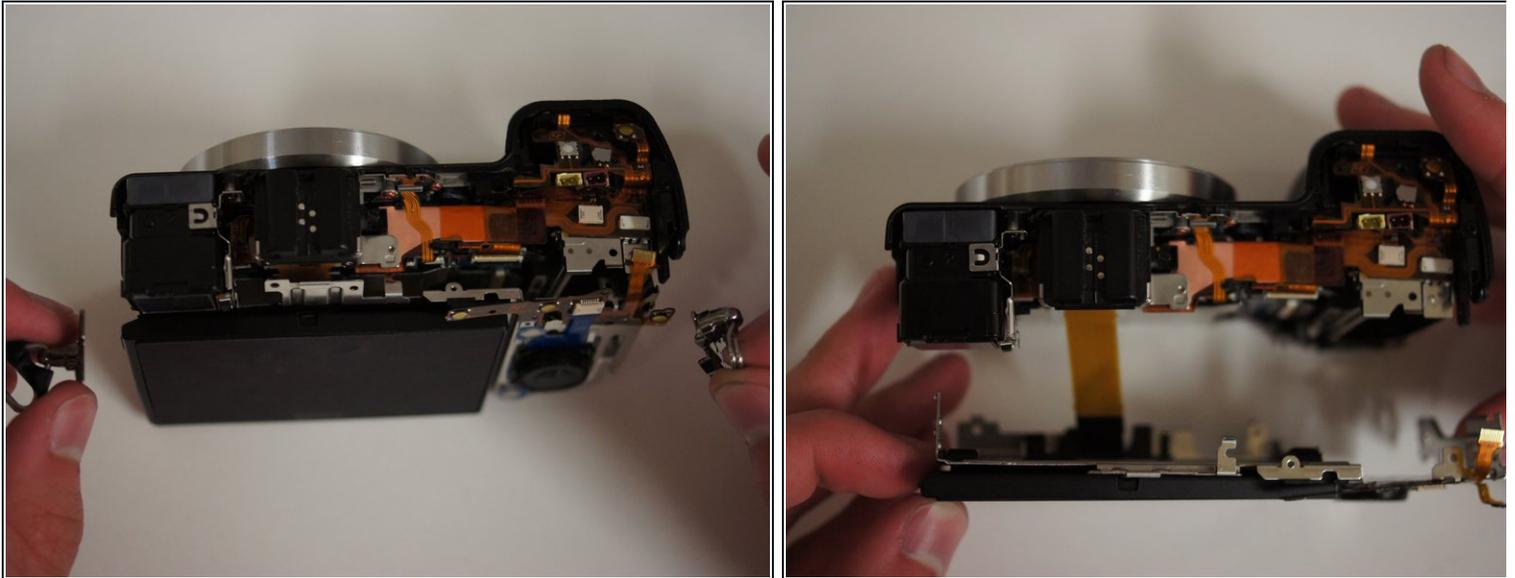


⚠ The LCD assembly is attached with a concealed ribbon cable, so be gentle when you remove it.

i The D ring brackets on either side are not attached, only held in mechanically. Once the LCD assembly starts to come out, they will detach.

- Pull on the D rings on either side of the camera to start removing the assembly.
- Once the brackets are cleared from black shell, take them off and set them aside.
- Continue to remove the screen assembly.

Step 8

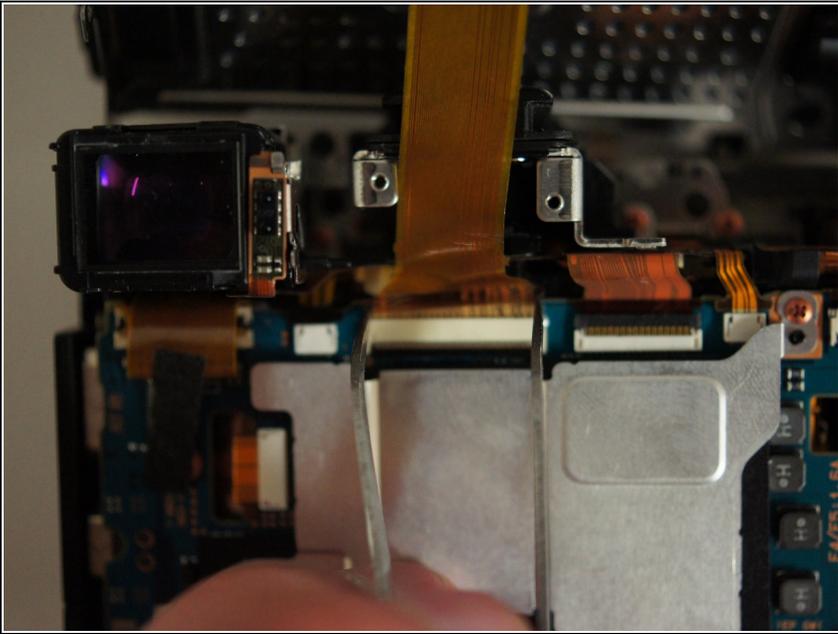

- With the camera face down, move the assembly away from you to get a clear view of the wide ribbon cable.
- Unplug the cable by applying tweezers to the tabs on either side of the plug.
- Set the LCD assembly aside.

To reassemble your device, follow these instructions in reverse order.