



# Disassembling IBM ThinkPad T42 Rear Cover

This guide will show you how to remove the edge...

Written By: Gerald Watanabe



# INTRODUCTION

This guide will show you how to remove the edge cover of the IBM ThinkPad T42 to access some of the device's internal components. The disassembly of the rear cover is simple, but requires the removal of many screws so be sure to stay organized through this process!

---

## TOOLS:

Phillips #0 Screwdriver (1)


---

### Step 1 — Bottom cover



- Using a Phillips #0 screwdriver, identify and unscrew the twenty screws located on the underside of the T42.

## Step 2 — Rear screws

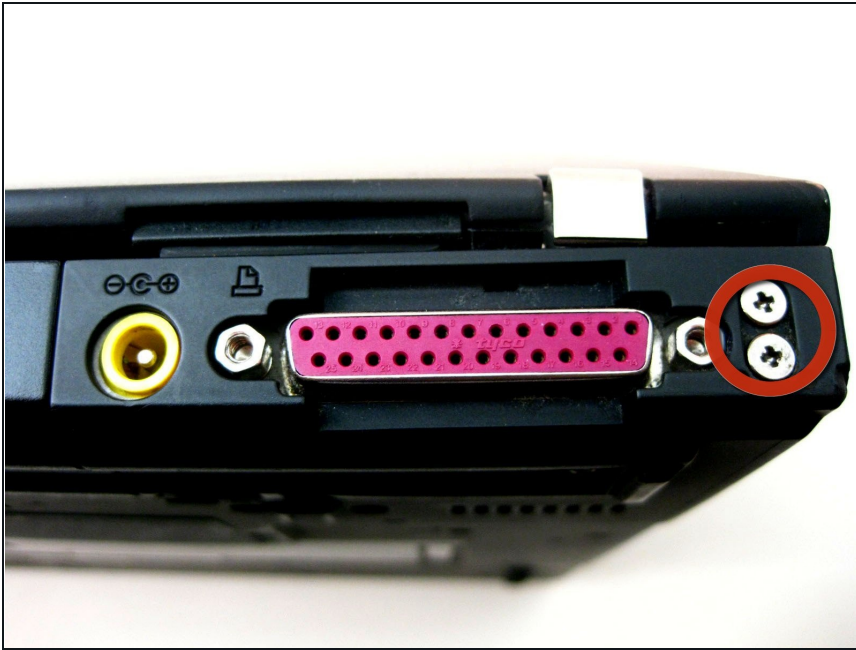

- Unscrew the four Phillips screws located on either side of the rear of the T42 (there are two located on each end.)

---

To reassemble your device, follow these instructions in reverse order.