



# Dell Inspiron 15R Keyboard Replacement

This guide will demonstrate how to remove and replace a laptop keyboard.

Written By: Trixie Gonzalez



---

## INTRODUCTION

If most keys on your keyboard are not working, this guide will help you replace the keyboard.

---



### TOOLS:

- [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Turn the device over and locate the battery.

## Step 2



- Place thumbs on each latch and push outwards.




## Step 3




- Push and slide the battery away from you.

## Step 4 — Keyboard

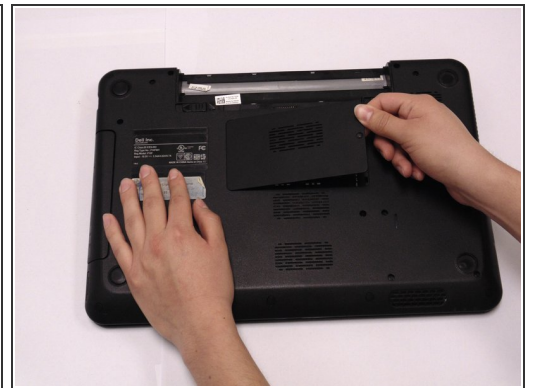

- Locate the RAM compartment and the screw on the right hand side. Remove the cover.

## Step 5

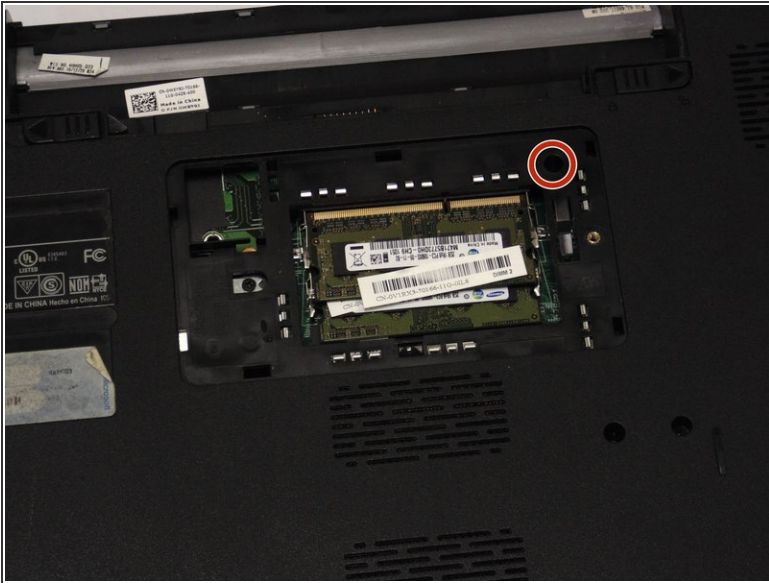

- Locate and remove the 2.5 mm x 5 mm screw on the upper right hand side of the compartment.



## Step 6



- Turn the device around and open it up.




## Step 7

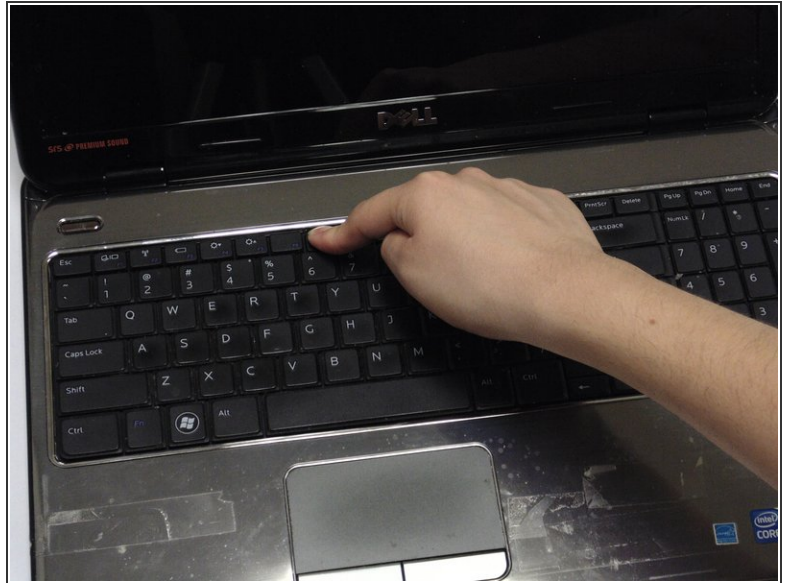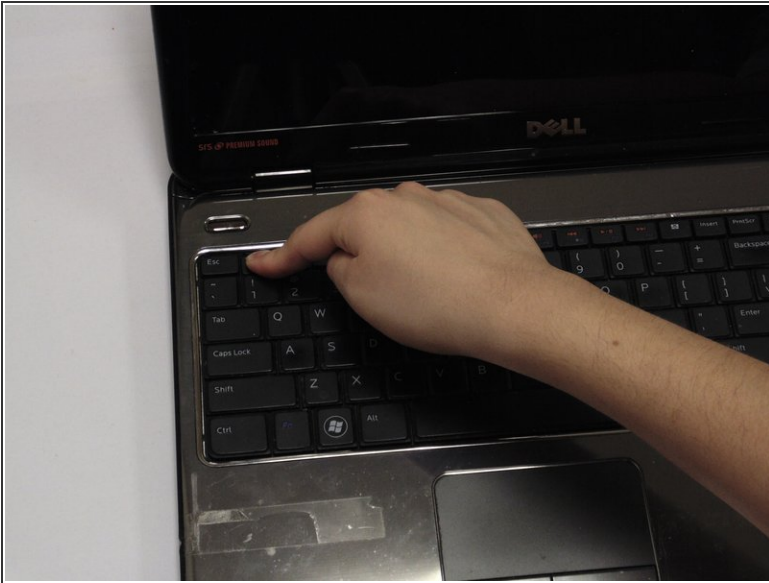



- Using your index finger, push down on the F1 and F7 keys.

## Step 8

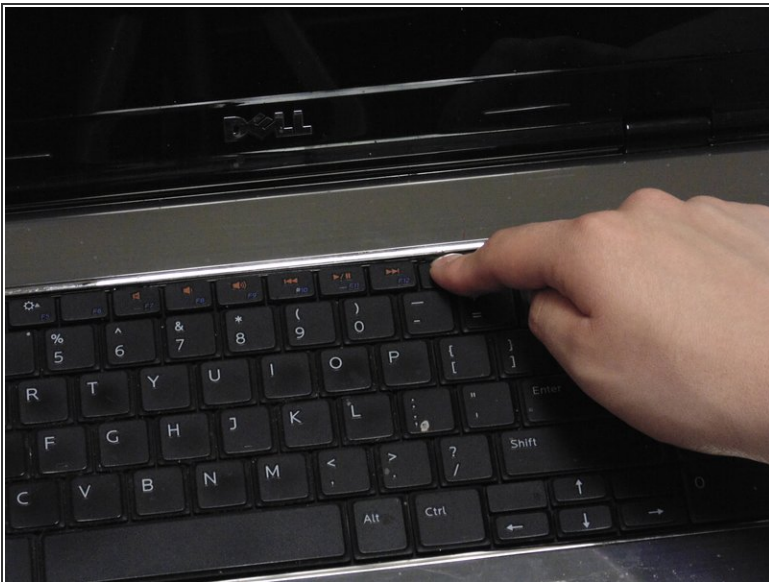


- Using your index finger, push down on the x icon and Home keys.

## Step 9

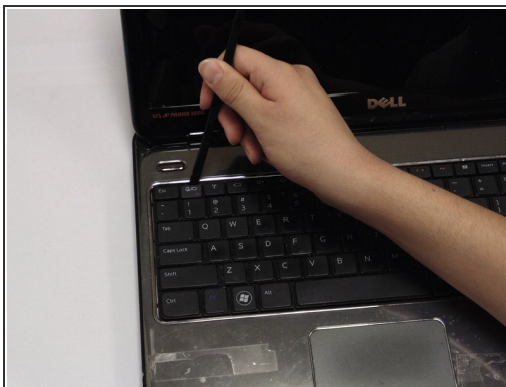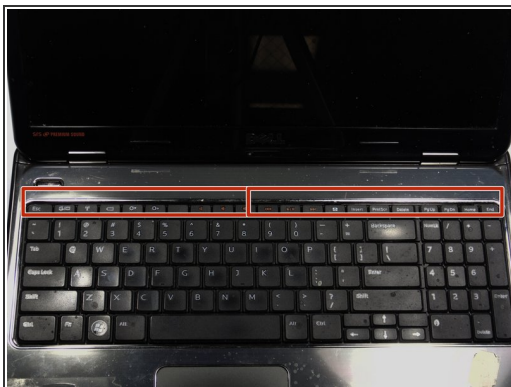

- Locate the keyboard lining (between the black and silver).
- Place your spudger between the keyboard lining behind the F1 and F7 keys and pull up.

## Step 10

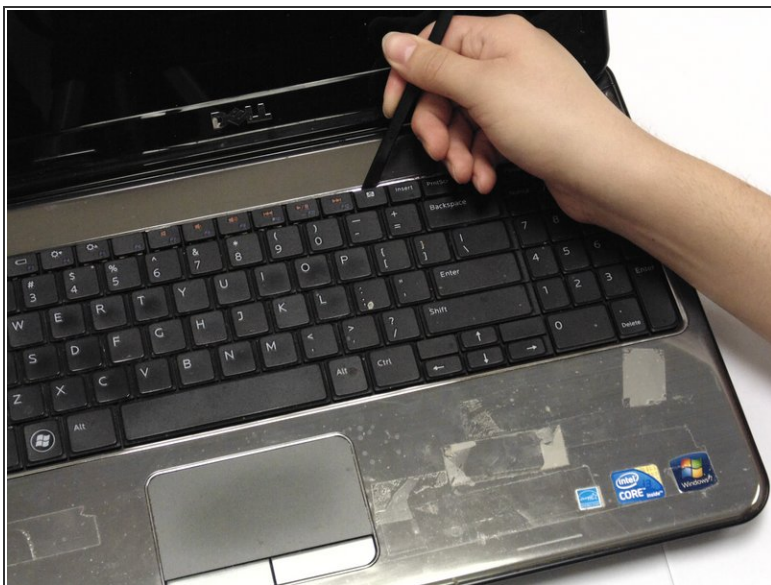

- Place your spudger between the keyboard lining behind the x icon and Home keys and pull up.





## Step 11



- Carefully pull and turn the keyboard over.


## Step 12

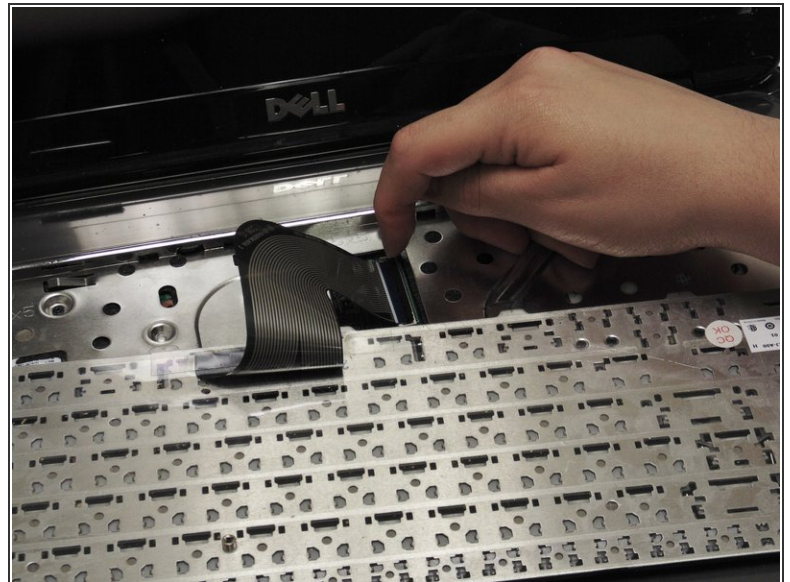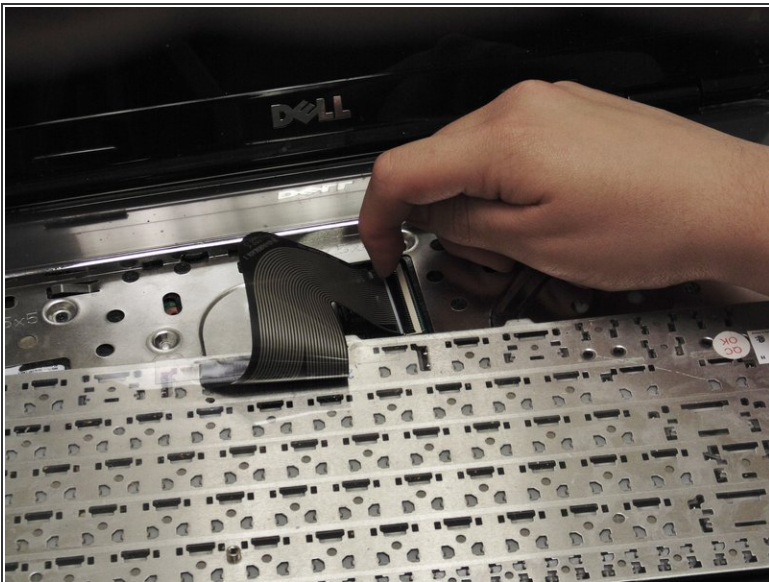

- Lift the black lever.



## Step 13

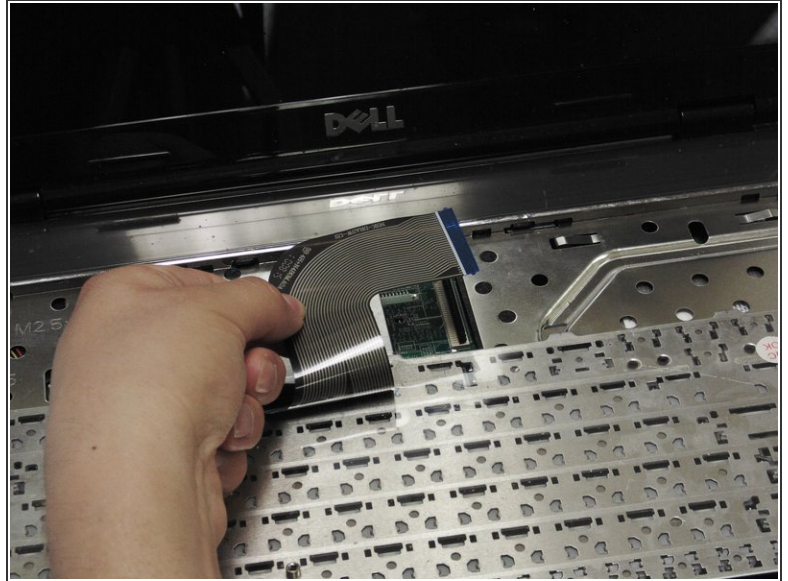

- Remove the keyboard cable

To reassemble your device, follow these instructions in reverse order.