


# Nikon D7000 Mirror Box & Viewfinder Replacement

Use this guide to replace the mirror box and...

Written By: Thomas Willson

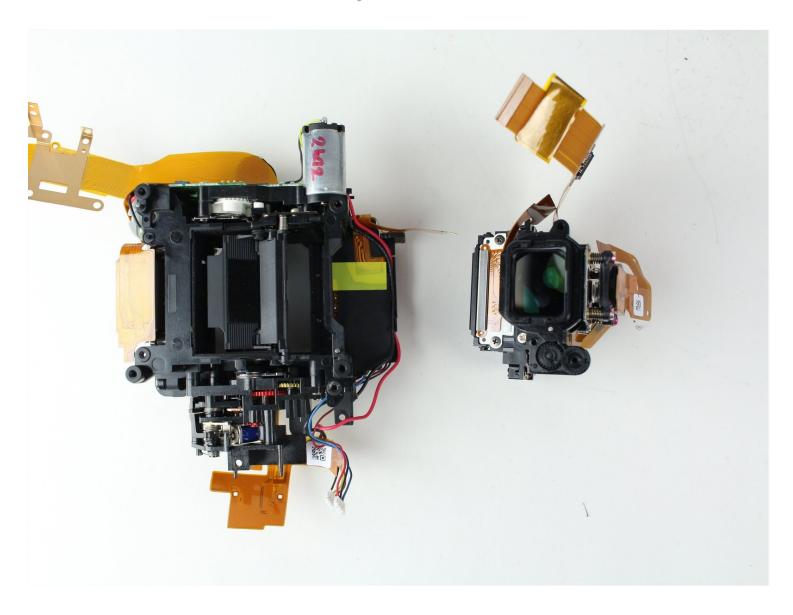

#### **INTRODUCTION**

Use this guide to replace the mirror box and viewfinder.

#### TOOLS:

Metal Spudger (1)
Phillips #0 Screwdriver (1)
Spudger (1)
Tweezers (1)
Soldering Iron (1)

#### Step 1 — Motherboard



- Remove the following 5 screws securing the bottom cover to the camera body:
  - Four 6 mm J000 screws.
  - One 8 mm J000 screw (under lens mount).



Remove three 6 mm J000 screws from under the battery cover.

# Step 3





Gently pull the bottom cover off of the camera body.



- Remove the following screws from the port area:
  - Two 3.5 mm J000 screws.
  - One 6 mm J000 screw (right above ports).

### Step 5



• Peel the rear rubber piece off with <u>tweezers</u>.



 Remove one 4.25 mm J000 screw from behind the rear rubber piece.

# Step 7



• Pull the eyepiece cover up to remove it.



- Remove two 6 mm J000 screws from behind the eyepiece cover.
- i On D7100 models, there is an additional screw holding the back plate on. This screw is located in the diopter (dial with + on it). This screw can be accessed by peeling up this sticker on the diopter.

#### Step 9



 Open the SD card cover by pushing slightly down with your thumb and sliding up.



• Remove four 6 mm J000 screws that secure the SD card cover.

# Step 11




Gently pull the SD card cover off.




- Remove the following screws that secure the back case:
  - One 6 mm J000 screw.
  - One 3 mm J000 screw.

### Step 13

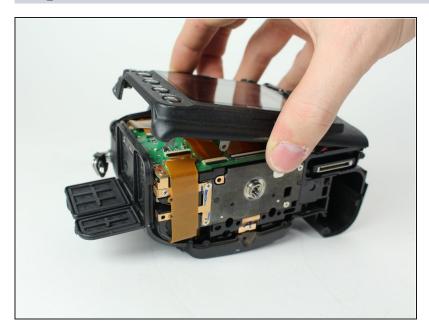

• Carefully lift the back case off.

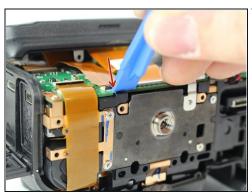






- Disconnect the following two ribbon cables from the motherboard.
- (i) See our <u>Cable Connector Guide</u> for help with ribbon cable connectors!

#### Step 15

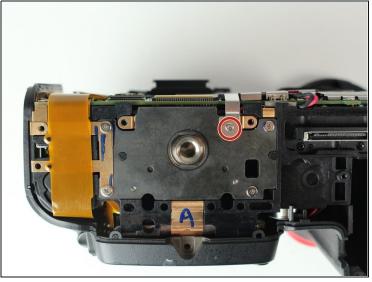




- Remove the following screws securing the left motherboard shield:
  - One 2 mm J000 screw (on the bottom).
  - One 3.5 mm J000 screw (on the back).

⚠ Be careful of the grounding clips on the motherboard.




 Gently pry and lift the left motherboard shield off.

### Step 17

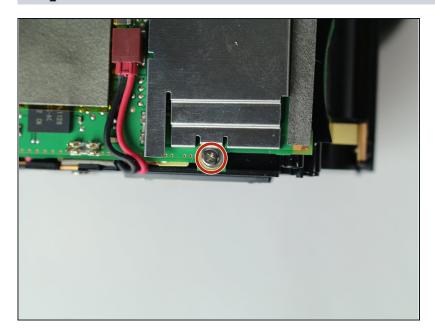

 Remove one 3.5 mm J000 screw securing the right motherboard shield.

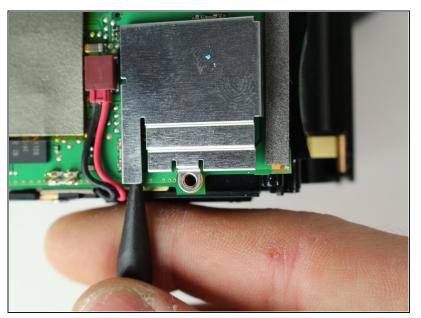

• Gently lift the right motherboard shield off with the tip of a spudger.


# Step 19







Disconnect remaining ribbon cables.

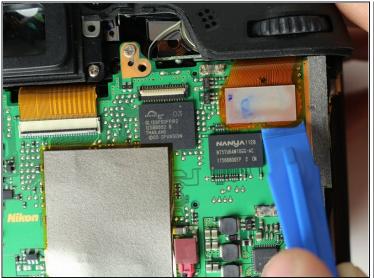



• Disconnect remaining ribbon cables.

### Step 21




• Carefully disconnect the red connector with tweezers.



 Remove four 3.5 mm J000 screws securing the motherboard.

### Step 23

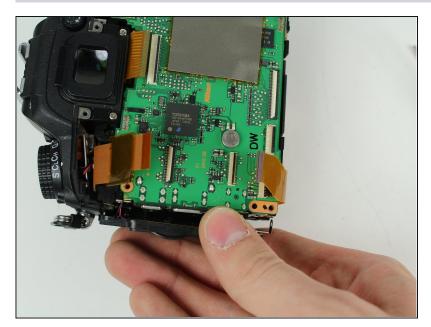


 Gently pull the port side cover away from the motherboard.




• Lift the motherboard off.

### Step 25 — Tripod Plate

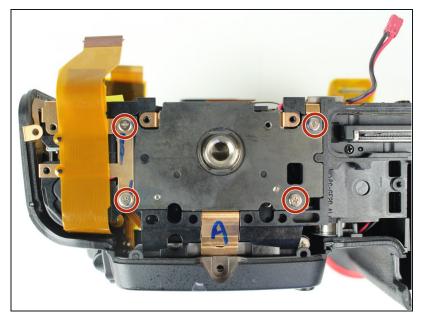



• Remove four 6 mm J000 screws securing the tripod plate.

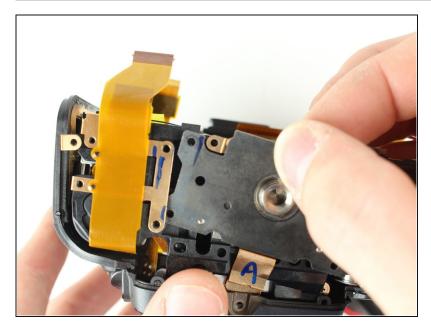

 Carefully lift the tripod plate from the backside of the camera and slide out the grounding clip from under the lens mount.

#### Step 27 — Image Sensor

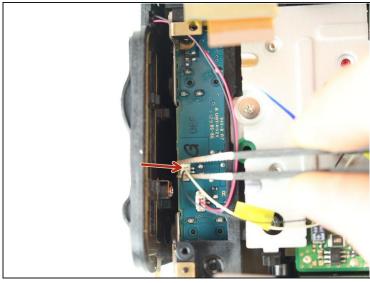

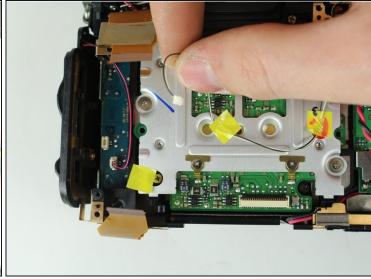


Disconnect black and white speaker cable.



 Remove three 6 mm J000 screws securing the image sensor.

### Step 29

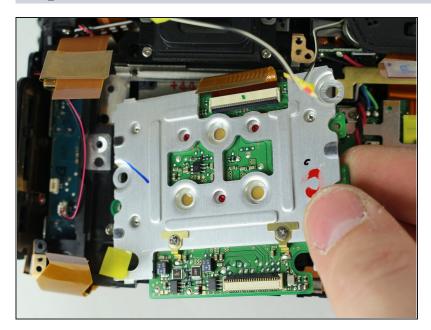

• Carefully lift the image sensor plate out of the camera.

#### Step 30 — Shutter Assembly



- Manually pop up flash by inserting a screw driver to the left of the viewfinder and pressing on the metal lever.
- ⚠ It won't take much pressure.

  Press carefully and the flash
  will pop up when you find the
  right spot.

#### Step 31



• Remove two 5 mm J000 screws from under the flash.



 Remove two 3 mm J000 screws securing the front cover.

# Step 33






Remove the front cover.



• Carefully remove the port cover.

# Step 35

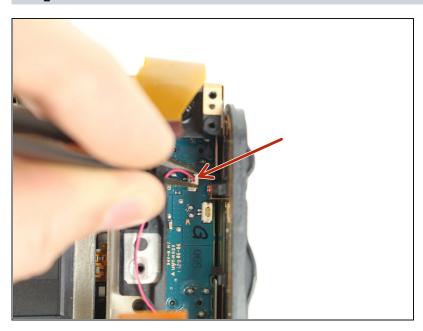

• Deroute the microphone cable.




• Remove one 4 mm J000 screw from the front.

### Step 37




• Remove one 8.5 mm J000 screw from the battery compartment.

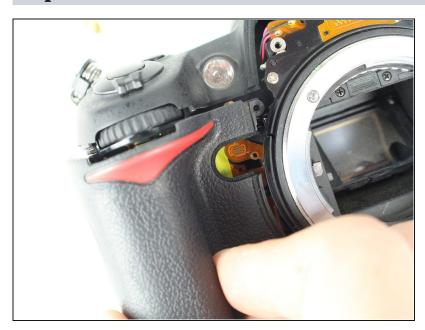

• Remove the grip carefully.

### Step 39

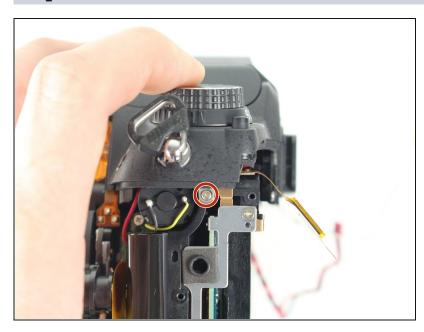

 Remove one 4 mm J000 screw securing the top case (under right strap hook).




 Remove one 4 mm J000 screw securing the top case (under left strap hook).

### Step 41




 Remove the sticker covering the diopter adjust screw.

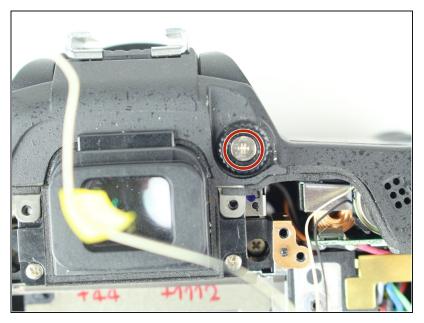


- Remove one 8.0 mm J000 screw.
- Remove the Diopeter Adjust.

# Step 43

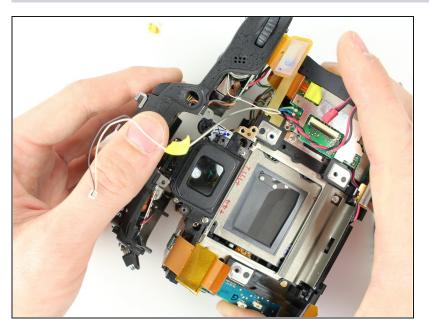


• Remove the top case.

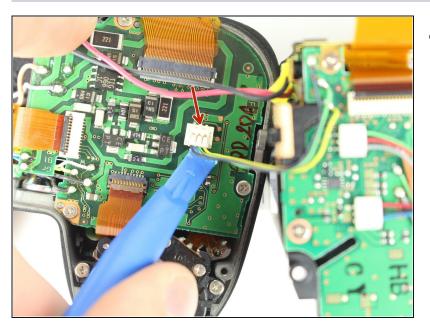


Remove the Black, Yellow,
 Green cable from the top case board.

### Step 45

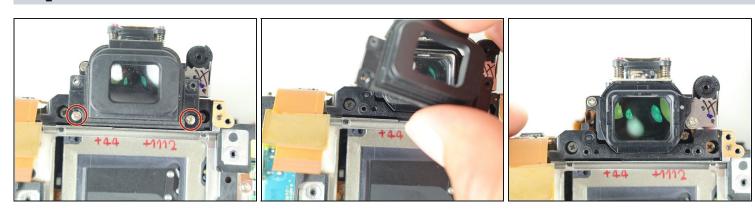

- Remove two 6.5 mm J000 screws securing the viewfinder.
- Remove the viewfinder cover.

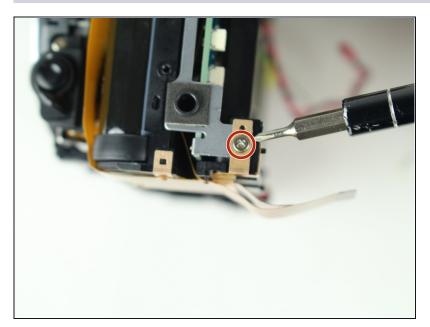


 Remove one 3 mm J000 screw from the bottom left side of the camera.

### Step 47




• Remove two 6 mm J000 screws from the left of the shutter.

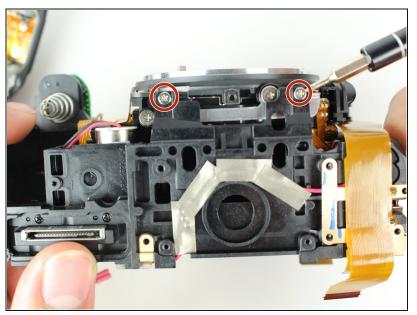


• Remove two 6.5 mm J000 screws from beneath the lens mount.

### Step 49

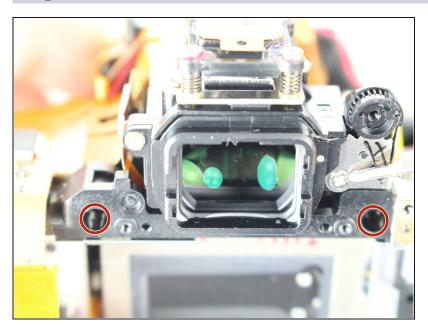


 Remove two screws from just below and to the sides of the viewfinder.

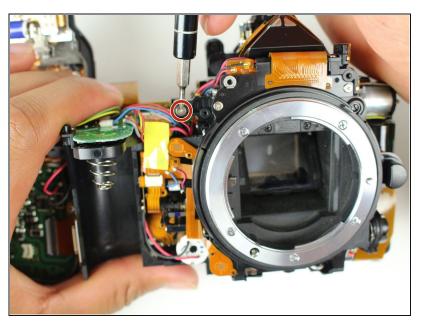



 Remove one 5 mm J000 screw from the top right of the camera.

### Step 51

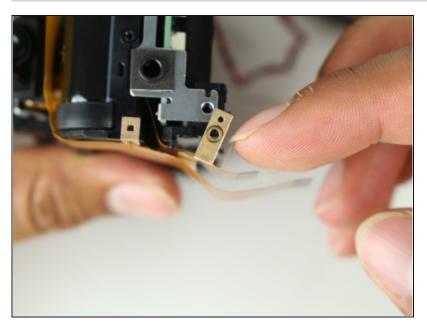


 Carefully peel back ribbon cable on the bottom left of camera.

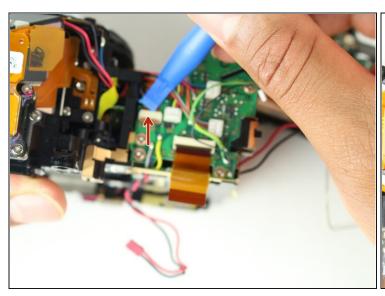

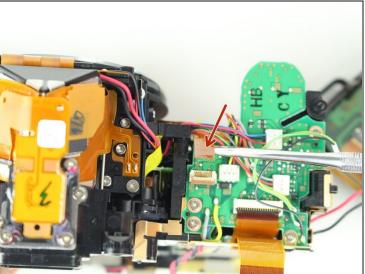


• Remove the left front ribbon cable from top right of circuit board.

# Step 53

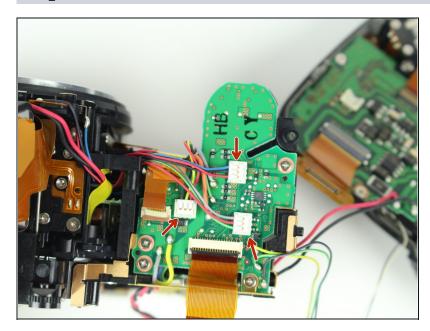


• Remove all three wire connectors.

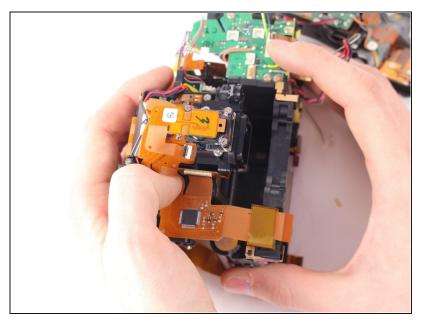


• Separate the shutter assembly from the camera body.

#### Step 55 — Mirror Box & Viewfinder

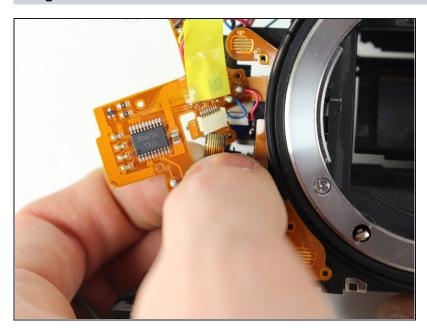


 Pull out ribbon cable from circuit asembly near front left of device.

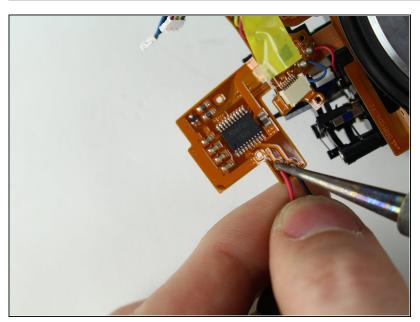


- Desolder red & black power leads.
- (i) Check out our soldering guide for help!

### Step 57

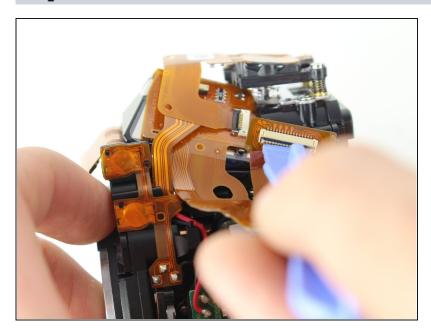


 Disconnect ribbon cable at the top right of camera.

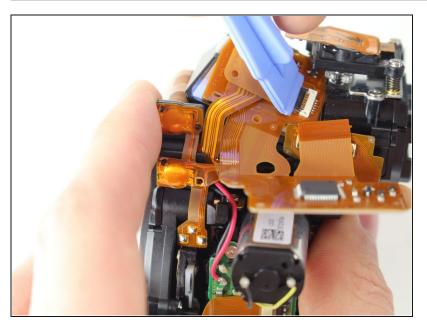


 Disconnect ribbon cable at top right of camera.

# Step 59

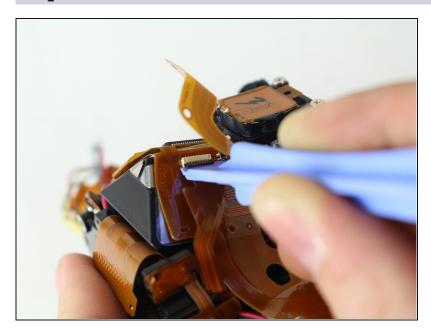


• Disconnected ribbon cable at rear right of viewfinder.

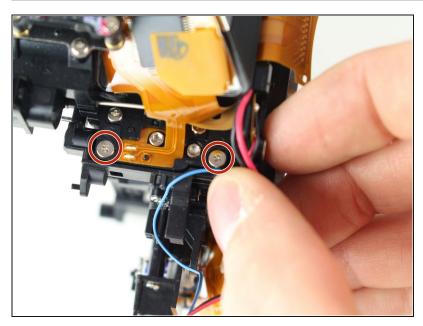


• Remove the two 5.5mm J000 screws

# Step 61

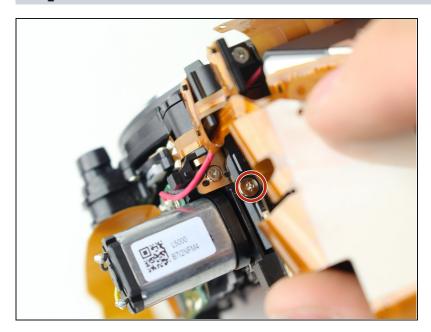

• Remove the 5.5 mm J000 screw.

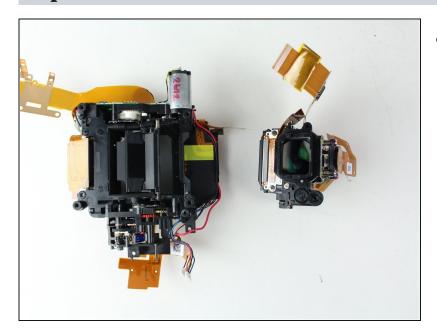

• Remove the viewfinder from the mirror box assembly.

To reassemble your device, follow these instructions in reverse order.