



撰写者: Matthew Newsom



介绍

你的Nintendo DS Lite出现了联网问题？更换掉Wi-Fi模块以重新接入网络。



工具:

- Phillips #00 Screwdriver (1)
- Spudger (1)
- Tri-wing Screwdriver (1)

The image shows the back of a black Nintendo DS Lite console with the battery cover removed. The internal battery compartment is visible, featuring a white label with the following text:

SLIOT-1
PUSH CARD TO EJECT

Nintendo NINTENDO DS lite

- FOR CONSUMER SERVICE: WWW.NINTENDO.COM OR CALL 1-800-255-3700.
MODEL NO. UGJ-001 © 2006 Nintendo Patents issued and pending, see
booklet. BATTERY: 1.2V x 3.7V BATTERY: 1.5V (UGJ-001) 1.5V ADAPTER
INPUT: 5.2V ~ 450mA.

Combine FCC ID: E1W42W1W004 IC: 4350A-DENI0006

This device complies with part 15 of the FCC Rules and with Industry
Canada RSS-210. Operation is subject to the following two conditions: (1)
this device may not cause harmful interference, and (2) this device must
accept any interference received, including interference that may cause
undesired operation.

RSA SECURED MADE IN CHINA CAJSG-USA-1

UG118050324

SLOT-2

A red circle highlights a small circular component, likely a microphone or sensor, located near the bottom right of the battery compartment.



- ## 步骤 2



- 将一根撬棒插入电池边缘与背盖之间的缝隙里，并往上撬以移开电池。
- 将电池从DS Lite上取下来。

步骤 3 — 背盖



- 用一根撬棒的尖端撬掉DS Lite两个橡胶垫。

步骤 4



- 卸下DS Lite背盖上以下几颗螺丝：
 - 2颗金黄色4.3毫米十字形螺丝
 - 1颗黑色3.9毫米Y字形螺丝
 - 1颗银色3.3毫米十字形螺丝
 - 3颗银色5.5毫米Y字形螺丝

步骤 5



- 将撬棒的边缘插入DS Lite顶部右端前盖与背盖之间的缝隙中。
- 小心翼翼的将撬棒沿着DS Lite的右边缘移动，制造出一条间隙。
- 持续沿着DS Lite的下端移动撬棒，直到背盖大体上与前盖分离。


步骤 6



- 将背盖从DS Lite本体上掀开来。

 拉拽时要小心。有些组件是由粘合剂密封着的，拉拽力度过猛还会损坏电源开关。

步骤 7 — 扳机键

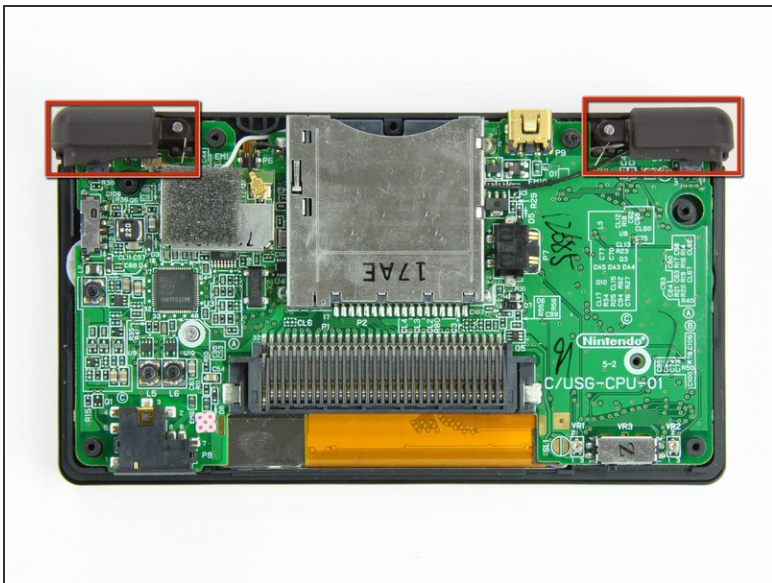

- 将两个扳机键从DS Lite中提起来。
- ✦ 扳机键被小小的金属栓子与弹簧粗略地固定着。别弄丢这些小零件了。
- ❗ 为了正确地重新组装设备，请参考图二扳机键正确的组装方式。

步骤 8 — Wi-Fi模块



- 用一根撬棒的扁端将Wi-Fi天线连接器垂直于Wi-Fi模块往上撬离其接口。

步骤 9



- 使用撬棒的扁端将Wi-Fi模块的连接器垂直于主板向上撬离其接口。

步骤 10



- 使用撬棒的扁端将Wi-Fi模块的右端从主板上分离出来。
- ① Wi-Fi模块和主板间有一层粘合剂固定着。
- 将Wi-Fi模块从DS Lite中分离出来。

按照指南的倒序重新组装好你的设备。