


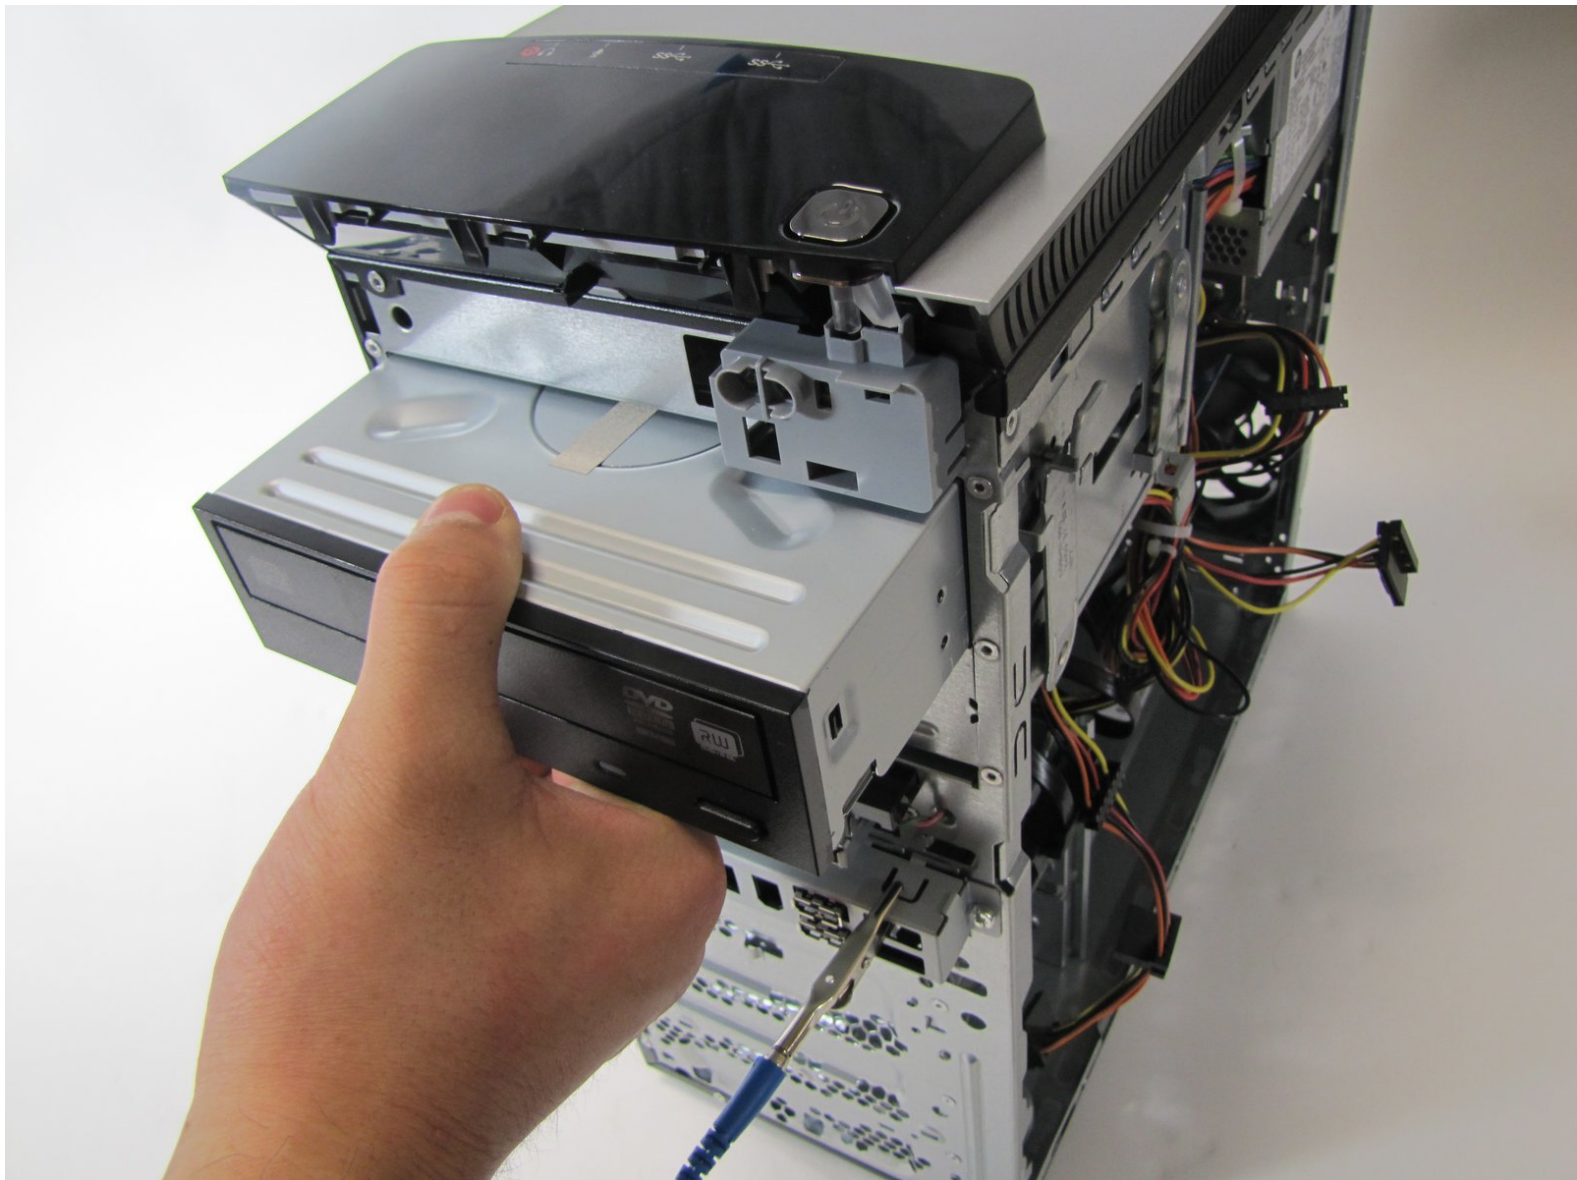

HP Envy 700-030qe CD Drive Replacement

This guide will take you through a step-by-step process to help you replace your faulty CD Drive.

Written By: Yoav Rosenberg



INTRODUCTION


In order to replace a broken CD Drive, this guide will show you how to do just that!



TOOLS:


- [Anti-Static Wrist Strap](#) (1)
 - [T15 Torx Screwdriver](#) (1)
-

Step 1 — CD Drive

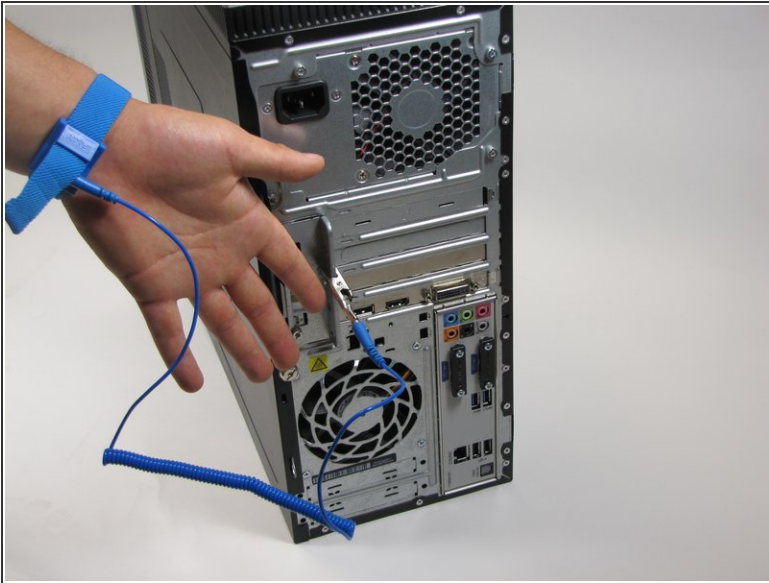


- Make sure that you are wearing your anti-static wristband. This will prevent damaging any internal parts with any built up static electricity.
- Unscrew the 10.5mm screw on the left of the desktop using your hand.
- ⓘ If it is too tight you may use a torx-head screwdriver or a flat-head screwdriver.

Step 2

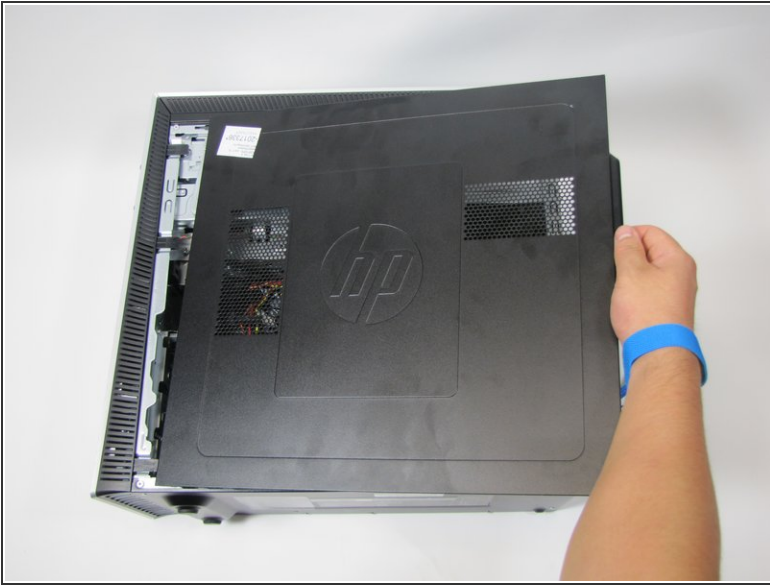


- Remove the side panel by sliding it towards the back of the desktop and pulling up on it as shown.

Step 3

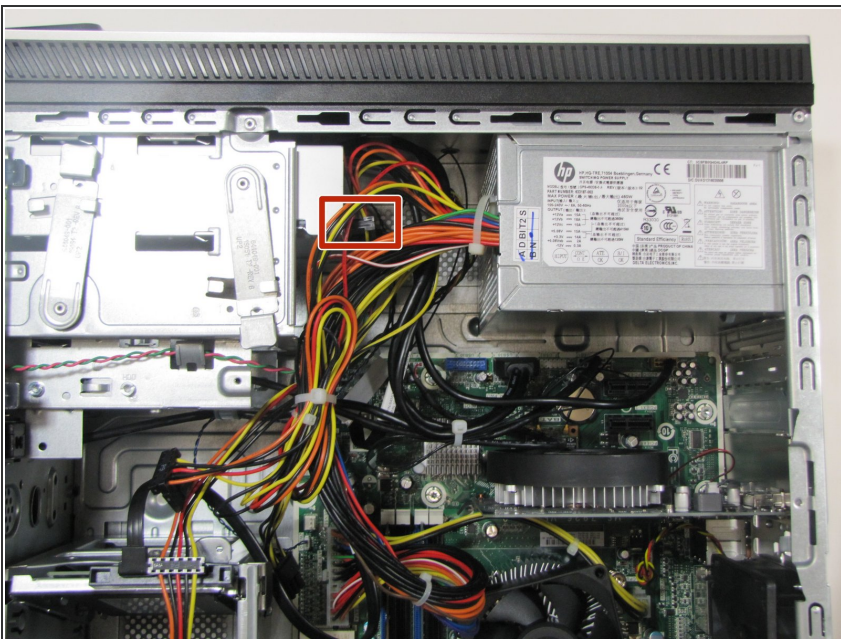


- For the next step, remove the CD drive power cable.

Step 4

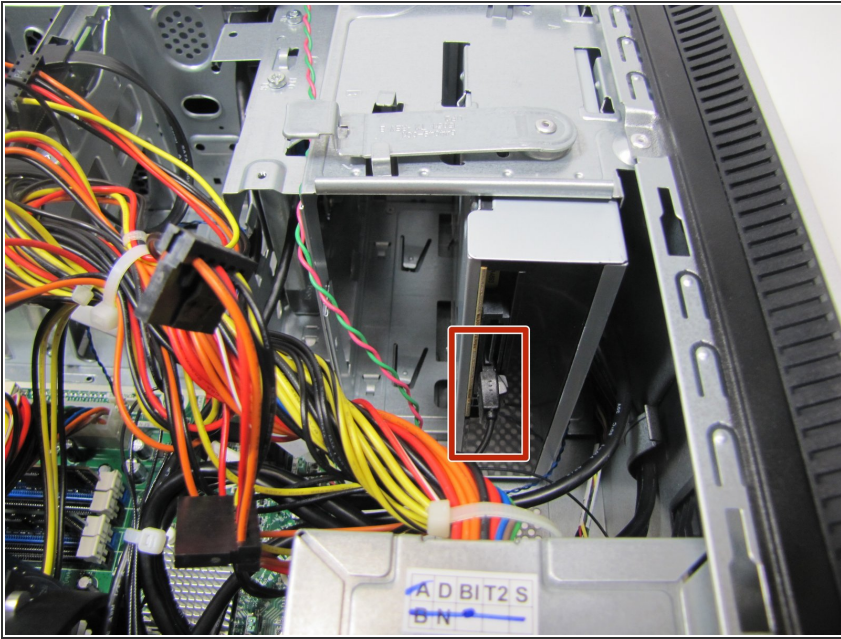



- Reorient the device with the front pointing away from you.
- Next, remove the SATA interface cable. It is directly next to the power cable on the CD drive.

Step 5

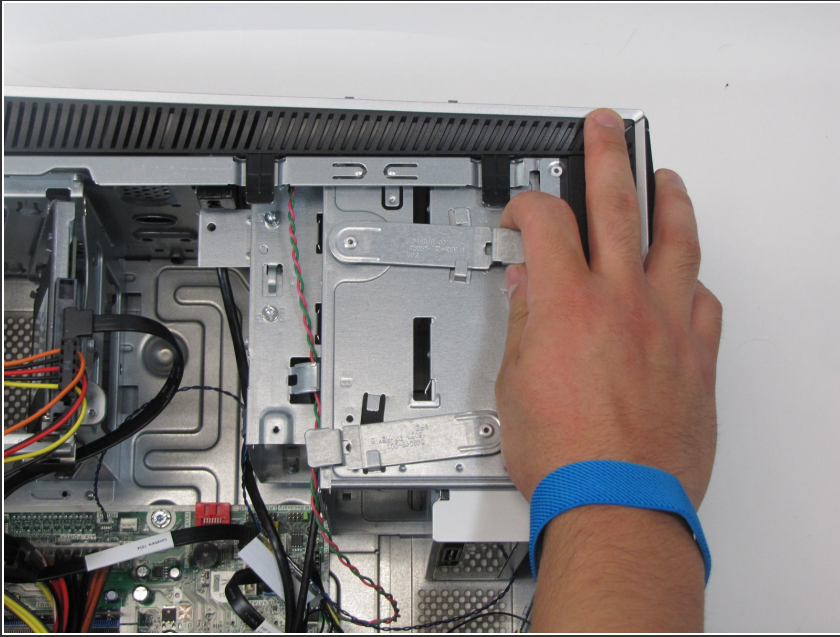


- Now pull up and swing the mounting lever in. The lever closest to the front mounts the top drive slot, and the lever farther away mounts the bottom one.

Step 6

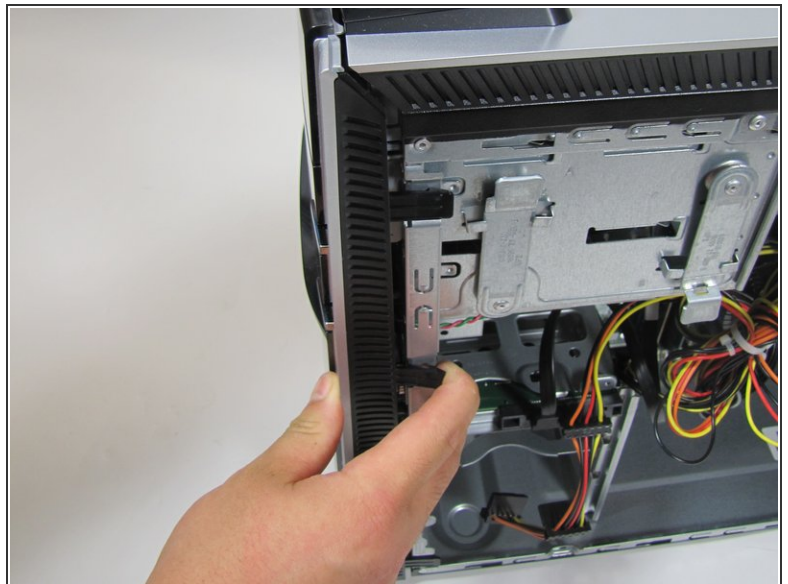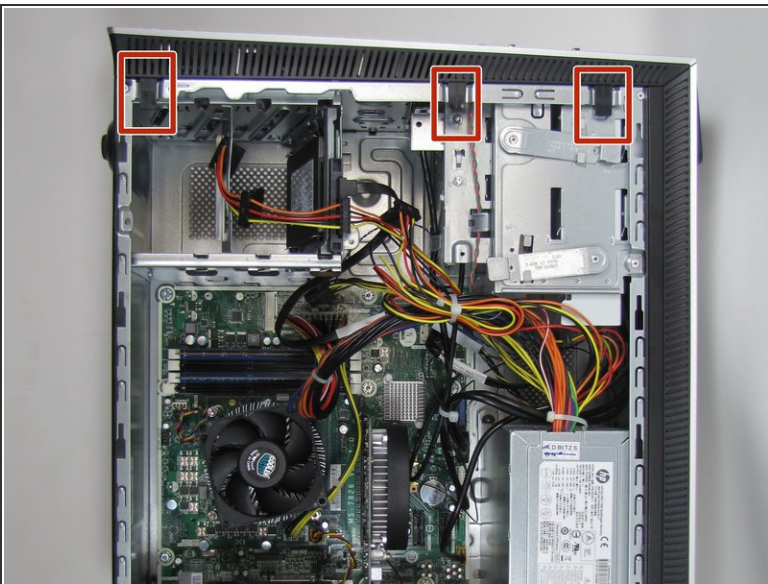

- Now stand your desktop up and remove the 3 clips on the right side of the front panel.
- Then pull the front panel off, pulling from the side that the clips are on.

Step 7

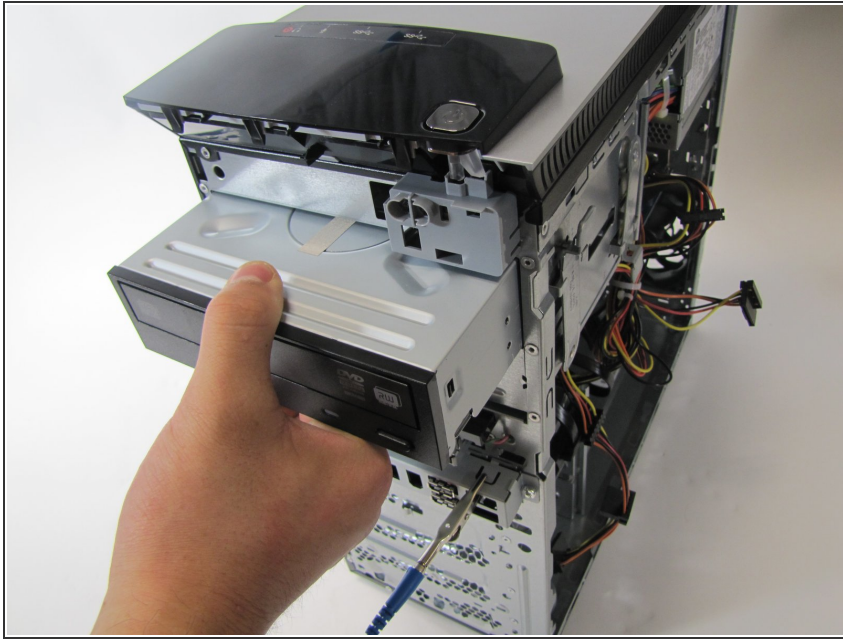

- Now you can pull the CD drive straight out of the casing!

To reassemble your device, follow these instructions in reverse order.