



Philips Norelco MultiGroom 3100 Power Button Replacement

Replace the power button.

Written By: ahaharevolution



INTRODUCTION

This guide will teach you how to replace the power button if it becomes damaged or dysfunctional.

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Power Button



- Remove the comb from the top of the trimmer.

Step 2



- Grip the attachment and twist it counterclockwise until you hear a click.
- Pull the attachment up to remove it from the trimmer.

Step 3



- Hold the trimmer upright so it is facing you.
- Insert the plastic opening tool in the gap at the top of the power button.

Step 4



- Apply pressure to pry off the power button.

To reassemble your device, follow these instructions in reverse order.