



# HP Photosmart D110a LCD Screen Replacement

Considering the steps in this guide were...

Written By: Naveen Krishan



# INTRODUCTION

Considering the steps in this guide were completed by 2 people, it is recommended to attempt this guide with 2 or more people.

## Required Tools

- T-9 Screwdriver
- Needle-Nose Pliers



## TOOLS:

Large Needle Nose Pliers (1)

TR9 Torx Security Screwdriver (1)

---

## Step 1 — Printer Hood Assembly




- First, begin by removing the printer's hood.
- Open the printer's mouth by simply pulling down on it; there are 2 mouth pieces that need to be pulled down.
- Adjust the flap covering the scanner upward, as shown.

## Step 2



- Remove the flap for the scanner. The flap is attached with two clips that can be dislodged by pulling lightly away from the printer.

## Step 3

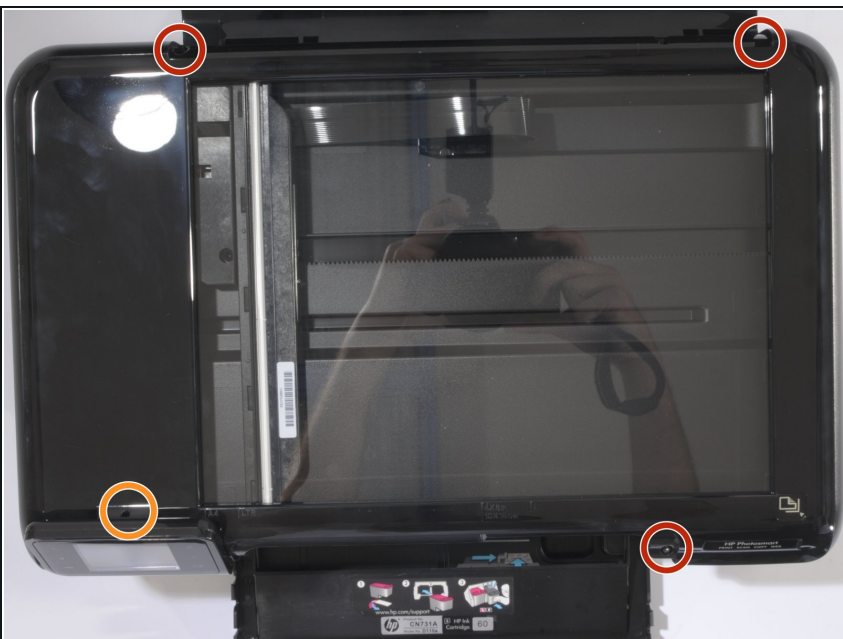


- Locate the three screws on top of the printer.
- The orange circle shows a fourth screw located behind the power panel. Directions to remove this screw are in a later step.

## Step 4




- Remove the three screws from the top of the printer with a T-9 screwdriver as shown.

## Step 5

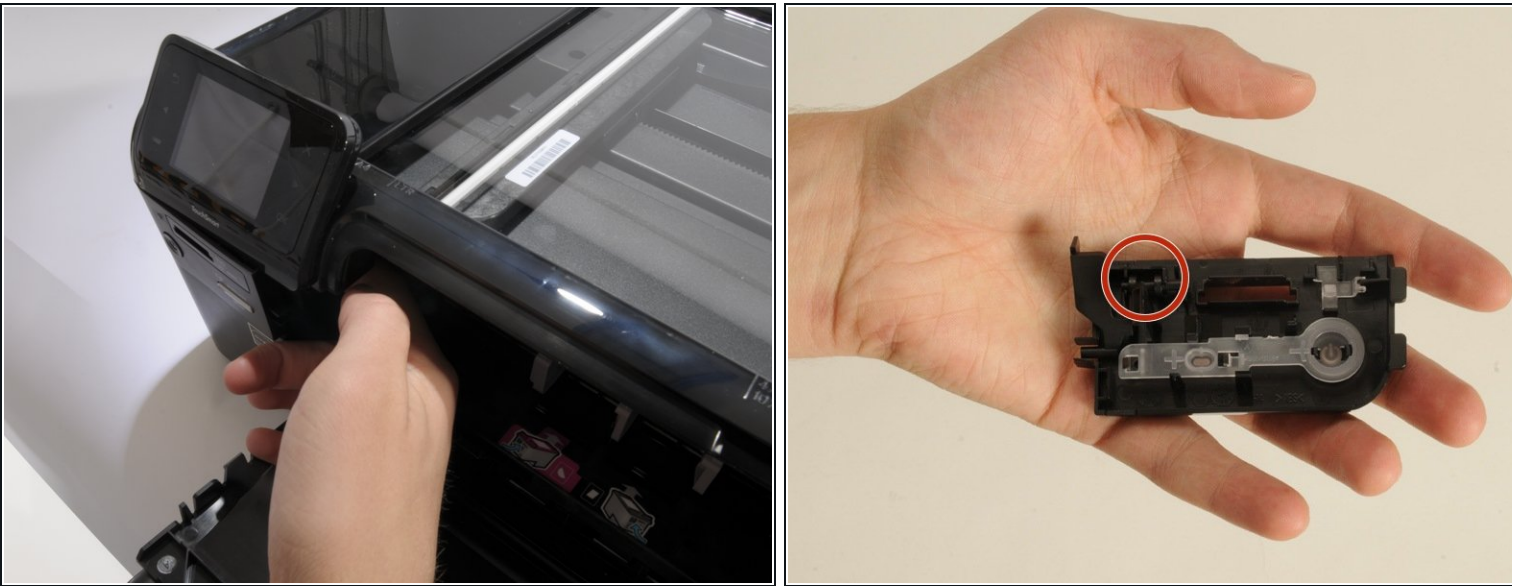

- To access and remove the fourth and final screw attaching the hood, the panel for the power button must be removed as follows:
- Reach into the mouth of the printer and press on the small clip behind the power button. This allows the panel of the power button to be removed.
- ⓘ A picture of the power button panel removed is provided to show the location of the clip that needs to be pressed.
- After pressing the clip, pull out the power button panel by pulling from right to left.

## Step 6

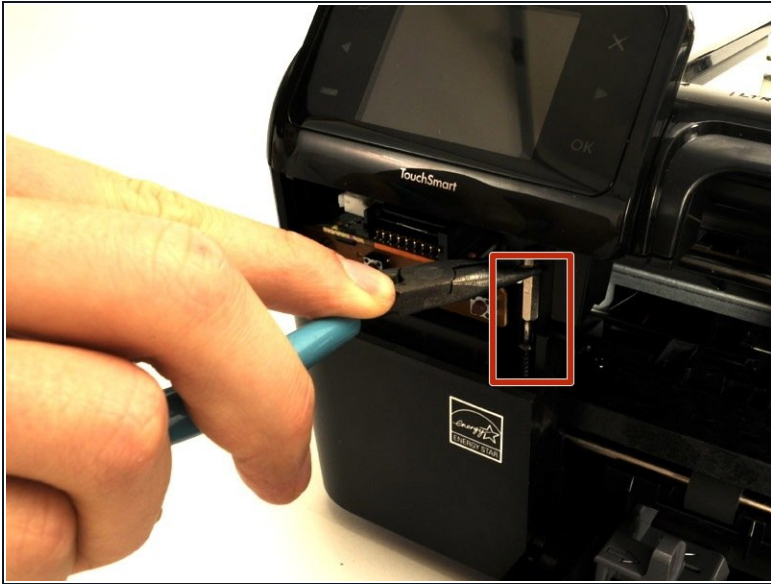


- Remove the exposed screw that was covered by the power button panel.

**⚠ Do not try and torque the screw from an angle.** This will ruin the screw's head, and make it even more difficult to remove the screw. Only remove it as already described.

**i** This screw is placed awkwardly. We found holding a T9 bit in a pair of needle nose pliers gave us enough leverage to pull it up.




## Step 7

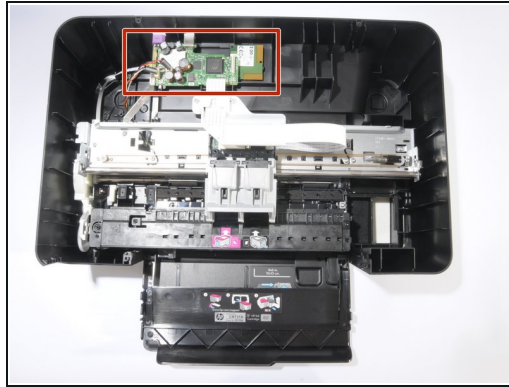



- This step is easier with two people. Carefully have one person lift the hood of the printer 2-3 inches above where it was resting.
- Remove the ribbon cables and wires attaching the motherboard (the only green PCB board) to the hood by gently pulling upward on them.
- When all three cables are removed, lift the hood away from the printer and set it aside.

## Step 8 — Disassembling HP Photosmart D110a Printer Hood

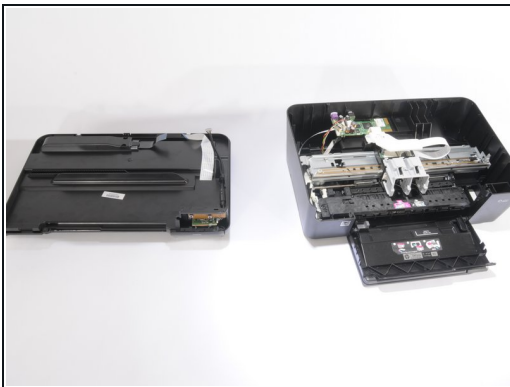

- After being separated from the printer, the hood is ready to be disassembled.
- Remove the only screw on the printer hood's underside, as shown. Use a T-9 screwdriver.

## Step 9

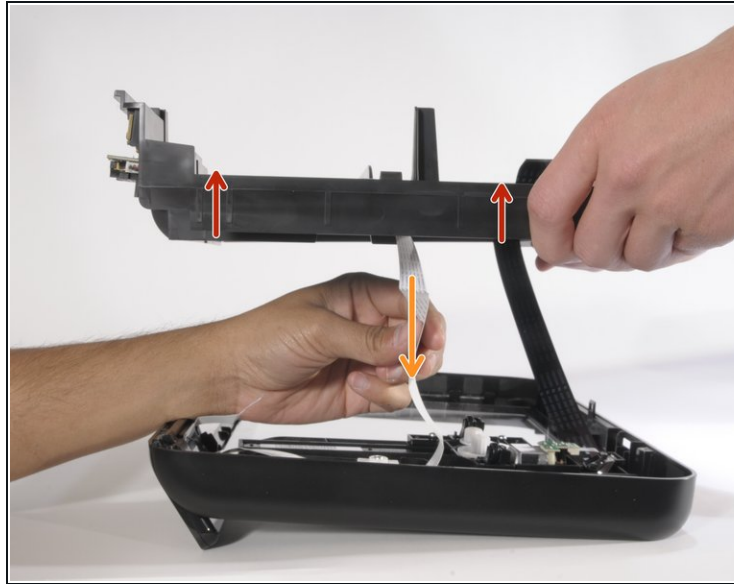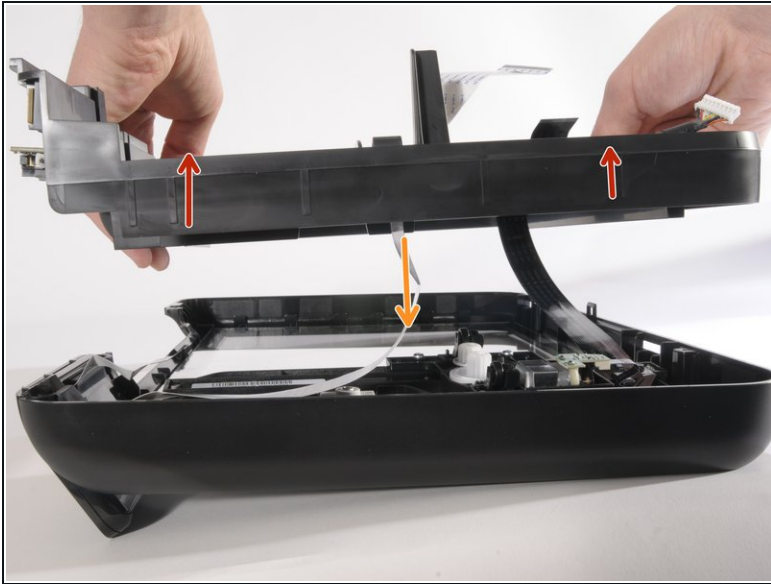

- With the screw removed, separate the two pieces of the hood by lifting it vertically.

**⚠ Only lift the the top piece enough so that there is no tension applied to the ribbon cables shown.**

- Carefully pull down the white ribbon cable through the top piece of the hood.

## Step 10




**⚠** Carefully separate the two hood pieces connected by the black ribbon.

- Set the piece of the hood down such that no stress is applied to the scanner as it is attached by ribbon cable.
- i** The printer hood should now be in 2 pieces.



## Step 11 — LCD Screen

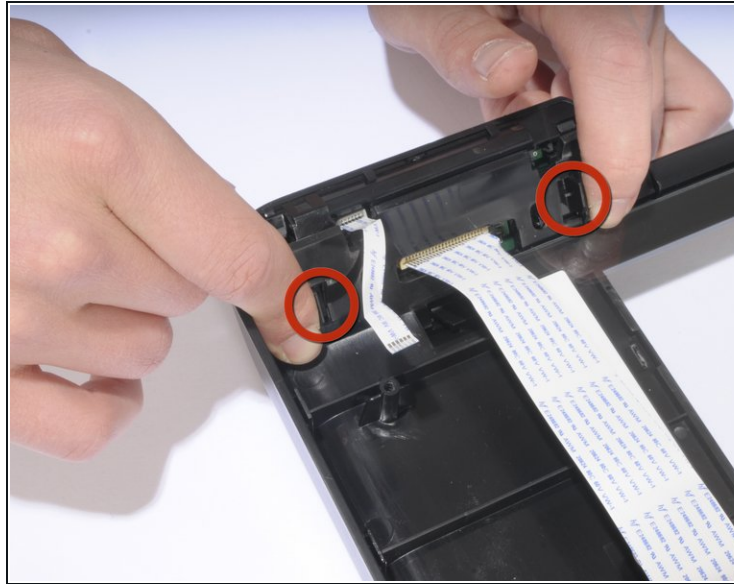

- ① The LCD screen is attached to the piece of the hood with the glass shield.
- ⚠ Two ribbon wires are connected to the LCD module. The smaller of the two cannot be removed. **Do not remove the small ribbon wire.**
- The LCD is attached to the hood by two slots as shown in red. Push the sloped slides of the slots inward to release the slots from the hood.

## Step 12



- Push the LCD module down and pull it away from the hood. The LCD should slide out of its holders.
- The LCD module should now be separated from the hood. The large ribbon wire from the LCD can be detached if needed.

---

To reassemble your device, follow these instructions in reverse order.