



Samsung NX30 Lens Replacement

Replace a faulty or dead lens.

Written By: Julia Kilcup



INTRODUCTION

Sometimes the lens on the camera can get scratched, but its not a hard thing to replace. This guide will help you replace it in a matter of minutes.

Step 1 — Lens



- Facing the front of the camera, located on the right side next to the lens is the lens release button.
- Press and hold the lens release button.

Step 2



- While holding the lens release button, grasp the lens from the base.
- ⓘ The base is where the lens connects to the camera.
- Twist the lens counter-clockwise until it can't be turned any more.
- Then turn and pull the lens off of the camera.

To reassemble your device, follow these instructions in reverse order.